

コインスイッチ No.2セット

1. COIN SWITCH NO.1 SETTINGS

SW	1	2	3	4	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				FREEPLAY	

FREEPLAY : You can play games without coins.

2. COIN SWITCH NO.2 SETTINGS

SW	5	6	7	8	COIN	PLAY
○	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				VOID	

1. プレイヤー数

SW	1	プレイヤー数
○	OFF	1
	ON	2

2. ゲームの難度

SW	6	7	難度
○	OFF	OFF	易しい
	ON		普通
	OFF	ON	難しい
	ON		大変難しい

3. アモ中の音

SW	8	音
○	OFF	無
	ON	有

SW2,3,4,5は未使用

コインスイッチ No.3セット

1. ビデオスクリーン反転 (モニター)

SW	1	スクリーン
○	OFF	正常
	ON	反転

2. モード切り換え

SW	3	モード
○	OFF	ゲームモード
	ON	テストモード

SW2,4は未使用

○は標準設定

DIP SWITCH No.2 SETTINGS

1. NUMBER OF PLAYER

SW	1	NUMBER OF PLAYER
○	OFF	1
	ON	2

2. DIFFICULTY OF THE GAME

SW	6	7	DIFFICULTY
○	OFF	OFF	EASY
	ON		NORMAL
	OFF	ON	DIFFICULTY
	ON		VERY DIFFICULTY

3. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
○	OFF	OFF
	ON	ON

SW 2,3,4,5 are not used.

DIP SWITCH No.3 SETTINGS

1. VIDEO SCREEN FLIP

SW	1	SCREEN
○	OFF	NORMAL
	ON	UPSIDE DOWN

2. CHANGE OF MODE

SW	3	MODE
○	OFF	GAME
	ON	TEST

SW2,4 are not used.

○ shows recommended settings.