
COLUMNS (834-7401-~)

COIN/CREDIT OPTION SWITCH SETTING

DIP	SW	#

OPTI	ON	1	2	3	4	5	6	7	8
1 COIN 1 COIN 1 COIN 1 COIN 1 COIN 1 COIN 2 COINS 3 COINS 4 COINS 2 COINS	1 CREDIT 2 CREDITS 3 CREDITS 4 CREDITS 5 CREDITS 6 CREDIT 1 CREDIT 1 CREDIT 1 CREDIT 3 CREDITS	OFF OFF OFF OFF OFF OFF OFF	OFF X F F F F F F F F F F F F F F F F F	OFF OFF OFF OFF OFF OFF OFF	OCC	OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF	OFF OFF OFF OFF OFF OFF OFF	OFF OFF OFF ON ON OFF OFF	OFF OFF OFF OFF OFF OFF ON
2 COINS 4 COINS 5 COINS 6 COINS	1 CREDIT 2 CREDITS 3 CREDITS 4 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
2 COINS 4 COINS	1 CREDIT 3 CREDITS	ON	ON	OFF	ON	ON	ON	OFF	ON
1 COIN 2 COINS 3 COINS 4 COINS 5 COINS	1 CREDIT 2 CREDITS 3 CREDITS 4 CREDITS 6 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
1 COIN 2 COINS 3 COINS 4 COINS	1 CREDIT 2 CREDITS 3 CREDITS 5 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
1 COIN 2 COINS	1 CREDIT 3 CREDITS	OFF	ON	ON	ON	OFF	ON	ON	ON
FREE	PLAY	ON	ON	ON	ON	ON	ON	ON	ON
		COIN SWITCH #1 COIN SWITCH #			#2				

C BOARD

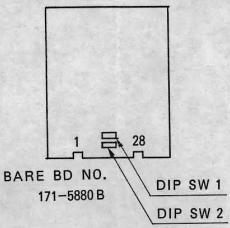

MONITOR (∃⊐) HORIZONTAL

OPTION SWITCH SETTING

DIP SW #2

OPTION		1	2	3	4	5	6	7	8
NOT USED		OFF							
ADVERTISE	OFF		OFF						
SOUND	ON		ON		40-				100-5
NOT USED				OFF					- 101/0
NOT USED					OFF	10			
	NORMAL					OFF	OFF		
GAME HARD DIFFICULTY EASY EASIEST	HARD					ON	OFF		
	EASY					OFF	ON	. 37	
				In SE	ON	ON			
NOT USED								OFF	
NOT USED									OFF


*** GAME DIFFICULTY**

JEWELS (宝石) を表の数だけ消すごとに JEWELS の落下速度の LEVEL が1つ上 がります。

Each time the following number of jewels disappear, their dropping speed increases by one level (on-screen).

NORMAL	3 5
HARD	2 5
EASY	4 0
EASIEST	5 0

PIN ASSIGNMENT

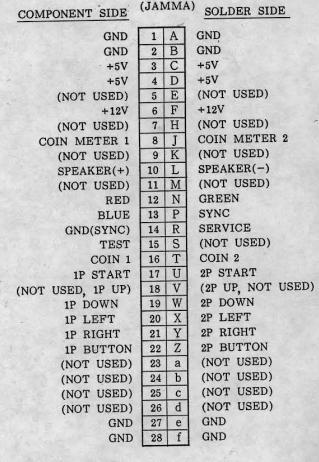

56P P: 3.96mm

