

エキサイティング サッカー

EXCITING


S**CCER** T.M.

INSTRUCTION MANUAL

1. OPERATIONS

- 8 Direction Control Lever To move players.
- Red Button PASS
- Blue Button SHOOT

2. CONNECTOR

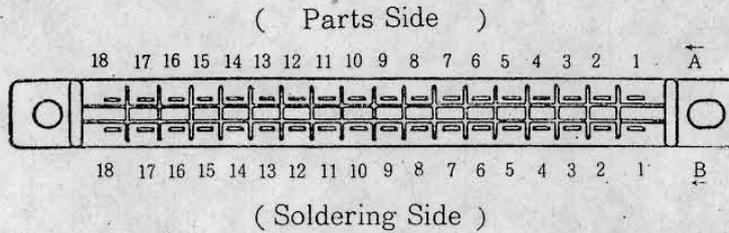

Parts Side		Soldering Side	
1 A	GND	1 B	GND
2 A	GND	2 B	GND
3 A		3 B	
4 A	SOUND OUT	4 B	
5 A	+12V	5 B	+12V
6 A	2 P DOWN	6 B	2 P UP
7 A	2 P RIGHT	7 B	2 P LEFT
8 A	1 P RIGHT	8 B	1 P LEFT
9 A	+5V	9 B	+5V
10 A	2 P SHOOT	10 B	1 P UP
11 A	2 P PASS	11 B	1 P PASS
12 A	2 P SELECT	12 B	1 P SHOOT
13 A	1 P SELECT	13 B	COIN 1
14 A		14 B	1 P DOWN
15 A		15 B	RED
16 A	BLUE	16 B	
17 A	GREEN	17 B	
18 A	SYNC	18 B	COIN 2

NOTE: 3B & 4B Terminals are GND. If the sound does not come out,
connect with GND (1A,1B,2A,2B)

3. POWER SUPPLY CAPACITY


+ 5 V	± 5 %	4.0 A
+ 12 V	± 10 %	1.0 A

4. MONITOR


- | | |
|------------------------|--------------------|
| (1) Color Signal | R · G · B Separate |
| | 0 ~ + 5 V |
| | Linear Amp. System |
| (2) Synchronous Signal | Composite |
| | 0 0 ~ 1 V |
| | 1 + 3 V ~ + 5 V |

5. P. C. BOARD

- | | |
|------------------|--------------------------|
| 1. CPU board | 230 × 310 mm |
| 2. DISPLAY board | 230 × 310 mm |
| 3. VOICE board | 230 × 195 mm |
| | (Total Height : 70 mm) |

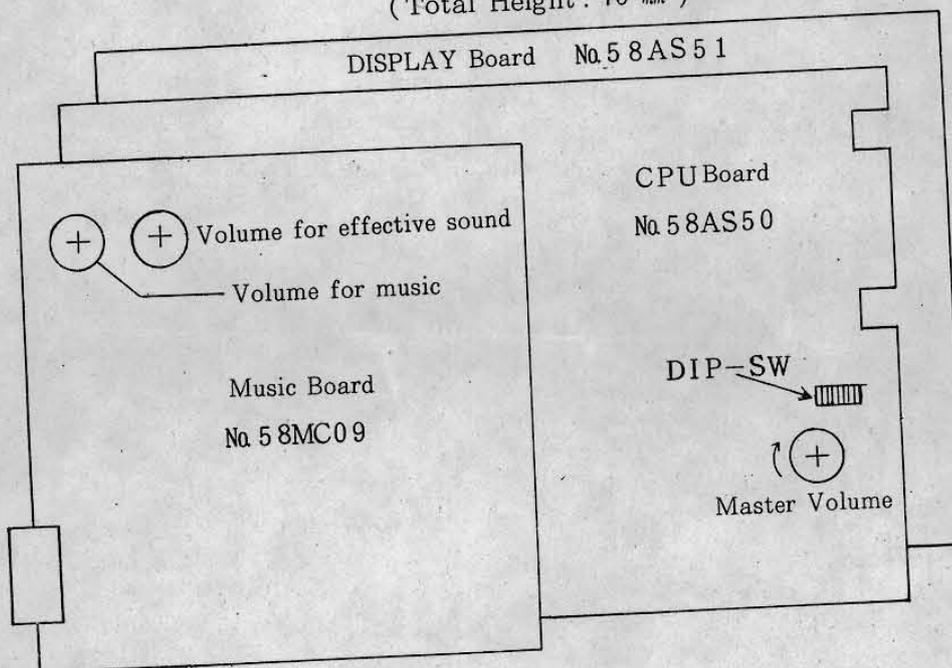

6. CONNECTION EXAMPLE FOR COIN SWITCH

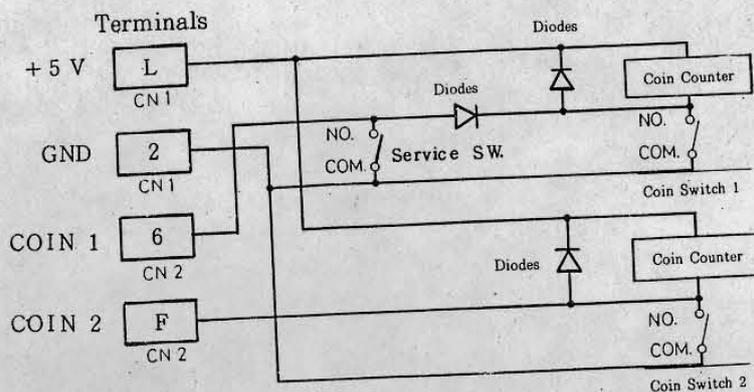

OPERATIONS

**EXCITING
SOCCER™**

DIP SWITCH SETTINGS

		DIP SWITCH							
		1	2	3	4	5	6	7	8
COIN 1 SELECT	1 COIN 1 PLAY	OFF	OFF						
	2 1	ON	OFF						
	1 2	OFF	ON						
DEMO VOICE	1 3	ON	ON						
	Yes			ON					
	No			OFF					
Stand - UPLIGHT					ON				
Tisch - TABLE					OFF				
Game difficulty	Hard				ON				
	Easy				OFF				
	3 Minutes					OFF	OFF	OFF	
	4 Minutes						ON	OFF	
TIME	6 Minutes						OFF	ON	
	2 Minutes						ON	ON	
									OFF

 ALPHA DENSHI CO., LTD.



ALPHA DENSHI CO., LTD.