


ADJUSTMENT ON GAME PC BOARD (FIGHTING HAWK G25 00508A)

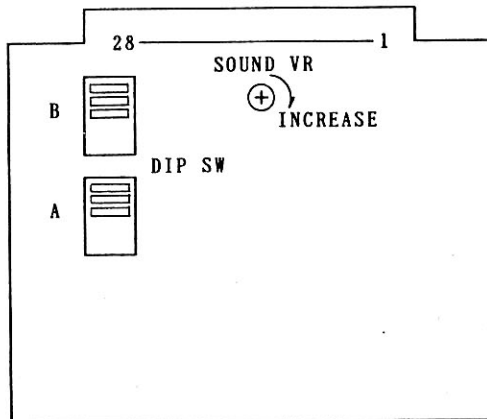

☆ THE CONTROL OF THIS GAME USES
ONE 8-WAY JOYSTICK AND 2 BUTTONS.

CONNECTOR

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V (+13V)
POST	H	7	POST
COIN COUNTER (B)	J	8	COIN COUNTER (A)
COIN LOCKOUT (B)	K	9	COIN LOCKOUT (A)
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN 2)	T	16	COIN 1
2P SELECT	U	17	1P SELECT
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOT BUTTON	Z	22	1P SHOT BUTTON
2P BOMB BUTTON	a	23	1P BOMB BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

NOTE) BEFORE CHANGING THE SETTINGS OF THE DIP SWITCH, TURN THE POWER OFF.

◇ SETTING OF DIP SWITCH A

(*) : FACTORY SETTINGS

SETTING		POSITION	1	2	3	4	5	6	7	8
GAME STYLE	TABLE		OFF							
	UPRIGHT		ON							
SCREEN ROTATION	* NOMAL			OFF						
	REVERSE			ON						
TEST MODE	* NOMAL GAME				OFF					
	TEST MODE				ON					
ATTRACT SOUND	* PRODUCED					OFF				
	NO PRODUCED					ON				
PLAY PRICING COIN 1	* 1 COIN 1 PLAY						OFF			
	2 COINS 1 PLAY						ON		OFF	
	3 COINS 1 PLAY						OFF			
	4 COINS 1 PLAY						ON		ON	
PLAY PRICING COIN 2	* 1 COIN 2 PLAYS								OFF	
	1 COIN 3 PLAYS								ON	OFF
	1 COIN 4 PLAYS								OFF	
	1 COIN 6 PLAYS								ON	ON

◇ SETTING OF DIP SWITCH B

SETTING		POSITION	1	2	3	4	5	6	7	8
GAME DIFICULTY EASY (A) → DIFICULT (B)	* RANK B		OFF							
	RANK A		ON	OFF						
	RANK C		OFF							
	RANK D		ON	ON						
NUMBER OF PLAYER	* 3					OFF				OFF
	4						OFF	OFF		
	5						OFF			
	6						ON	ON		