

DIP SWITCH 1

ITEM	CONTENTS	1	2	3	4	5	6	7	8
NUMBER OF PLAYER	3 4 5 6	OFF ON OFF ON	OFF OFF ON ON						
BONUS PLAYER FIRST SECOND	20,000 50,000 60,000 90,000			OFF ON	OFF ON				
DEMO SOUND	YES NO					OFF ON			
UPRIGHT TYPE							ON		
DIFFICULTY	EASY 1 ↓ 2 ↓ 3 HARD 4							OFF ON OFF ON	OFF OFF ON ON

DIP SWITCH 2

ITEM	CONTENTS	1	2	3	4	5	6	7	8
1 COIN	1 COIN 1 CREDIT 1 COIN 2 CREDIT 2 COIN 1 CREDIT FREE PLAY	OFF ON OFF ON	OFF OFF ON ON						
2 COIN	1 COIN 1 CREDIT 1 COIN 2 CREDIT 2 COIN 1 CREDIT 2 COIN 3 CREDIT			OFF ON OFF ON	OFF OFF ON ON				
SCREEN INVERSION								ON	OFF
CONTINUE PLAY	3 5 ∞							ON OFF ON	OFF ON ON

WIRING DIAGRAM

<u>SOLDER SIDE</u>			<u>PART SIDE</u>
GND	-----	1	GND
GND	-----	2	GND
+5V	-----	3	+5V
+5V	-----	4	+5V
		5	
+12V	-----	6	+12V
		7	
	-----	8	
		9	
SPEAKER(-)	-----	10	SPEAKER(+)
		11	
GREEN	-----	12	RED
SYNC	-----	13	BLUE
	-----	14	GND
		15	
COIN 2	-----	16	COIN 1
DOUBLE	-----	17	SINGLE
P2 - UP	-----	18	P1 - UP
P2 - DOWN	-----	19	P1 - DOWN
P2 - LEFT	-----	20	P1 - LEFT
P2 - RIGHT	-----	21	P1 - RIGHT
P2 - PUSH 1	-----	22	P1 - PUSH 1
P2 - PUSH 2	-----	23	P1 - PUSH 2
		24	
		25	
		26	
GND	-----	27	GND
GND	-----	28	GND