

D9200 TROUBLESHOOTING

NOTE: Make sure there is **No AC Power** to the monitor when checking cable connections.

SYMPTOM	REMEDY
"No Signal" message	Check all cable connections on monitor interface board.
No power	Check AC power connection. Unplug the signal cable to see if the "No Signal" message appears on the screen.
No video	Check RGB cable connection at top of interface board. Adjust VR401 sub brightness on the main board.
Color missing or low	Check the RGB cable on the interface board. Adjust that color with the on-screen menu. Select "Recall" in menu.
Picture tilt	Adjust the rotation control on the main board at VR101.
Screen discoloration	Press the "SEL" button on the control board to degauss.
No degauss action	Check degauss coil plug at W801 next to the power plug.
Dim video	Adjust Brightness and Contrast with the on-screen menu.
Video noise	Reroute ribbon cables and low voltage wires away from the power supply section and the high voltage section of the main board.
No on-screen menu	Check ribbon cable from control board to the main board.
Poor focus	Adjust middle control on flyback.