

GOLD BALL FIELD SERVICE KIT

Bally

MIDWAY MFG. CO.

10601 W. Belmont Avenue
Franklin Park, Illinois 60131
U.S.A.



Phone: (312) 451-9200 Cable Address: MIDCO Telex No.: 72-1596

GOLD BALL FIELD SERVICE KIT

INSTRUCTION SHEETS

A) PURPOSE:

This kit offers the option of converting the "Goldball" feature from a random feature to a skill feature. Depending upon certain switch settings, the player can earn the "Goldball" by spelling "G-O-L-D-B-A-L-L" on the playfield; the "Goldball" is then awarded as an extra ball.

B) KIT COMPONENTS:

- 1) One EPROM #0371-00803-0007
- 2) Two screened plastics
#0371-00917-00XF - 1 & #0371-00917-00XF - 2
- 3) Three instruction cards
 - a) Replay settings - M-051-00371-A031
 - b) Extra Ball settings - M-051-00371-A033
 - c) Novelty settings - M-051-00371-A035
- 4) Instruction sheets, playfield drawing,
(figure K-2) & M.P.U. drawing, (figure K-1)
- 5) Recommended score settings & score cards
 - Replay: M-051-00371-A068
M-051-00371-A069
M-051-00371-A070
M-051-00371-A071
 - Extra Ball: M-051-00371-A076
M-051-00371-A077

C) INSTRUCTION:

- 1) Turn game off.
- 2) Remove backglass & playfield glass.
- 3) Open back box (insert).
- 4) Remove original EPROM from socket U-2 on M.P.U. board (see drawing Figure K-1).
- 5) Install new EPROM #0371-00803-0007 from kit into socket U-2 on M.P.U. board (see drawing Figure K-1).
- 6) Set Fixed Data Switches on M.P.U. board (see drawing Figure K-1).

14 - OFF

15 - OFF

16 - OFF

- 6a) OPTION: Set fixed Data Switch #24 to ON. (See **NOTE** below & Figure K-1).
(3-Ball Play Only)
- 7) Close back box (insert) & replace backglass
- 8) Unfasten & remove original screened plastic #M-1330-209-6 from lower left corner of playfield (see drawing Figure K-2)
- 9) Install & fasten new screened plastic #0371-00917-00XF-1 from kit in lower left corner of playfield (see drawing Figure K-2)
- 10) Unfasten & remove original screened plastic #M-1330-209-4 from upper right corner of playfield (see drawing Figure K-2).
- 11) Install & fasten new screened plastic #0371-00917-00XF-2 from kit in upper right corner of playfield (see drawing Figure K-2).
- 12) For 3-Ball play only - see figure K-2.
 - A) Unfasten & remove right sling-shot plastic.
 - B) Remove rubber.
 - C) Relocate top post Upwards to next hole 3/16" (closing outlane opening by 3/16").
 - D) Replace rubber.
 - E) Replace & fasten right sling-shot plastic.

Note 6a): Fixed Data Switch #24

- 3-BALL: ON - Top Roll-Over Button, Gold Ball Special when flashing, comes on at the start of "Gold Ball" play, and every subsequent ball-in-play if not collected in the "Gold Ball".
- 5-BALL: OFF - Top Roll-Over Button, Gold Ball Special when flashing, comes on at the start of Gold Ball play.

13) Also, for 3-Ball play only - see figure K-2.

- A) Unfasten & remove middle right side plastic by roll-over button.
- B) Remove rubber.
- C) Relocate top post downwards to next hole 3/16" (opening the top of the lane by 3/16").
- D) Replace rubber.
- E) Replace & fasten right middle plastic.

14) Remove original Instruction Card from bottom arch and replace with new Instruction Card from kit as follows:

Replace M-051-00371-A030 with M-051-00371-A031(Replay).

Replace M-051-00371-A032 with M-051-00371-A033(Extra Ball).

Replace M-051-00371-A034 with M-051-00371-A035(Novelty).

15) Replace playfield glass & turn game on.

16) Set new Score Settings (see G).

D) OPERATION:

The "Gold Ball" feature will now operate as follows:

- 1) Left return lane will spot one letter in "G-O-L-D-B-A-L-L".
- 2) Upper right roll-over button will spot one letter in "G-O-L-D-B-A-L-L". (Refer to Note #1).
- 3) When "G-O-L-D-B-A-L-L" is spelled out, "Shoot Again" lites on the playfield & back glass.
- 4) The next ball will be an extra ball, played with the "Gold Ball".
- 5) In this mode Gold Ball arrow SW #23 will be inoperative. Only 1 arrow will be flashing at a time.
- 6) 2 and 3 or 4 and 5 ball game set up:

2 and 3 ball - multiplier special comes on with 3 X

4 and 5 ball - multiplier special comes on with 100K.

NOTE #1: This change is effective regardless of SW #14, 15, 16 setting.

NOTE #2: The "Gold Ball" does not appear at random anymore; it must be earned.

E) SPECIAL NOTE

The game can operate as before (with the "Gold Ball" appearing at random & not earning the "Gold Ball" by lighting "G-O-L-D-B-A-L-L") if Fixed Data Switches #14, #15 & #16 on the M.P.U. board are set on any Gold Ball Playing Percentages from 3% to 15%; only the 1% setting will change the "Gold Ball" feature to a skill earned feature, with the lit installed. It must be noted, however, if the feature is changed to a skill feature (14-15-16 = OFF), the new screened plastics & new instruction card and new score settings must be used: if the feature is to be used as a random feature (3% to 15%), the original screened plastic (lower left) and original instruction card and original score settings must be used.

F) Switch Settings for "Gold Ball" Playing Percentages with Kit Installed:

| SW 14 | SW 15 | SW 16 | % |
|-------|-------|-------|---------------------------------|
| ON | ON | ON | 15% |
| OFF | ON | ON | 13% |
| ON | OFF | ON | 11% |
| OFF | OFF | ON | 9% |
| ON | ON | OFF | 5% |
| OFF | ON | OFF | 3% |
| OFF | OFF | OFF | *Player earns "Gold Ball" |

- * The player earns the "Gold Ball" by spelling out "G-O-L-D-B-A-L-L" on the playfield the "Gold Ball" is then awarded as an extra ball. This switch setting requires installation of the new instruction card & the new screened butyrate from the kit; all other switch settings require the original instruction card & screened butyrate (lower left).

FIXED DATA SWITCH #24

3-BALL: ON - "GOLD BALL SPECIAL" Roll-Over Button (Top Right) lites for one skill shot at the start of each Gold Ball play and every subsequent ball until made.

5-BALL: OFF - "GOLD BALL SPECIAL" roll over button (top right) lites for one skill shot at the start of each Gold Ball play.

G) RECOMMENDED SCORE SETTINGS

Replay Mode:

3-BALL

1,000,000

1,500,000

M-051-00371-/a052
(from original
Game Packet)

5-BALL

1,400,000

2,000,000

M-051-00371-A068
(from Kit)

H) KIT SCORE CARDS:

Replay

| | | | | |
|----|------------------|-----------|---|-----------|
| A) | M-051-00371-A068 | 1,400,000 | & | 2,000,000 |
| B) | M-051-00371-A069 | 1,500,000 | & | 2,400,000 |
| C) | M-051-00371-A070 | 1,700,000 | & | 2,700,000 |
| D) | M-051-00371-A071 | 1,900,000 | & | 2,900,000 |

X-Ball

| | | | | |
|----|------------------|-----------|---|-----------|
| A) | M-051-00371-A076 | 1,700,000 | & | 2,400,000 |
| B) | M-051-00371-A077 | 1,900,000 | & | 2,900,000 |

A082-91494-A000 MPU MODULE

INSTALLATION STEPS 4 & 5

REMOVE OLD EPROM FROM U - 2


INSTALL NEW EPROM INTO U - 2

INSTALLATION STEP 6

SET SW #14 - OFF

SW #15 - OFF

SW #16 - OFF

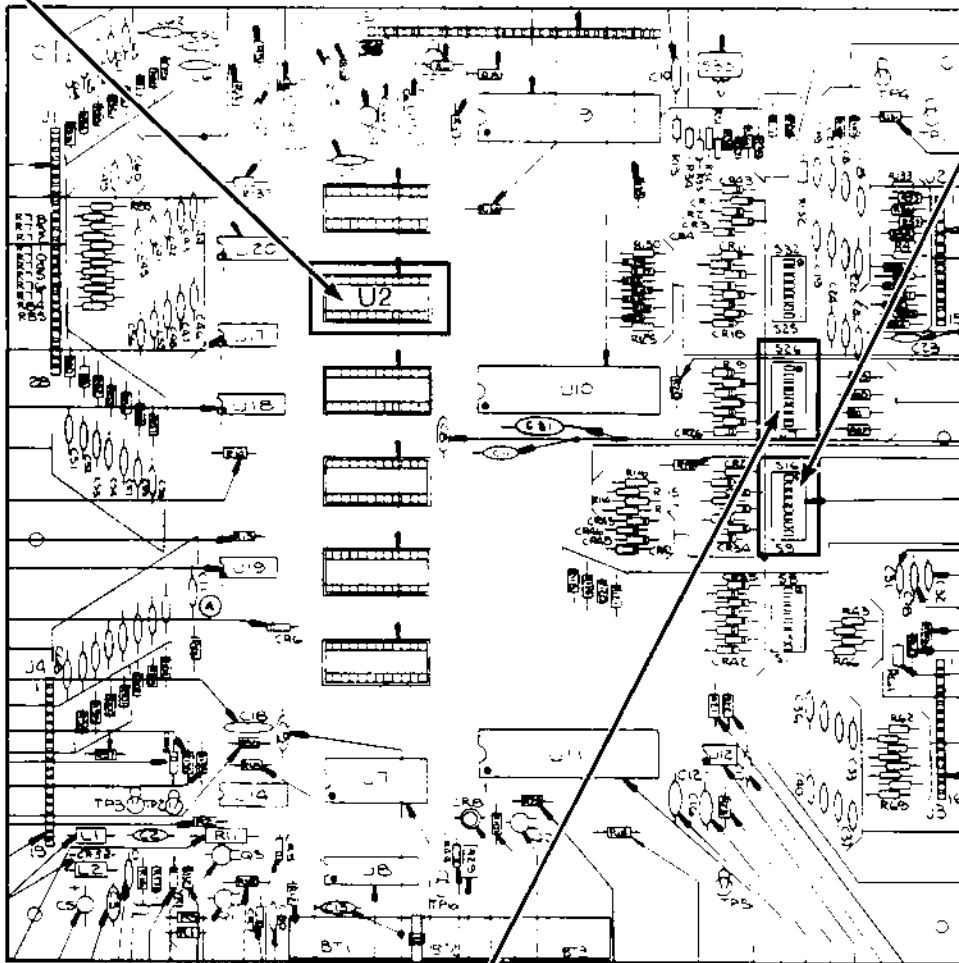

INSTALLATION

OPTION: 6a

SET SW#24 - ON

3-BALL PLAY ONLY

FIGURE K-1

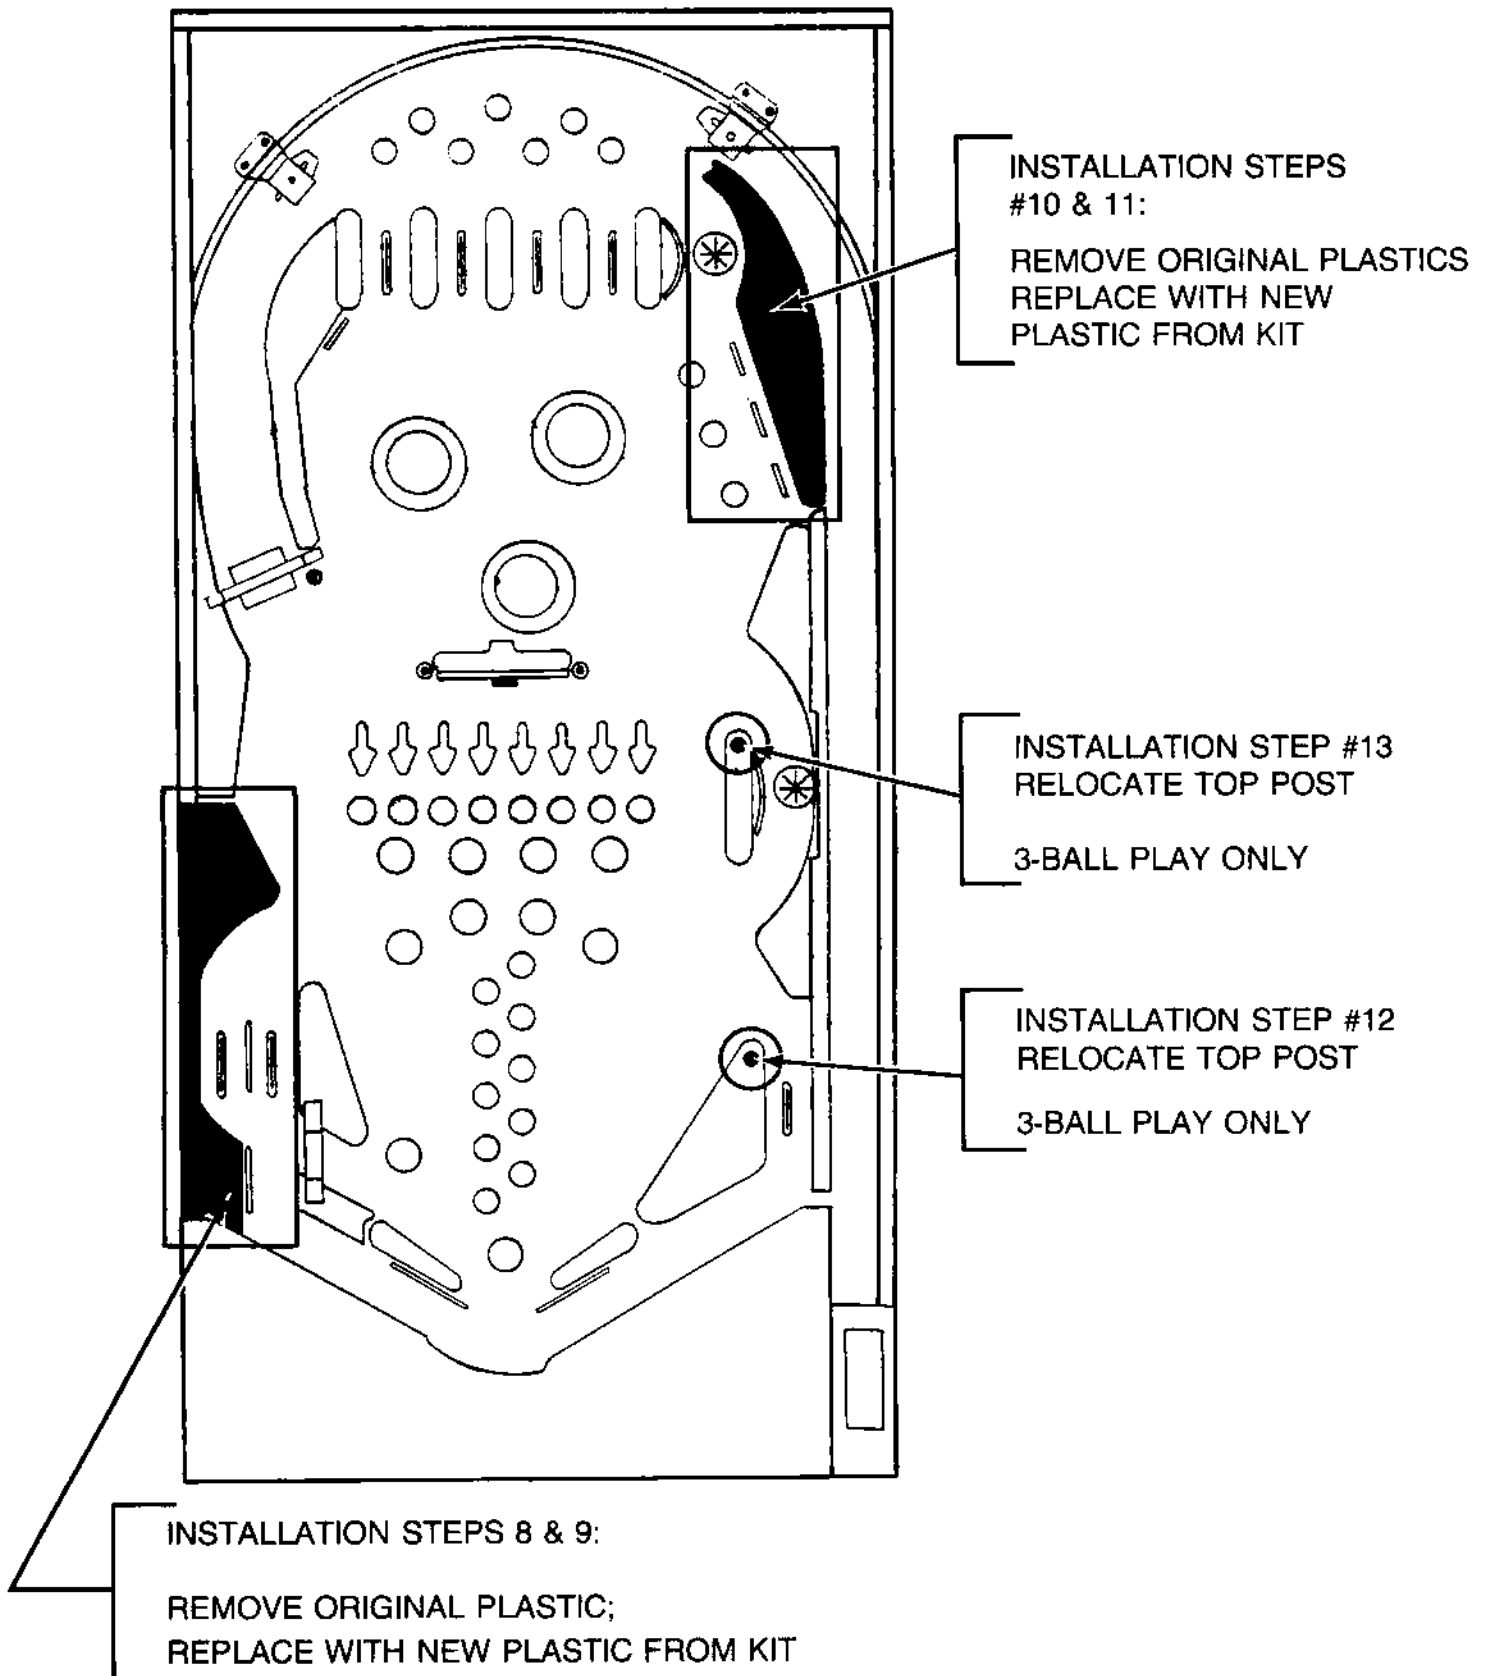


FIGURE K-2