

ART OF FIGHTING 2

SOFT DIP

ROUND	60 (10-99SEC)
CONTINUE	WITH
1CREDIT VS	WITHOUT
DIFFICULTY	LEVEL 4
1STAGE	3 ROUNDS
DEMO SOUND	WITH
▼GO NEXT	
HOW TO PLAY	WITH
CREDIT DISP	WITH
LEVEL DISP	WITH

1/ ROUND	SETTING TIME FOR 1 ROUND
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: 60	

2/ CONTINUE	WITH OR WITHOUT CONTINUE
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: WITH	

3/ 1CREDIT VS	WITH OR WITHOUT VS PLAY FOR 1 CREDIT
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: WITHOUT	

☆ When you set "WITH" mode and press "A" button, players can select "VS COM" or "P1 VS P2" mode for 1 credit.

At "P1 VS P2" mode, the game will be over after 1 round.

4/ DIFFICULTY	DIFFICULTY SETTING
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: LEVEL 4	

5/ 1STAGE	SETTING NUMBER OF ROUNDS IN 1STAGE
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: 3 ROUNDS	

6/ DEMO SOUND	WITH OR WITHOUT DEMO SOUND
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: WITH	

7/ HOW TO PLAY	WITH OR WITHOUT HOW TO PLAY SCREEN
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: WITH	

8/ CREDIT DISP	WITH OR WITHOUT CREDIT DISPLAY
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: WITH	

9/LEVEL DISP	WITH OR WITHOUT LEVEL DISPLAY
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING: WITH	

SETTING UP THE SOFT DIP ON THE MULTI VIDEO SYSTEM

1. TURN POWER ON.
2. PUSH THE TEST BUTTON INSIDE THE CABINET.
3. THE FOLLOWING SCREEN WILL APPEAR.

MOVE LEFT JOYSTICK UP/DOWN TO MOVE THE POINTER TO
"SETTING UP THE SOFT DIP". PRESS "A" BUTTON TO SET.

HARDWARE TEST
SETTING UP THE HARD DIP
SETTING UP THE SOFT DIP
BOOKKEEPING
SETTING UP THE CODE NUMBER
SETTING UP THE CALENDAR
EXIT

THE FOLLOWING SCREEN WILL BE DISPLAYED:

CABINET SET UP
SLOT 1 (GAME TITLE)
SLOT 2 (GAME TITLE)
SLOT 3 (GAME TITLE)
SLOT 4 (GAME TITLE)
SLOT 5 (GAME TITLE)
SLOT 6 (GAME TITLE)

4. SELECT THE GAME TITLE YOU WANT AND PRESS "A" BUTTON TO VIEW THE SOFT DIP SETTING OF EACH INDIVIDUAL GAME.



FLIPPERSPILL.COM