
This document has been downloaded from:



The largest resource for amusement machines documentation on the world wide web!

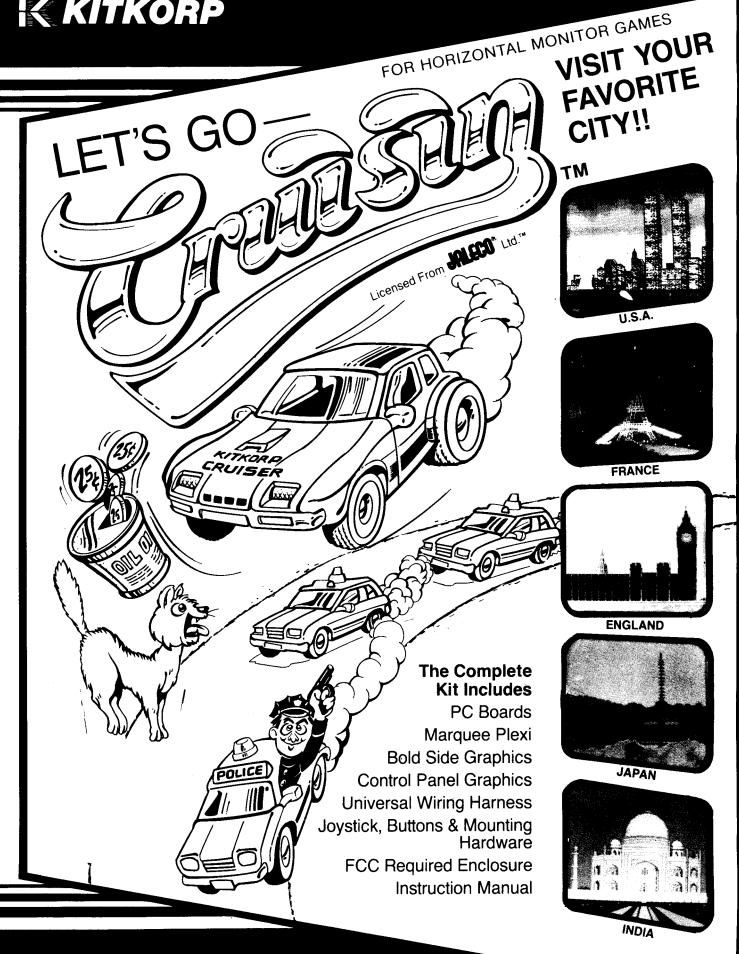

KITKORP



INSTALLATION

Cruisin' requires a cabinet with a horizontally-mounted rasterscan monitor, a power supply with +5V and +12V sources, and a control panel with mounting holes for a 4-way joystick and four buttons. There are two "OIL" buttons and two "JUMP" buttons. The "OIL" button doubles as 1-player start and the "JUMP" button doubles as 2-player start. Separate buttons for 1 and 2 player start are not needed. If you wish to use separate buttons for these, you will need to add two wires to the edge connector (see diagram).

- 1. Remove existing game wiring harness, leaving the AC wiring intact.
- 2. Remove all buttons and joysticks from existing control panel. Refer to the Control Panel Layout diagram in this manual. Apply the Cruisin' overlay and cut out the holes before you install the Cruisin buttons and joystick. Apply control panel decals.
- 3. Install the Cruisin' Universal Wiring Harness. Refer to the edge connector diagram for game wiring.
- 4. Install Cruisin' Marquee and Side Decals.

WARNING F.C.C. REGULATION COMPLIANCE

THE P.C. BOARD CAGE SUPPLIED WITH THIS CONVERSION KIT MUST BE UTILIZED AND TERMINATED TO GROUND AT THE TIME OF INSTALLATION.

THIS IS TO AVOID RADIO FREQUENCY RADIATION AND COMPLY WITH THE LIMITS FOR A CLASS "A" COMPUTING DEVICE PURSUANT TO SUBPART "J" OF PART 15 OF F.C.C. RULES, WHICH ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST SUCH INTERFERENCE WHEN OPERATED IN A COMMERCIAL ENVIRONMENT.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE INTERFERENCE — IN WHICH CASE, THE USER AT HIS OWN EXPENSE, WILL BE REQUIRED TO TAKE WHATEVER MEASURES MAY BE REQUIRED TO CORRECT THE INTERFERENCE.


PARTS SIDE

SOLDER SIDE

BLK	GND	1	А	GND	BLK
BLK	GND	2	В	GND	BLK
		3	С		
WHT-BLK	SPKR+	4	D	SPKR-	BLK
RED-BLK	+5V	5	Е	+5V	RED-BLK
		6	F		
WHT (TO 15)	IP START**	7	Н	2P START**	WHT (TO 16)
YEL.	COINSWITCH	8	J		
		9	К		
ORN	+12V	10	L		
YEL-BLK	1P UP	11	М		
WHT-RED	1P DOWN	12	N		
VIO	1P RIGHT	13	Р		
WHT-GRN	1P LEFT	14	R		
GRY WHT (TO 7)	1P OIL*	15	S		
WHT-BLU	1P JUMP**	16	Т		
RED	VID RED	17	U	VID BLU	BLU
GRN	VID GRN	18	٧	NEG COMP SYNC	WHT

^{&#}x27;PIN 15 IS JUMPERED TO PIN 7.

[&]quot;PIN 16 IS JUMPERED TO PIN H.

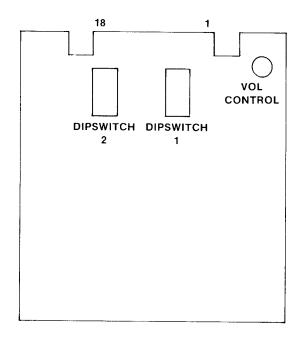


DIPSWITCH 1


	1	2	3	4	5	6	7	8
3 CARS	ON	ON						
4 CARS	OFF	ON						
5 CARS	ON	OFF						
UNLIMITED CARS	OFF	OFF						
NOT USED			OFF	OFF	OFF			OFF
ATTRACT MODE SOUND						ON		
NO ATTRACT MODE SOUND						OFF		
COCKTAIL MODE							OFF	
UPRIGHT MODE							ON	

DIPSWITCH 2


		1	2	3	4	5	6	7	8
COINS/CREDIT	1/1	ON	ON	ON					
	1/2	OFF	ON	ON					
	1/3	ON	OFF	ON					
	1/4	OFF	OFF	ON					
	2/1	ON	ON	OFF					
	3/1	OFF	ON	OFF					
	4/1	ON	OFF	OFF					
	5/1	OFF	OFF	OFF					
EASY					OFF				
HARD					ON				
NOT USED						OFF	OFF	OFF	
SCREEN									OFF
INVERT									ON


OIL	JUMP	4-WAY JOYSTICK	JUMP OIL	
1P	2P			

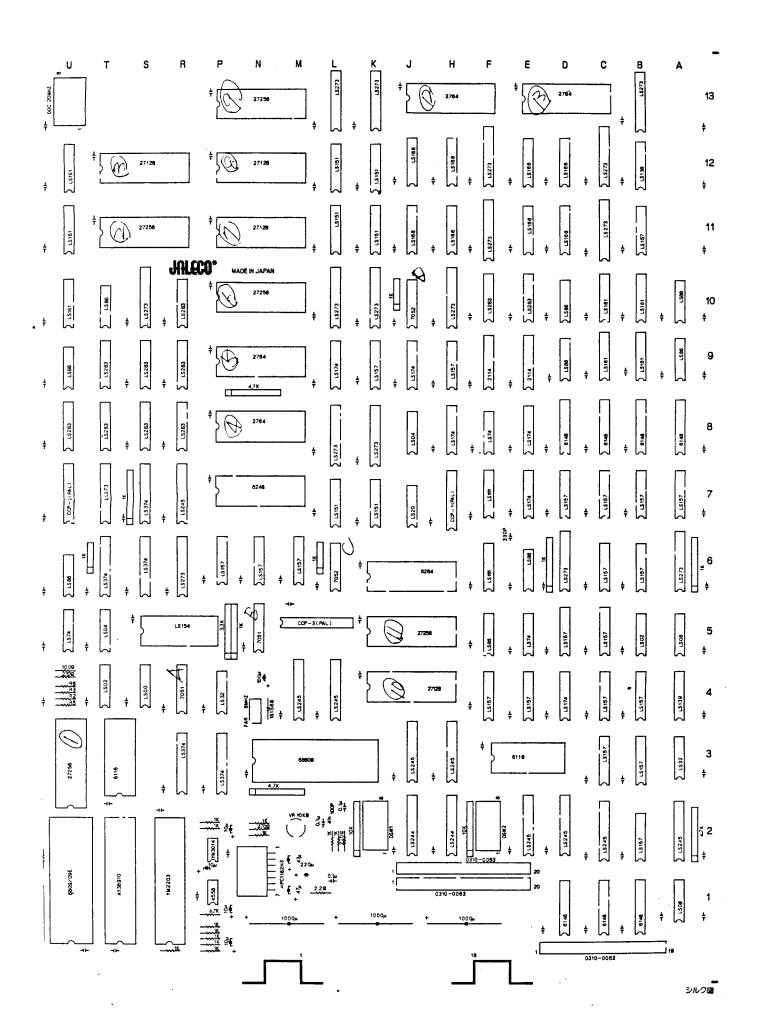

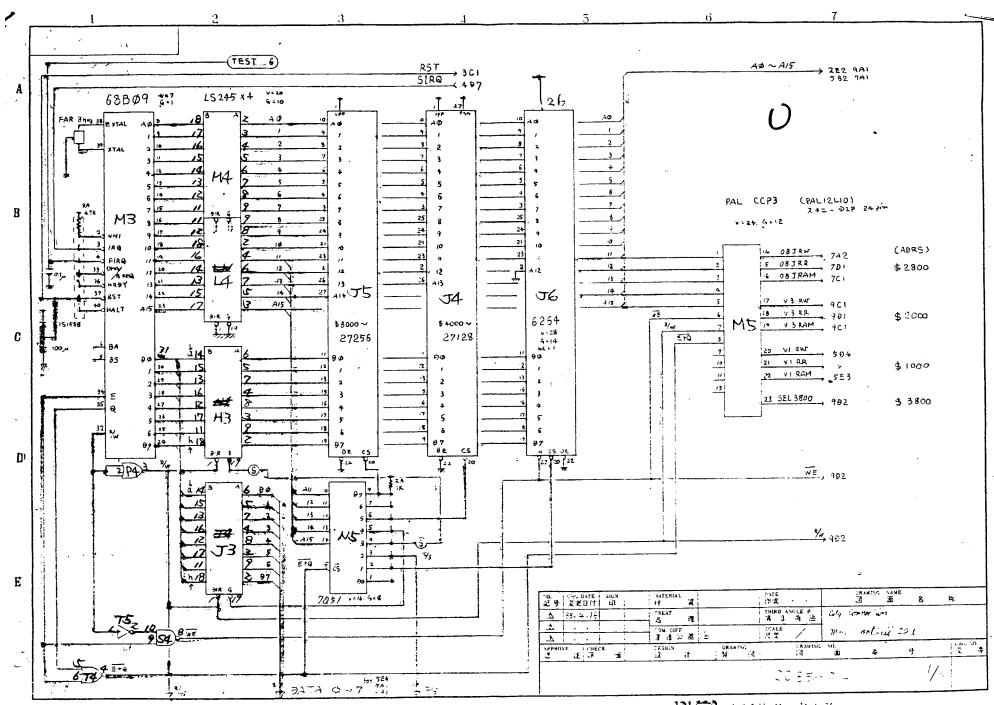



引し回 株式会社 ジャパンレジャー

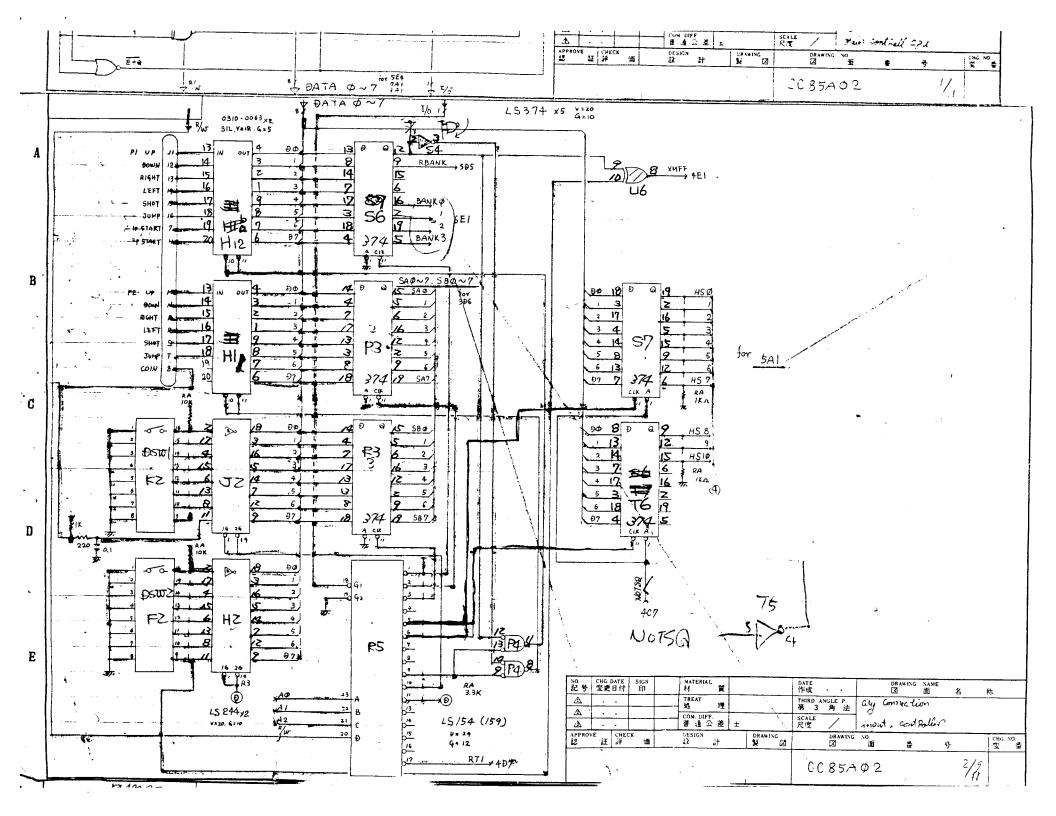


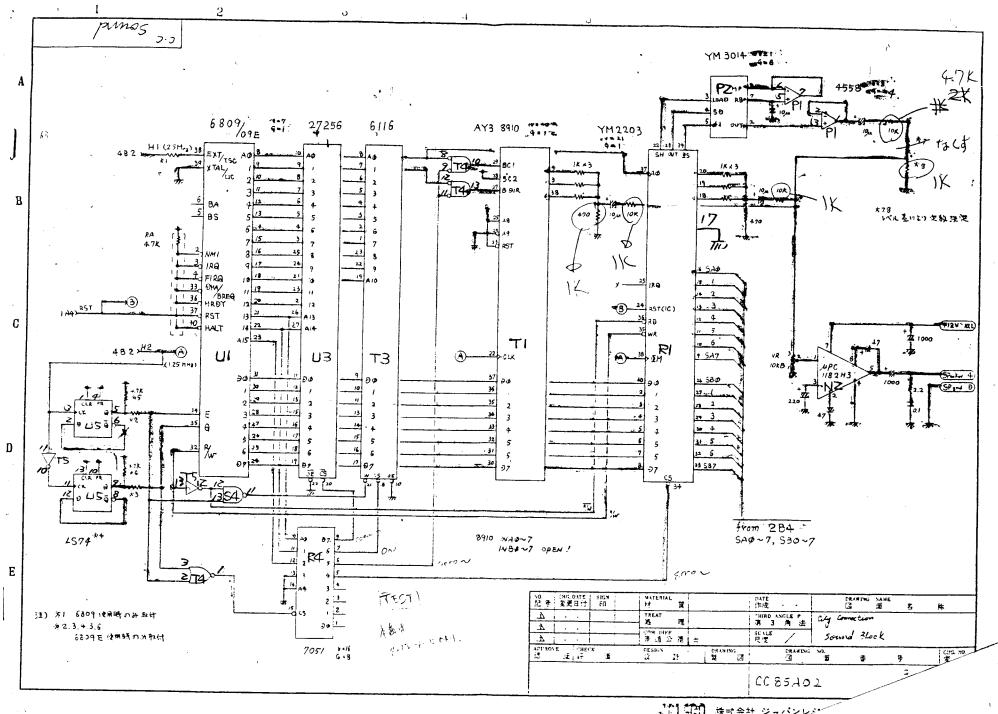


株式会社 ジャパンレ

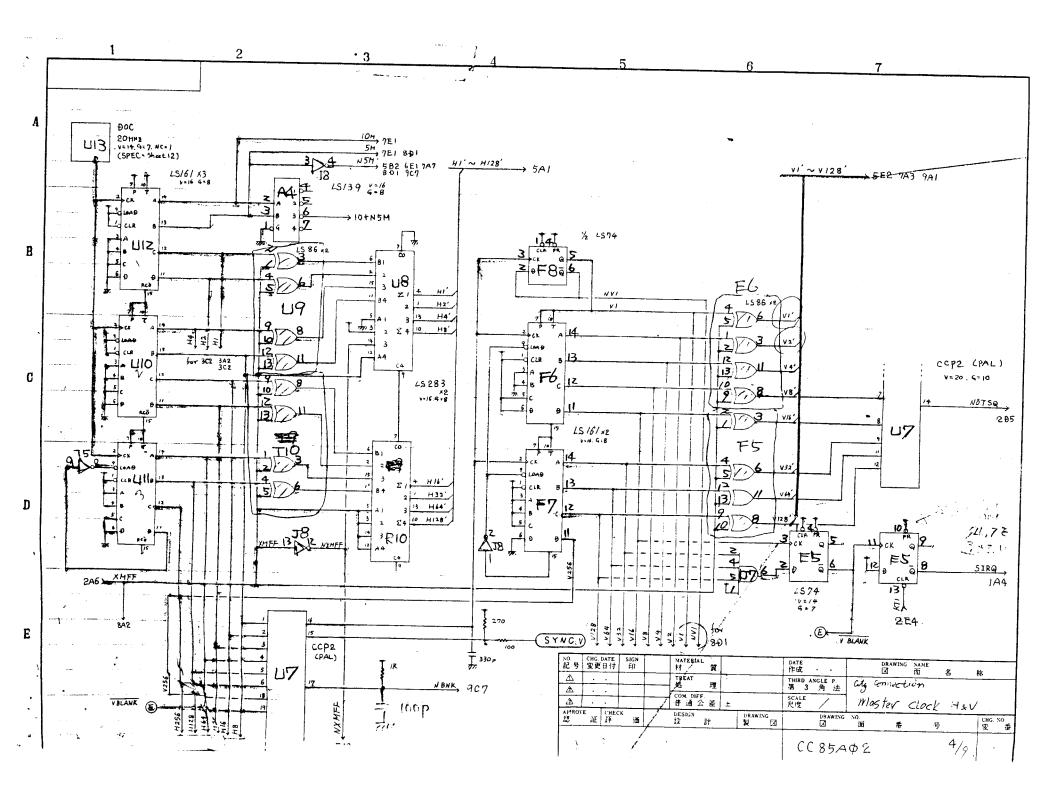


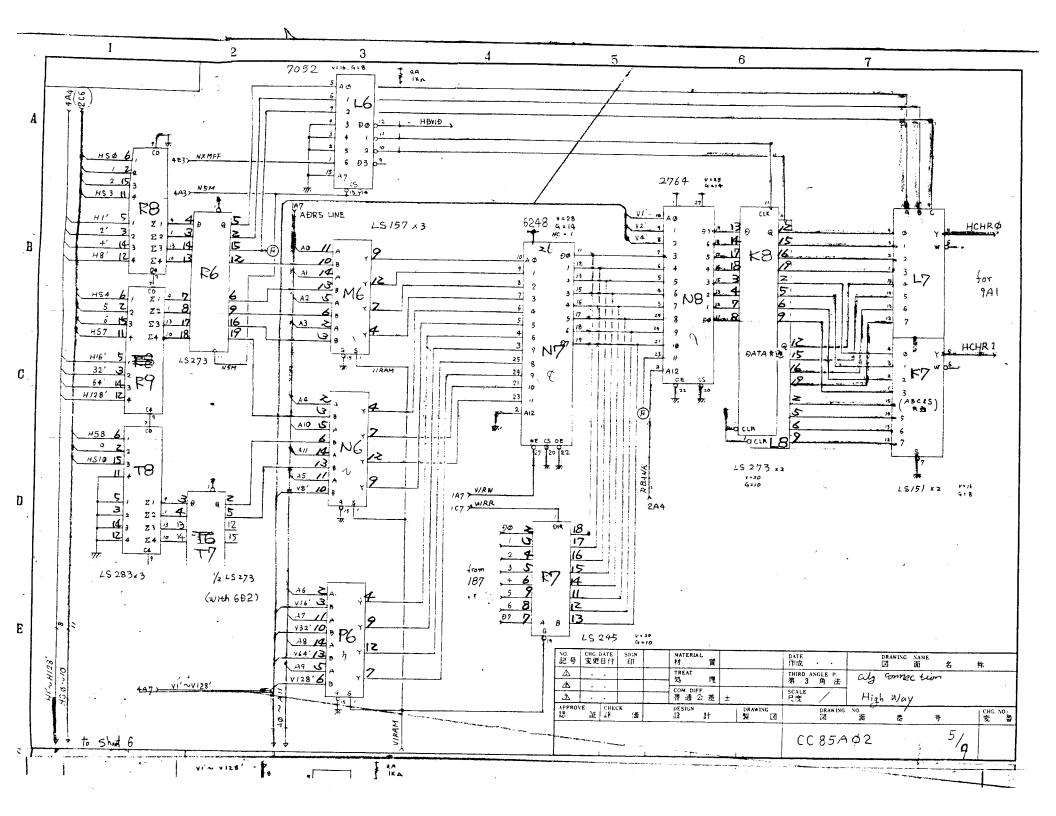


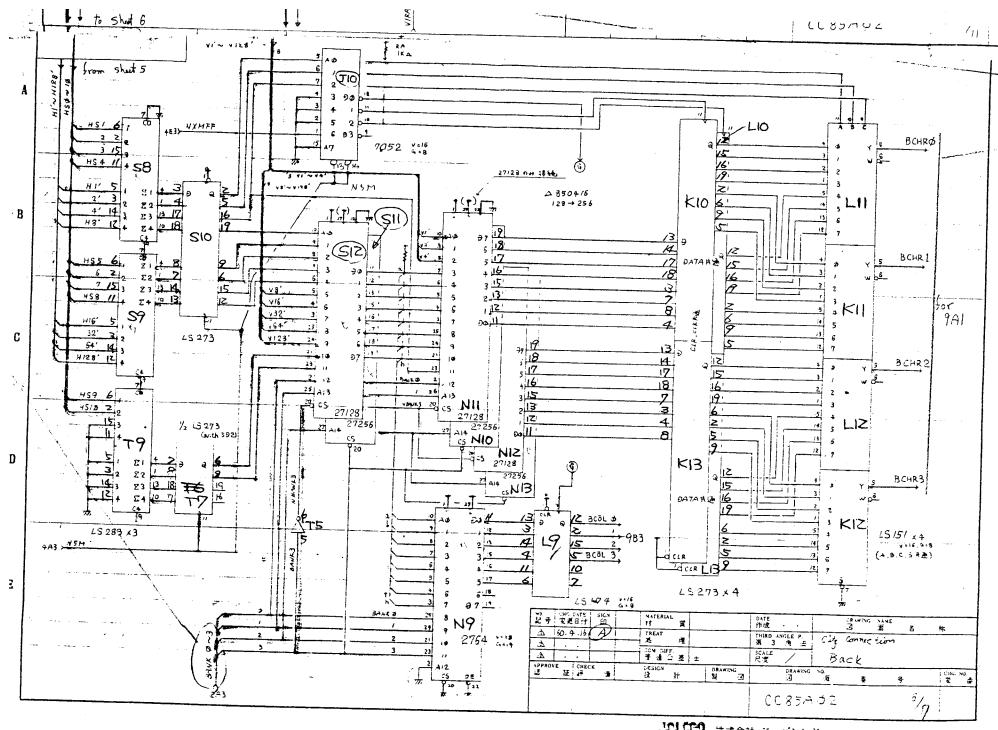

は 150 株式会社 ジャパンレジュー

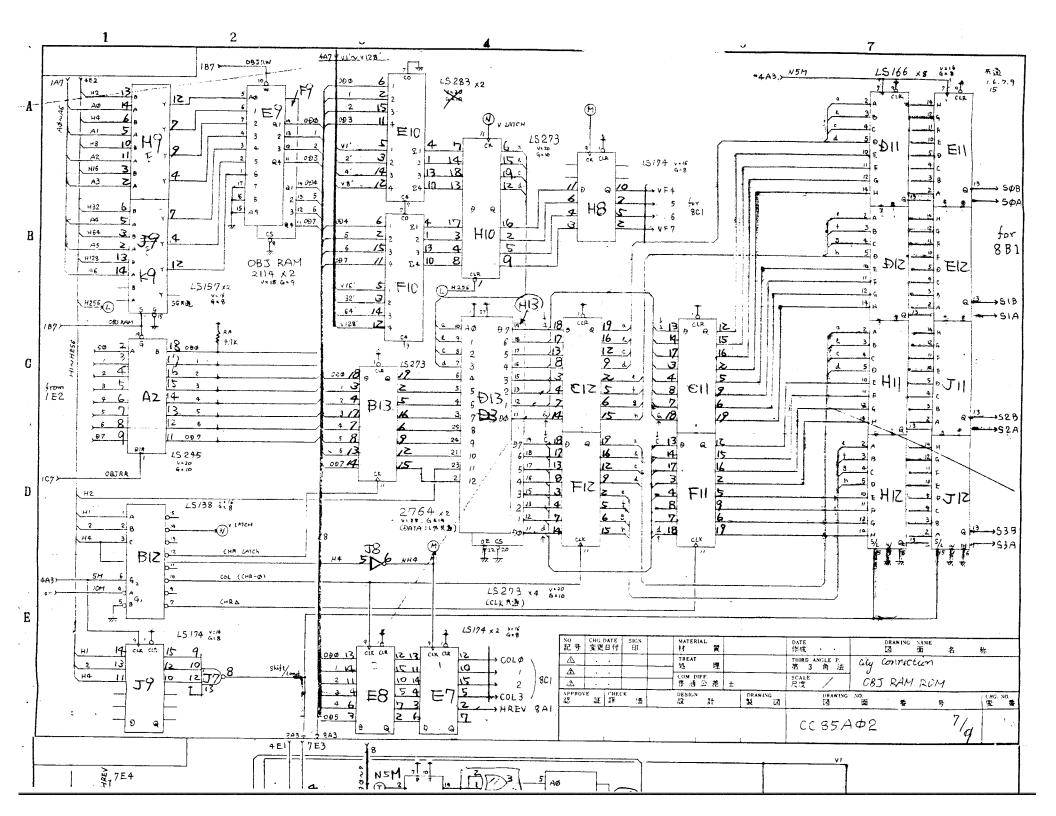

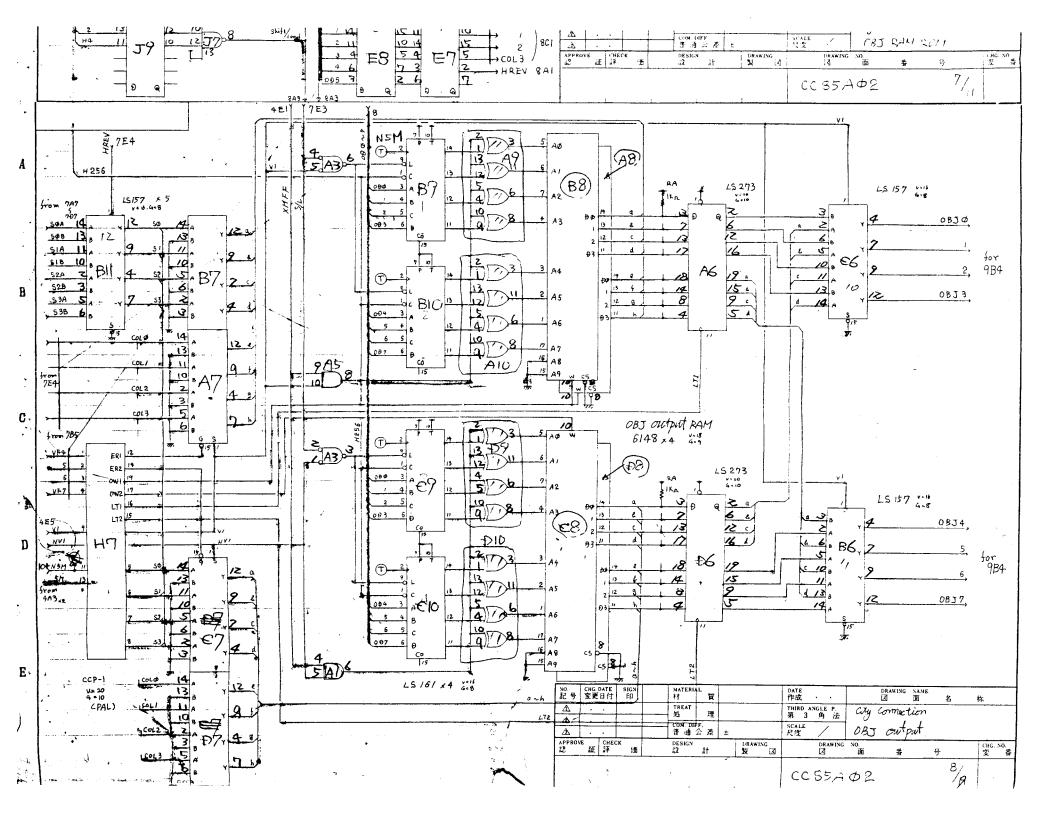

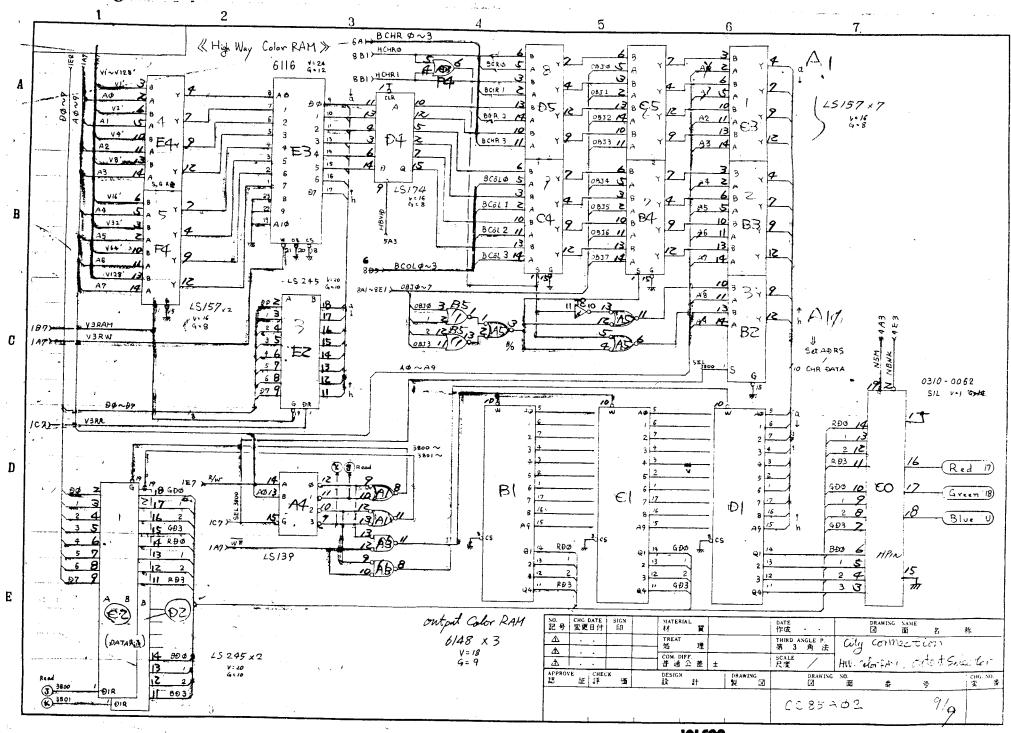

・ 株式会社 ジャパンレジャー