

# SONICWINGS™

ソニックウィングス

# AERO FIGHTERS™

## 取扱説明書

Power Supply	DC+5V DC+12V
Monitor	Vertical Screen
Game Style	2-Player Simultaneous




## CONNECTOR DIAGRAM

SOLDER SIDE	NO.	NO.	PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
2-P START	U	17	1-P START
2-P UP	V	18	1-P UP
2-P DOWN	W	19	1-P DOWN
2-P LEFT	X	20	1-P LEFT
2-P RIGHT	Y	21	1-P RIGHT
2-P SW 1 BUTTON	Z	22	1-P SW 1 BUTTON
2-P SW 2 BUTTON	a	23	1-P SW 2 BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

## HOW TO PLAY

- アメリカ、日本、スウェーデン、イギリスそれぞれ2人のパイロットの中から1人選び、ボタンで決定します。
- フルパワー時のみ弾数制限があります。
- 自分の国を除く7つのステージをクリアするとエンディングです。
- Choose your player from U.S.A., JAPAN, SWEDEN and U.K.
- Full power for limited time.
- Game is over when you clear seven stages.

## CONTROL PANEL

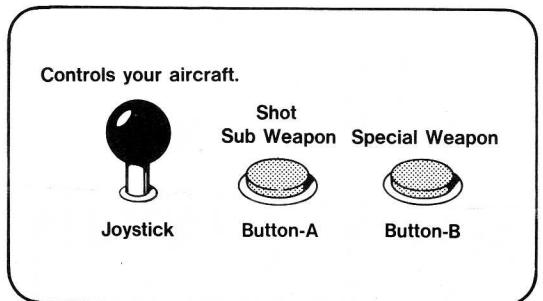

## DIP-SWITCH 1

		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
<b>Coin Slot</b>	<ul style="list-style-type: none"> <li>● SAME</li> <li>● INDIVIDUAL</li> </ul>	* OFF ON							
<b>Coin 1</b>	<ul style="list-style-type: none"> <li>● 1 COIN = 1 CREDIT</li> <li>● 2 COINS = 1 CREDIT</li> <li>● 3 COINS = 1 CREDIT</li> <li>● 1 COIN = 2 CREDITS</li> <li>● 1 COIN = 3 CREDITS</li> <li>● 1 COIN = 4 CREDITS</li> <li>● 1 COIN = 5 CREDITS</li> <li>● 1 COIN = 6 CREDITS</li> </ul>		* OFF ON OFF ON OFF ON OFF ON	* OFF OFF ON ON OFF ON ON ON	* OFF OFF ON ON OFF ON ON ON				
<b>Coin 2</b>	<ul style="list-style-type: none"> <li>● 1 COIN = 1 CREDIT</li> <li>● 2 COINS = 1 CREDIT</li> <li>● 3 COINS = 1 CREDIT</li> <li>● 1 COIN = 2 CREDITS</li> <li>● 1 COIN = 3 CREDITS</li> <li>● 1 COIN = 4 CREDITS</li> <li>● 1 COIN = 5 CREDITS</li> <li>● 1 COIN = 6 CREDITS</li> </ul>					* OFF ON OFF ON OFF ON OFF ON	* OFF OFF ON ON OFF ON ON ON	* OFF OFF OFF ON ON ON ON ON	
<b>Continue Coin</b>	<ul style="list-style-type: none"> <li>● NORMAL ( START = 1 COIN CONTINUE = 1 COIN )</li> <li>● CONTINUE ( START = 2 COINS CONTINUE = 1 COIN )</li> </ul>								* OFF  ON

■ Continue Coin が CONTINUE の時は、DIP[2]~[7]の設定が無視されます。

■ With Continue "ON", two coins to play and one coin to continue, and other COIN/CREDIT option disabled.

■ [1]~[8]が全て ON の時は、FREE PLAY mode になります。

■ FREE PLAY mode : Have [1]~[8] switches ON.

## DIP-SWITCH 2

		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
<b>Screen Revers</b>	<ul style="list-style-type: none"> <li>● Normal</li> <li>● Invert</li> </ul>	* OFF ON							
<b>Demo Sound</b>	<ul style="list-style-type: none"> <li>● OFF</li> <li>● ON</li> </ul>		OFF * ON						
<b>Difficulty</b>	<ul style="list-style-type: none"> <li>● Normal</li> <li>● Easy</li> <li>● Hard</li> <li>● Super Hard</li> </ul>			* OFF ON OFF ON	* OFF OFF ON ON				
<b>Fighters</b>	<ul style="list-style-type: none"> <li>● 3</li> <li>● 1</li> <li>● 2</li> <li>● 4</li> </ul>					* OFF ON OFF ON	* OFF OFF ON ON		
<b>Extend Player</b>	<ul style="list-style-type: none"> <li>● 200,000</li> <li>● 300,000</li> </ul>							* OFF ON	
<b>Test Mode</b>	<ul style="list-style-type: none"> <li>● OFF</li> <li>● ON</li> </ul>								* OFF ON

■ Demo Sound が OFF の時は、コイン待ちデモの時に音が鳴らないようになります。

■ When DEMO-SOUND is "OFF", there will be no sound during demonstration mode.

\* 出荷時の設定

\* INDICATES FACTORY SETTING.



**ビデオシステム株式会社** 〒606 京都市左京区下鴨松ノ木町35-1 TEL.075(723)0358(代) FAX.075(723)0368

OFFICE : 35-1 Matsunoki-cho, Shimogamo, Sakyo-ku, Kyoto, Japan. 606.

TEL : 075-723-0358 FAX : 075-723-0368