

Owner's Manual

Manual Part No. 420-0498

MANUFACTURED BY

Gremlin'/SEGA

CARNIVAL Operating Instructions and Service Manual

INTRODUCTION ...

This is an electronic game that makes extensive use of digital integrated circuitry and television monitor circuitry. This manual assumes the maintenance technician possesses a general knowledge of solid state circuitry microprocessor, TTL digital integrated circuitry and T.V. monitor concepts. Any individual not knowledgeable in these areas should not attempt repair of the electronic portion of this game. It should be noted that any attempt to repair the game in the field without the express consent of the factory will immediately void the warranty!!!

IMPORTANT NOTES...

An important service note is posted in this game and is repeated here for emphasis:

If at any time the T.V. screen shows a meaningless display or the game otherwise malfunctions, simply drop a coin into the coin mechanism. This should correct the problem. If not, the game requires service.

The circuitry in this game has been arranged so that the insertion of a quarter through the coin mechanism will reset the restart in the system. This clears up temporary problems caused by power line disturbances, static, etc.

SERVICE TECHNICIAN NOTE:

The system reset circuitry described above requires that the coin counter is attached to the system. If there is a coin counter problem and no replacement is available, the game will function properly if a 10K Ohm resistor is connected across the coin counter input pins to the video logic board.

ALSO...

Never replace any components with anything other than exact replacement parts. (See Parts List located on Service Schematics.)

Never remove circuit boards/connections while power is on.

Do Not replace the fuse with anything other than the proper value.

A blown fuse indicates an overload condition within the game. Replacing the fuse with a higher value can cause severe damage to internal components if an overload occurs.

Always consult the manual before attempting repairs.

Correspondence regarding this game should be addressed to:


GREMLIN INDUSTRIES, INC. 8401 Aero Drive San Diego, California 92123 (714) 277-8700

REPACKAGING INSTRUCTIONS...

Arcade 25½" W x 67" H x 28" D 64.77cm W x 170.18cm f x 71.12cm D 290 lbs.//32 kg.

Arcade Version

- 1. Carefully lay game on its side.
- 2. Attach pallet with four $5/16'' 18 \times 1-3/4''$ bolts, as shown.
- 3. See Final Recrating Instructions, below.

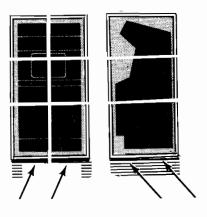

Mini-Video Version

- 1. Place game upright inside bottom cover.
- 2. Slide cover over game. Add protective packing material.
- 3. Place top cover over side cover.
- 4. See Final Recrating Instructions, below.

MiniVideo 22" H x 21" W x 20" D 55.88cm H x 53.34cm W x 50.8cm D 80 lbs.36 kg.





Cocktail Version

- 1. Place game inside carton.
- 2. Add protective packing material.
- 3. Place inside protective top cover over unit.
- 4. Close flaps and secure with shipping tape.
- 5. See Final Recrating Instructions, below.

Cocktoil 22" W x 34" L x 24½" H 55.88cm W x 93.98cm L x 62.23cm H 80 lb./36 kg.





FINAL RECRATING INSTRUCTIONS...

Place game upright. Tape down game keys. Then, crate the game using appropriate shock-absorbent packing material. Include packing on edges of game. Secure package with strapping.

Note ... If the game is to be shipped to Gremlin Industries for service or repair, attach a tag identifying the distributor and indicate the service or repair to be done. Include the full serial number of the game.

All items must be shipped prepaid.

GAME CONCEPT...

CARNIVAL is a 1 or 2 player alternate action game that simulates a carnival shooting gallery. The playfield consists of three target rows, a rotating pipe wheel, a bonus message panel, and a "special" target block.

The player uses a left-right control to position a rifle at the bottom of the screen, and a shoot control to fire the rifle. Two rows of bullets at the bottom of the screen indicate the number of shots remaining to the player. Every time the player shoots, one of the bullets disappears from the screen. More bullets are given during the first round than the others, so, the inexperienced player will have a chance to enjoy the play.

The game ends when the player runs out of bullets. This can occur on any round. A round ends when the player clears the playfield of all targets. At this point, a special "shoot the bear" sequence appears, and when this is finished the player proceeds to the next more difficult (and higher scoring) round. This is Gremlin's Multi-Phase design concept that keeps games challenging to players of all levels.

When a player completes a round (ending with "shoot the bear" sequence), the screen flips to the other player. When the original player resumes play, he advances to the next level of difficulty, exactly as he would have if the screen had not flipped to the other player. This method allows the players to more directly compare their scores, since they are always within one round of each other. Note that the player who ends the game first does not necessarily lose--he might still have the higher score when the game ends.

The three target rows move in a horizontal line from left to right (top row), right to left (middle row) and left to right (bottom row). There are five types of targets. The rows move as a continuous band—the targets exiting the playfield from the right side of the bottom row reappear at the left of the top row. The point value for hitting a row target is indicated along the right side of the game—maximum points for a top row target, medium points for a middle row target, minimum points for a bottom row target. These values increase from round to round.

Rabbits and owls are simple targets, which disappear when hit.

Numbered sign targets award additional bullets to the player when

Numbered sign targets award additional bullets to the player when hit, as well as awarding the points indicated for the row. These targets appear only on the top two rows to make them relatively difficult targets.

Five small letters, B, O, N, U and S are randomly interspersed through the target rows. At the upper right of the playfield is the word "bonus" spelled out is small letters. If the player manages to hit the moving bonus letters in order (b-o-n-u-s) a special bonus is awarded. The fact that the bonus is still active is shown by the bonus word in the upper right of the playfield. Every time a bonus letter in the correct order is hit, the small corresponding letter in the bonus panel enlarges to show that it has been hit. Whenever a bonus letter is hit out of order, the bonus panel disappears until the next round. The bonus panel reappears at the beginning of every round. The bonus value is determined by adding row target points into the bonus value. When the "B" letter is hit, the bonus value freezes for that round. This encourages waiting as long as possible before attempting to score the bonus.

Ducks are special targets. Whenever a duck reaches the bottom row, it is capable of leaving the row and flying down toward the player. If the duck manages to get past the player's rifle without being shot, it flies down to the bullet row and quickly eats 10 bullets. A maximum of

three ducks can escape simultaneously.

The target rows move as a continuous band of targets, and no new owls, rabbits, or bonus letter targets are added once the round starts. "More shots" targets and ducks are added during a round. The frequency of adding duck targets is tied to the round number. As the rounds get more difficult, more ducks are added as the round progresses.

A flying duck hit scores no points.

Bullets left over at the end of a round earn 50 points each.

The between rounds "shoot the bear" sequence operates as a shooting gallery bear. Whenever the bear is hit, it rears up, roars, and continues motion in the opposite direction. Each hit speeds up the bear, and increases the point value, which is shown above the bear for each hit. When the bear leaves the screen (which it will always do eventually, since it speeds up with each hit) the between rounds sequence ends and a new round begins. As the rounds progress, more bears (a maximum of 4) appear on the screen simultaneously.

A special yellow-rimmed score panel appears in the upper left of the playfield, and stays on for random lengths of time. Four types of panels appear here, which either add or subtract points or bullets. Hitting any part of the panel border awards the score shown inside.

The bullet bonus panel is shown with a large plus sign, and a row of bullets. Immediately after appearing, the bullets begin diasappearing fairly rapidly. When the bullets are depleted, the panel disappears. If hit, the player is awarded the number of bullets left in the panel when it was hit.

The score bonus is shown with the same large plus sign, and a score value. As with the bullets, the score value quickly decreases, until it hits zero and disappears.

The minus panels are similar to those above except a large minus sign indicates the number of bullets or points subtracted when hit. This discourages the practice of parking on the left margin and shooting—a miss will hit the negative target. These panels show a fixed number of bullets or points, and after a random time interval, disappear.

The pipe wheel contains eight pipes of four different colors. A panel beneath the wheel restricts pipe hits to horizontally oriented pipes, and also indicates the point value for hitting a pipe. Every shot the player takes decrements the pipe value, except a shot which hits a pipe. This makes it advisable to hit pipes early in the round, when it is most difficult (since the player must shoot through heavily populated target rows). Hitting two pipes of the same color with two consecutive shots awards a bonus of four times the pipe value shown in the panel.

CARNIVAL is accompanied by background music. At the beginning of every round, the music begins at a slow rate and relatively low key. As the round progresses, the music speeds up and the melody shifts up in key. This gives the player a growing sense of urgency. As the round progresses, the playfield motion also gradually speeds up.

A small panel on the right of the playfield contains a musical note symbol. If the player wishes to turn off the music, he simply shoots the note panel. This makes the note disappear, and turns off the music. Hitting the panel again makes the note reappear and resumes the music. The note thus acts as a "flip-flop" switch to turn the music on and off. Every round begins with the music on.

There is a special case to consider near the end of a round: the player has cleared all of the targets except the ducks, and has plenty of bullets

left so that he can simply sit and wait for the ducks. He would, in effect, prolong the game by refusing to end the round.

Theoretically, by hitting the ducks and "more shots" signs, the round could be prolonged indefinitely. However, an internal "doomsday" timer in the game keeps track of how long a round has lasted. After a certain time limit (the same for each round), the frequency of new duck appearances increases dramatically.

CARNIVAL contains the following sounds:

A clang sound every time a row target or bear is hit;

A pipe hit sound whenever a pipe is hit;

A bear roar whenever the bear is hit and rears up;

Three different duck quack sounds, to accompany up to three simultaneously escaped ducks;

A bonus sound for lighting the BONUS letters in the correct order;

A secondary bonus sound for pipe bonus and special panel bonus;

A rank sound as the player's score moves up in rank;

Background music;

Rifle shot.

The top three scores are shown during advertising, along with the player's initials. A player who scores in the top three is allowed to enter three initials by a special routine explained at the time of their writing. The rank is updated during the round. The player is both audibly and visually rewarded. There is a pronounced audible sound as the player's score passes that of another ranking player's score. And, they may watch their rank progress during the game.

CARNIVAL's basic play action is outlined below, as it appears in the game instructions.

Shoot all targets and pipes to advance to the next round.

Game is over when you run out of bullets.

Escaped ducks eat 10 bullets.

Hit B-O-N-U-S letters in sequence for special bonus.

Bonus value stops increasing when "B" is hit.

Hit same color pipes with 2 consecutive shots to score 4 times pipe value.

Shoot number signs for more bullets.

Shoot the bear between rounds for extra points.

ADJUSTMENTS: Switch inside coin door turns on/off pipe hit sound during advertising sequence.

NEW GAME BOARDS AND NEW EPROMS...

The following chart shows the two kinds of logic boards Gremlin will use in future games. These will be either a SINGLE VIC board or a DUAL VIC board. Also shown are the possible combinations of Eprom types that Gremlin will be using. The 2 Eprom types are:

1) 2708 (holds 8K of memory) 2) 2716 (holds 16K of memory).

Obviously, the 2716 holds twice as much information as the 2708, **but the 2 Eproms are not directly compatible**—in other words, you have to replace a 2716 with another 2716, and a 2708 with another 2708. In addition, the 2716 Eprom socket is modified slightly to accept the 2716 Eprom. If it is ever necessary to replace a new Eprom, be sure to specify 2708 or 2716. These numbers are printed on the Eprom package.

Logic Board Type	Possible Eprom Types Used	Where Used
SINGLE VIC board (see photo)	1) All 2708's	HEAD-ON 1 HEAD-ON 2 Future games
	2) 2708's and one 2716 (used in combination)	INVINCO DEEP SCAN Future games

The two Eprom types are used since some game programs require a larger memory than that provided with a set of 2708's. Usually, one 2716 provides enough additional memory space to hold a longer program.

POWER SUPPLY MODIFICATIONS...

For VIC Logic Boards Only

In order to supply -5 volts to the VIC logic board, it was necessary to modify the game power supply. The modification simply adds a 7905-5 volt regulator (Gremlin part #313-0023) to the power supply chassis; the 7905 is connected into the -12 volt line at pin 11 of the power supply output connector. PIN 17 OF THIS CONNECTOR NOW BECOMES THE -5 VOLT OUTPUT. The other pins remain the same:

```
pin 11 = -12v
pin 12 = +12v
pin 13 = 2-3 V AC signal
pins 14, 15, 16 = GROUND
pin 17 = -5v
pins 18, 19, 20 = +5v
```

Also, a 8900 ufd filter capacitor has been added to the power supply to provide better + 12 volt regulation.

TRANSFORMER VOLTAGE CONVERSION INSTRUCTIONS ...

To convert the game transformer to 100, 115, or 230 VAC, refer to the following chart:

*For 100 volts: Connect the voltage INPUT lines to transformer terminals 1 and 2.

*For 115 volts: Connect the voltage INPUT lines to transformer terminals 1 and 3.

*For 230 volts: Connect the voltage INPUT lines to transformer terminals 1 and 4. The fluorescent lamp line must be connected to transformer terminal 3.

ALSO, THE TV MONITOR MUST BE CONVERTED TO THE SAME VOLTAGE INPUT AS THE GAME TRANSFORMER. REFER TO THE MONITOR MANUAL IN THE GAME.

MAINTENANCE PROCEDURES... DUAL games

- 1. Power Supply (Refer to drawing #815-0020, sheet 4)
 - 1. Remove output connectors from power supply.
 - 2. Make these initial tests: (GND to BLACK lead on C18, 9000 ufd capacitor)
 - a. +9 VDC on POSITIVE terminal of C18
 - b. +17-19 V on C6 (4700 ufd cap.)
 - c. -17-19 V on C5 (4700 ufd cap.)
 - d. -12 V at output pin 11 (adjustable by trim pot R42)
 - e. +12 V at output pin 12 (adjustable by trim pot R8)
 - f. +5 V at output pins 18,19,20 (adjustable by trim pot R9)
 - g. GND (ground, 0 V) at pins 14, 15, 16
 - h. 2-3 V AC at pin 13 (Don't forget to change meter scale to AC)
 - i. -5 V at pin 17
 - 3. Check these voltages again with the logic board connected. If any are wrong, a loading condition exists in the logic board, most likely.

II. Logic Board

The following instructions will help you trace down and find most problems associated with the logic board. The procedures are listed by the more common kinds of problems that could arise. Read through all the steps first, then apply them one at a time. The necessary equipment are an oscilloscope and AC/DC voltmeter.

1. NO PICTURE: TV TUBE AND FLUORESCENT LAMP ARE OFF

- a. Plug the game in and check to see that it is receiving 115 (230) VAC. Measure 115 VAC at the input terminals of the game transformer. If it is not present here, proceed to next step.
- b. Check the fuse; if it is good, proceed to next step.
- c. Remove the cover of the junction box in back of the game. Measure 115 VAC on the output of the line filter. If it is not present, the line filter may be bad. Or, one of the AC line connections in the junction box may be loose. UNPLUG the game and re-check these connections.
- d. If the fluorescent lamp still does not operate, turn off game and on again. This usually re-starts the lamp. If it doesn't, turn the lamp in its socket; this will re-seat it for a better connection. Sometimes the lamp works loose during shipment.
- e. An ON/OFF switch for the TV monitor is located on the TV chassis, below the neck of the picture tube. Make sure it is ON.

2. NO PICTURE: TV TUBE AND FLUORESCENT LAMP ARE ON. SCREEN BLACK.

a. First, make a quick check of the monitor-to-logic board connections: Are all wires making contact with the pin connector? Are the wires secure on the monitor plug-in connector?

- b. Check to be sure U14 is seated in its socket properly, and that no pins are bent. This IC is a Prom that develops the necessary video timing sequences. Usually if one pin on the chip is out of the circuit, the screen will appear black. Proceed to next step if this chip is seated correctly.
- c. Inspect the high-voltage lead coming off the monitor's high-voltage transformer. This lead attaches directly to the TV tube. Sometimes, during shipment, this wire is jostled out of contact with the transformer. Turn off the game, and carefully push the wire down, toward the transformer, to re-seat it. Now check to see if the picture comes on. If it doesn't, proceed to step d.
- d. Using a voltmeter, measure the three voltages powering the logic board. These voltages, +5,-5, +12 volts can easily be measured at the power supply-to-logic board connection. If all the voltages are present, go to next step.
- e. Using an oscilloscope, test for clock signals at the following points: (For the moment, don't worry about what each signal should look like: We're concerned with finding floating signals, and/or signals that are not present when they should be, and why they are not.) The scope setting is .2v/div. @ 5usec., with a 10:1 probe. All clock signals, except the video signal, are about 5 volts in amplitude.
 - * Check pin 6 of U50. Look for a $1\frac{1}{2}$ -2 volt video signal. If not there, check pin 4 of U50. If it is here, U50 is probably bad.
 - * If the signal is not at pin 4 of V50, suspect U57 and U67.
 - * Check the following IC's and pins for any floating or missing signals: U13, pin 8. U22, pin 9. U15, pins 11,12,13,14. U14, pins 1-7, 9. U19, pins 2,6,10,15. U20, pins 2,7,10,14,15. These chips make up the video timing circuit. Make sure there are no floating or missing signals on any of these chips. If there are, suspect the chip is bad.

3. PICTURE APPEARS: COLOR IS DISTORTED; SOME COLORS MISSING

a. Check the red, blue, and green output signals on U67, pins 4,7,9, respectively. If no signals present, suspect U67, U49, or U66.

4. INCOMPLETE PICTURE: RANDOM DISPLAY

a. Sometimes the game appears on the screen with parts of the picture showing incorrect information. For example, the "HI SCORE" listings display jumbled information, while the rest of the picture is normal. The most likely cause of this problem is one of the 8 Ram IC's U69 through U76. The quickest way to find the bad Ram is simply to replace each IC, one at a time, with knowngood Rams. Be sure not to bend any pins when replacing the IC's. Also, don't overlook the possibility that one of the Ram sockets is bad.

5. RANDOM DISPLAY WHEN GAME IS TURNED ON

- a. Activate the coin switch a few times to see if this clears the picture. If not, turn the game off, then on again. If the jumbled display still appears, proceed to step b.
- b. Check the reset circuit on the logic board. (Refer to the schematic)

When power is first applied to the game, a reset circuit consisting of Q1, Q2, U18 and U35 is triggered on to reset the microprocessor. This reset signal forces the microprocessor to start at the beginning of the game program. If the microprocessor is not reset, it will still operate—it just won't operate on the right program instructions or data, and will continually display a jumbled pattern on the screen. So, begin by checking for a 3-4 VAC signal at pin 3 of the power supply-to-logic board connector. Follow the signal through Q1, where, at the collector, a sawtooth wave appears. Then, when power is first applied, observe pin 2 of U18 as capacitor C10 slowly charges to about 3 volts. When this level is reached, U18 is triggered to change states, causing pin 3 to go high, then low. This change is inverted by U17 and finally reaches pin 26 of the Z80. Check pin 26 of the Z80 for a low-to-high signal change. If not present, one or more of the reset circuit components is bad. If it is present, proceed to step c.

- c. The following lists some probable causes of the jumbled display pattern:
 - * one or more RAMs
 - * one of the Eproms, U1-8, U26-33
 - * The microprocessor, U 16, is bad.
 - ★ U47 (74LS245) is bad.
 - * U51 and U52 are bad.
 - * Check the 3 operating voltages, +5,-5, +12 VDC.

6. GAME DOES NOT COIN UP

- a. A common problem with a game that does not coin up is that the coin switch trip wire is out of adjustment. Usually, all that is necessary is to bend the trip wire up or down, depending on whether a heavier or lighter tension is needed.
- b. There may be a problem in the coin circuit on the logic board. Check U62, pins 6,8 for pulses each time the coin switch is tripped. Also, U43.and/or U62 may be bad. Suspect U45, also.
- c. It is possible that one of the coin counter transistors, Q3 and Q4, is bad. Determine whether or not the counter advances each time the coin switch is tripped.
- d. Don't overlook an incorrect or faulty coin switch-to-logic board connection; sometimes these wires work loose from the coin switches.

7. PLAYER CONTROLS NOT WORKING

- a. Check first to be sure all control switch connections are secure. This includes checking the black wires, or ground leads.
- b. If these connections are good, make sure the control panel leads are intact inside the Molex molecular connector to the logic board.
- c. If the controls still do not work, suspect U44 on the logic board. However, U44 could be good but might not be receiving the activating pulses from U24, pin 10 or U25, pin 12. Check these also.

Recommended Spare Parts ... dual games

UPRIGHT

GREMLIN PART NO.	DESCRIPTION	QTY PER 10 GAMES
130-0001	speaker	1
130-0002	speaker cover	1 .
200-0011	Algol color monitor	1
253-0104	Plexi front monitor panel	1
253-0120	panel logo, HO2/INVINCO	1
253-0121	" HO2/DEEP SCAN	1
253-0123	" DEEP SCAN/INVINCO	1
253-0130	" CAR HUNT/INVINCO	1
253-0133	" CAR HUNT/DEEP SCAN	N 1
390-0011	fluorescent lamp	2
220-0008	coin counter	1
220-0035	coin door lock and key	2
220-0066	coin mechanism, complete	2
220-0071	coin reject button & spring	3
220-0072	coin return stop (U-bolt)	3
475-0007	volume control	1
510-0014	slide switch	1
510-0042	coin switch	3
510-0051	push button switch	· 1
(800-0076)	photo coin assy.	
270-0001	line filter, junction box	1
514-0001	fuse, 2A, slo	5.
240-0007	black pushbutton control	3
510-0023	mounting/contacts for above	3
510-0050	game select switch	3
800-0056	complete joystick	2
240-0091	joystick knob	3
250-0289	threaded rod	3
250-0291	upper sleeve	3
510-0041	joystick switch	5
315-0019	2708 Eprom, blank specify by number on Eprom	1 set
315-0050	2716 Eprom specify by number on Eprom	1 set

316-0246	color prom INV/DS	1
316-0283	color prom HO2/DS	1
316-0287	color prom HO2/INV	1
316-0390	color prom CAR HUNT/DS	1
314-0001	5551C	5
314-0093	74LS374 IC	3
314-0099	74L S2 4 5	3
314-0104	74LS138	3
314-0105	74LS253	3
315-0031	Z80 microprocessor	2
315-0039	RAM IC	10
315-0042	Video Interface chip (VIC)	3
316-0206	video timing prom	3
475-0002	resistor pack	3
482-0010	PE8050 transistor	3
482-0014	2N4401 "	10
510-0043	6-position DIP switch	2

The following are suggested parts for all sound boards.

313-0008	LM348 IC	5
314-0042	7406 IC	5
315-0006	CMOS 4017 IC	5
315-0035	MM 5837 IC	5
315-0043	CMOS 4069 IC	5
481-0006	1N914	10
481-0008	1N5231 Zener diode	10
482-0006	2N4403 transistor	10
482-0023	2N4093 ''	10
313-0004	LM741 IC	5
315-0005	CMOS 4013 IC	5
315-0009	CMOS 4081 IC	5

LIST CARNIVAL UPRIGHT ENG WHT DWG NO OF 5 FR	man new years	C. C.	Sec.	S	TITLE TOP ASSY	700 - 0022		SH	\
WITH 800-3076 FOR DRAWN SON DLONG IS LOCATION S RELEASED RELEASED REFER TO HEXACON CALL-OUTS ON DRAWINGS FOR THE LIGCATION OF PARTS LISTED HERE.		San Diego, l	California 92123	LIST	CARNIVAL UPRIGHT ENG WHT	DWG N		JF 5	REV
TS LOCATIONS CHECK A. AMBROSE 5.29-80 APPR 5-22-80 RELEASED SD SCRIPTION SD SD COTTON OF PWRTS LISTED HERE.	USE	WITH 8	300-3076	FOR	2	ENGR			
5-22-80 RELEASED SD RELEASED SD CONTINE REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.	PAR	TS LOCA	SNOIL			APPR			
S-22-80 RELEASED REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.	LTR	DATE		REVI	-	DRAFT	CHEC	_	APPR
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.	V	5-22-80	RELEASE	Q:		SD	7		9
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.									
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE									
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LIDCATION OF PARTS LISTED HERE.									·
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.									
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.									
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.	,								
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE									·
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.									·
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.							.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
REFER TO HEXAGON CALL-OUTS ON DRAWINGS FOR THE LOCATION OF PARTS LISTED HERE.						_			
LOCATION OF PARTS LISTED HERE.			DE GENERAL	O NOOVA	THE GOT STANKING INC. STING I IN				
			INCATION OF	IEAMUON C	ALL-UUIS ON DRAWINGS FOR THE		THE SECTION AND PROPERTY OF TH	the statement company dates	vertically a part of the second
			1	CIVEL					
						_			
		,							

SH 2 A OF 5 REV	DES										A Later Control	m v v v v v v v v v v v v v v v v v v v	and the National County						
700 - 0022 DWG NO	REF													-					
CARNIVAL UPRIGHT ENG WHT	DESCRIPTION	ASSY BASIC KIT CARNIVAL	ASSY DUAL VIC LOGIC CARNIVAL ENG.	CABINET BASIC WHT	GRAPHIC, SIDE, RIGHT	GRAPHIC, SIDE, LEFT	ASSY, SHIPPING KIT												
PARTS LIST	PER ASSY																-		
] 	QTY	_		-		_	1												
Gremlin Industries, Inc. san Diego, California 92123	PART NO	800 - 3076	800 - 3075	140 - 0048	420 - 0494	420 - 0493	800-0122												
Ğ	NO		7	3	4	7	9			,									

	T		T						ı							-					
∢	REV				,																
SH 2	0F 2	DES																			l
		REF D																			
700 - 0023	DWG NO													, ,							
707	۵			.NG												_					
2			AL	IIVAL E	RAIN																
Y T ENG	z	NO	ARNIY	CARN	BASIC WOODGRAIN			KIT		,											
ASS	SRAI	DESCRIPTION	KIT C	1991	SICW																
TOP	000	DES(ASIC I	AL VIC	T BA			SHIPPING													
TITLE TOP ASSY CARNIVAL UPRIGHT	3		ASSY BASIC KIT CARNIVAL	ASSY DUAL VIC LOGIC CARNIVAL ENG	CABINET			ASSY S													
TITI			AS	AS	CA			¥								_					
TS	_	\SS\	-																		
PARTS	LISI	PER ASSY																-			
į		<u>∑</u>	_									_									
S, III		<u> </u>		_	~																
Gremlin Industries, Inc.	San Diego, California 92123	0 N	910	3075	- 0049			0122													
n 15 d	lego, Cali	PART	800-3076	800 - 3	140 - (1													
remai	San D		80	86	4			800													
Q		TEM	-	2	3	4	Ŋ	9													

San Diego, California 92123 USE WITH 800-3076 & 700-0022	_	リイスとことなり	A UPRIOTH	UNU H	700-007	600 600 600 600 600 600 600 600 600 600	HS	∢
H 800-3076 & 7	LISI	Α I	WOODGRAIN		DWG NO	0	0F 2	REV
		DRAWN	LIEN VAN	OHZ	ENGR			
)	CHECK A	A, AMBROSE	5-29-80	APPR			
DATE	REVISION	-	DESCRIPTION		DRAFT	CHECK	CK	APPR
6-2-80 RELEASED	SED				L.Y.H.	3	2	(00)
REFER	TO HEXA	GON CAL	REFER TO HEXAGON CALL-OUTS ON DRAWINGS	DRAWING	S	:		
FOR TH	FOR THE LOCATION	A HO NO	PARTS LISTED	FED TERE.				

Sur Description Spring Sur Description LITR DATE REVISION DESCRIPTION A 62-80 RELEASED REVISION DESCRIPTION A 62-80 RELEASED		0-7	5	<u> </u>
DATE REVISION DESCRIPTION 6-2-8c RELEASED	CHRNIVAL UPRIGHT	DWG NO	OF 2	8
CATE REVISION DESCRIPTION C-2-8C RELEASED	S. Comercia	ENGR		
G-2-8¢ REVISION G-2-8¢ RELEASED	A. AMBROSE 6-2-80	APPR		
크	DESCRIPTION	DRAFT	CHECK	APPR
		(8)	36	Æ

Α A E A]									e de la composição de l			on number of military	ĺ	/2.07.07.22°			
SH 2 A OF 2 REV	1																		
15 10	REF DES																		
800-3075 DWG NO			020-34	048	044														
8																			A Para State of the State of th
TITLE ASSY LOGIC CARDIVAL UPRIGHT	DESCRIPTION	DUAL GAME VIC ISD	IC EPROM 2708	CUSTOM CHIP	IC CLR PROM 32 X B	IC PROM PGB													
	ASSY								_				,		-				
PARTS LIST	PER A																		
ne.	QTY F	-	15	-				_											
Gremlin industries, Inc. San Dego, Calffornia 92123	PART NO	800-0058	3/5-0019		216-0633	316-0206													·
Ü	NON	_	2	3	4	N													

25	min ind	Gremlin Industries, Inc.	S	TITLE	ASSY		801	300-6		SH /	0
	San Diego, Ca	San Biego, California 92123	LIST	DUAL	G.AME	V. /.C.)	DWG NO		OF B	3 REV
Ŋ	HT 5,	SHT 5,67,8 ARE "D"SIZE DRAWN	"D"S12E	DRAWN	y directions	7-02-6	79 ENGR	'n			
)				CHECK	Wolas	L. Brown & C.	APPR	PR MIL	Can Li	10 C	
LTR	DATE		REVI	REVISION DES	DESCRIPTION			DRAFT	CHE	CK	APPR
4	61-11-01	RELEAS	ED					MJ B	All	1/2	W
w	10-23-79	PER ECN	350	Aller a aller a a a a ballante de la calenda		12-	12-3-79	8 101	F.M.		THE
U	11-2679	PER ECN	1			12-	12-10-78	10.18	100	\ \ \	
Q	1-24-80	PER ECN	1368	dere dermofe et a communitation de destact de la communitation de la communitation de la communitation de la c		1	08-82-(WJB	J. W.		707
FORM	NO 001-1500	.1500									

	Gremlin Industries, Inc.	PARTS	TITLE ASSY 80	800-0058 SH 2 D
	San Diego, California 92123	LIST	DUAL GAME V.I.C.	DWG NO OF 8 REV
ITEM	PART NO OTY	PER ASSY	DESCRIPTION	REF DES
2 -	151-0005 1		CAP CER LOGO OF SOV	
2	151-0011 4		CER OILF	C73, C74, C41, C42
m	151-0012 64		\r	C1,2,4,5,7,11,13-40,43-72
4:	152-0001 1		CAP FILM . 1 mf 100V	675
5	153-00013		CAP TANT 10 LESSV	C3, C6,C10
c)	153-0002		//	60
7	153-0008 1		CAP TANT 100 F20V	87
α	170-0174 1		PC BOARD	
				Sunning States
2	9 4000-112		CONN PIN TEST PT	TP1-TP6
0/	212-0004 2		CONN M & DIN	
11	212-0021 4		CONN M 10 PIN	
12	212-0031 3		CONN M 12 PIN	
[3]	213-0004 11		SKT 16 PIN DUAL ININ	
14	2/3-0005 2		SKT 40 PIN DUAL INLM	XU16, XU57
<u>-</u>	213-0001 16		SKT 24 PIN DUAL INLN	XUI-XUB, XUZ6-XU33
71	230-00091		XTAL CLK 15,46848MH	7.
				-
17	314-0001 3	The state of the s	1C NE555	(118, U36, U37
\mathcal{Z}'	314-0015 1		1C 7404	W17
61	314-0018 2			1123, 162
20	314-0019 2		1C 746509	(125, 1168

Signature		<u> </u>	PARTS	TITLE ASSY Q	C SH 3 C C SH 3 C C C C C C C C C
PART NO QTYPER ASSY DESCRIPTION REF DE SIGNET NO 3/4-0040 4 /C 7445125 U51,052,U 3/4-0046 1 /C 744508 U10-U12,U33,U62 3/4-0058 5 /C 744508 U10-U12,U12,U12,U12,U12,U12,U12,U12,U13,U22 3/4-0070 1 /C 744586 U22,U43,U66 3/4-0072 2 /C 744586 U15,U20 3/4-0073 2 /C 7445175 U19,U20 3/4-0076 1 /C 7445175 U19,U20 3/4-0078 / /C 7445175 U19,U20 3/4-0092 2 /C 7445575 U49,U48 3/4-0096 3 /C 7445163 U49,U48 3/4-0096 3 /C 7445163 U49-U76 3/5-0031 / /C 7445163 U49-U76 3/5-0042 / /C 7445163 U49-U76	Femilin Industries San Diego, California 921) III (-	LIST	DAL GAME V. 1. C.	Ø
10	H 4	QΤΥ	PER	1000	
3/4-0040 4 / C 7415/25 3/4-0046 1 / C 74504 U13 3/4-0046 1 / C 741508 U10-U12 3/4-0058 1 / C 741508 U10-U12 3/4-0059 1 / C 741586 U20 3/4-0062 4 / C 741586 U20 3/4-0073 2 / C 741586 U53,U66 3/4-0073 2 / C 741517 U67 3/4-0073 2 / C 7415157 U67 3/4-0092 2 / C 7415157 U67 3/4-0093 2 / C 741505 U24 3/4-0093 2 / C 741505 U24 3/4-0094 2 / C 7415374 U63,U64 3/4-0095 3 / C 741505 U24 3/4-0095 3 / C 741505 U24 3/4-0095 3 / C 741505 U24 3/4-0095 3 / C 741505 U34 3/4-0095 3 / C 741505 U34 3/4-0095 3 / C 741506 U36 3/4-0097 1 / C 741506 U36 3/5-0037 1 / C 741506 U36 3/4-006 2 / C 741506 U36 3/4-007 3 / C 741506<				DESCRIPTION	
3/4-0046 1 74.504 UI3 3/4-0058 5 1 74.508 UIO-UIZ, 3/4-0059 1 74.514 UID-UIZ, 3/4-0050 1 74.514 UZ,043,0 3/4-0072 Z 1 74.5174 UIS,020 3/4-0073 Z 1 74.5175 UIS,020 3/4-0073 Z 1 74.5175 UIS,020 3/4-0078 I 1 74.5157 UIS,044 3/4-0078 I 1 74.5527 UB3,064 3/4-0078 I 1 74.5527 UB3,064 3/4-0092 Z 1 74.5525 UB3,064 3/4-0093 Z 1 74.55374 UB3,044 3/4-0094 Z 1 74.5538 UB4-UB6 3/4-0086 I 1 74.5565 UB4-UB6 3/5-0091 I 1 74.5568 UB 3/5-0042 I 1 7 7 3/6-0203 I	1 1	4			U 51, U 52, U 54, U 55
3/4-0058 5 /C 74L50B U10-U12, 3/4-0059 1 /C 74L510 U77 3/4-0052 4 /C 74L514 U22,043,0 3/4-0070 1 /C 74L5174 U50 3/4-0073 2 /C 74L5175 U03,020 3/4-0073 2 /C 74L5175 U07,020 3/4-0078 / /C 74L5175 U07,048 3/4-0078 / /C 74L5075 U07,048 3/4-0078 / /C 74L507 U07,048 3/4-0078 / /C 74L5374 U63,064 3/4-0092 2 /C 74L5374 U63,064 3/4-0093 2 /C 74L5378 U49.034 3/4-0094 2 /C 74L513B U93,044 3/4-0095 3 /C 74L513B U94-U46 3/4-0097 1 /C 74L5163 U16 3/5-0037 1 /C 74L5163 U16 3/5-0042 1 /C 74L564 U16 3/6-0202 1 /C 74L50 U16 3/6-0203 1 /C 74L50 U16 <td< td=""><td>-41</td><td>1</td><td></td><td></td><td>013</td></td<>	-41	1			013
314-0059 1	-00				UIZ,
314-0062 4	314-00	~		U	
314-0070 1 1C 74LSB6 3/4-0072 2 1C 74LS174 3/4-0073 2 1C 74LS175 3/4-0078 1 1C 74LS157 3/4-0078 1 1C 74LS157 3/4-0092 2 1C 74LS138 3/4-0093 2 1C 74LS138 3/4-0104 2 1C 74LS138 3/4-0086 1 1C 74LS138 3/4-0086 1 1C 74LS163 3/5-0037 1 1C 74LS163 3/5-0039 8 1C 74LS163 3/5-0039 8 1C 74LS163 3/5-0039 1 1C 74LS163 3/6-0204 1 1C 74LS163 3/6-0203 1 1C 74LS166	3/4-00				022,043,058,065
3/4-0072 2 /C 74LS174 U53,U6 3/4-0073 2 /C 74LS175 U07 3/4-0076 1 /C 74LS157 U67 3/4-0078 / /C 74LS157 U67 3/4-0078 / /C 74LS374 U67,U4 3/4-0093 2 /C 74LS374 U63,U3 3/4-0094 2 /C 74LS374 U63,U3 3/4-0086 1 /C 74LS374 U63,U3 3/4-0086 1 /C 74LS374 U63,U3 3/4-0086 1 /C 74LS163 U44 3/5-0037 1 /C 74LS253 U44 3/5-0039 8 /C 74LS163 U89-L 3/5-0042 /C 74LS163 U89-L 3/6-0206 //C 74LS163 UA9-L 3/6-0203 //C 74LS164 U57 3/6-0203 //C 74LS164 U59-L 3/6-0203 //C 74LS164 U59-L 3/6-0203 //C 74LS164 U59-L 3/6-0203 //C 74LS164 U59-L 3/6-0203 //C 74LS164 U74 3/6-0203	314				050
3/4-0073 2 /C 74LS/175 U/9, U2 3/4-0076 / /C 74LS/157 U/67 3/4-0078 / /C 74LS/157 U/67 3/4-0092 2 /C 74LS/162 U/47, U4 3/4-0093 2 /C 74LS/38 U/47, U4 3/4-0094 2 /C 74LS/38 U/47, U3 3/4-0065 3 /C 74LS/38 U/44- 3/4-0086 1 /C 74LS/63 U/44- 3/4-0086 1 /C 74LS/63 U/44- 3/5-0039 8 /C 74LS/63 U/69-L 3/5-0042 1 /C PROM 32X8 CTL U/4 3/6-0203 1 /C PROM 32X8 CTL U/4 3/6-0203 1 /C PROM 32X8 CTL U/4	3/4-007				U53,U66
314-0076 1 C 74L5157 Ub7 3/4-0078 1 C 74L502 U24 3/4-0092 2 1 C 74L5374 U47,U4 3/4-0093 2 1 C 74L5374 U63,U3 3/4-0104 2 1 C 74L5138 U9,U3 3/4-0105 3 1 C 74L5163 U9,U3 3/4-0086 1 1 C 74L5163 U15 3/5-0037 1 1 C 74L5163 U16 3/5-0042 1 1 C RAM 4K D C/SPECIN U69-L U57 3/6-0208 1 1 C VIDEO INTERFACE U57 3/6-0203 1 1 C PROM 32X8 CTL U14 390-0203 1 LED RED D2	3/4-007				019,020
3/4-0078 / 1 /C 74L502 U24 3/4-0092 2 /C 8216 U47,U4 3/4-0093 2 /C 74L5374 U63,U4 3/4-0105 3 /C 74L5138 U9,U3 3/4-0086 1 /C 74L5163 U44- 3/4-0086 1 /C 74L5163 U15 3/5-0037 1 /C 74L5163 U15 3/5-0042 1 /C RAM 4K D 0/5PEC12 U69-C 3/6-0206 1 /C PROM 32X8 CTL U14 3/6-0203 1 /C PROM 32X8 CTL U14 390-0003 1 /C PROM 32X8 CTL U14	4-00	_		U	1007
3/9-0092 2 1C 8216 U47,U4 3/4-0093 2 1C 74L5334 U63,U3 3/4-0104 2 1C 74L5138 U94,U3 3/4-0105 3 1C 74L5163 U94- 3/4-0086 1 1C 74L5163 U15 3/5-0031 1 1C 74L5163 U16 3/5-0037 1 1C RAM 4K D CKSPECIN U69-U 3/5-0042 1 1C VIDEO INTERFACE U57 3/6-0208 1 1C VIDEO INTERFACE U57 3/6-0208 1 1C PROM 32X8 CTL U14 390-0083 1 LED RED D2	3/4-007				024
314-0093 2	600-61	-		U	U47, U48
3/4-0/04 2	14-009				490, 840
3/4-0/05 3 10 7465253 044- 3/4-0086 1 10 7465163 015 3/5-0037 1 10 7465163 015 3/5-0039 8 10 RAM 4K D 0/5PEC 12/ U69-C 3/5-0042 1 10 V/060 INTERFACE U57 3/6-0206 1 10 RRD 390-0003 1 10 RED RED	010-41				09,034
314-0086 1	14-010				J
315-0031 1	14-008			741516	015
315-0031 1					
315-0039 & 1C RAM 4K P O'SPECIZIO U69- 315-0042 1C VIDEO INTERFACE U57 316-0206 1C PROM 32X8 CTL U14 390-0003 LED RED D2	3/5-003	_		280	CN/6
315-0042 1	3/5-003			RAM 4KD	-691
3/6-02061	3/5-004			07011	75.0
316-02061 1 12 PROM 32X8 CTL 390-00031 1 LED RED					
390-0CC3 1 LED RED D	020-91			PROM 32X8	710
	000-068			F 0 R	7.2

	Gromlin Industries, Inc.	96	PARTS		00-005 8H 4 D
9	San Diego, California 92/23		LIST	DUAL GAME V. 1.C.	
ITEM	PART NO	QTY	PER ASSY	DESCRIPTION	REF DES
41	471-0101	-		RES 100 OHM 1/2W5%	R5
42	471-0102	4/		RES IK OHM 1/2W5%	R11-R1319-24,26-28,39,40
43	471-0103	m		IOK OHM	R10, R34 R35
44	471-0104	ભ		RES 100K OHM 1/2W 5%	R1, R2, R7
45	471-0183	2	_	RES IBKOHM 1/2W5%	R30, R36
46	0720-114	n		RES 22 OHM 1/2 W5%	R14-R16
47	1220-174	_		RES 220 OHM 1/2 W5%	R33
48	471-0331	7		RES 330 OHM 1/2 W5%	R3,R4, R6, R17, R18, R31, R32
49	471-0471	_		RES 470 OHM 1/2 W5%	RB
50	471-0472	2		RES 4.7KOHM 1/2W5%	R9, R37
15	475-0001	_		POT 10K CAR PCMTV	R38
52	477-0002	2		RES PACK 15 X 2.2K	RPI, RPZ
53	481-0001	_		DIODE IN4002	40
54	481-0006	2		DIODE 1N914 / 1N4148	01,03
55	482-0010			XSTR PE 8050	m O
56	482-0014	4		XSTR 2N4401	01,02,04,05
21	510-0043	1		SWITCH 6 POS DIP	SWI
58	152-0007	7		CAP FILM . 00/mf 250V	C76,C77

SO ENGR SO APPR COJS RH COJS RH COJS RH RH R	2	emlin Industries, San Bego, California 92123	Gremlin Industries, Inc. San Dego, California 92133	PARTS LIST	CARNIVAL SOUND		800-3057	SH	/ BEV
DATE CHECK DATE CHANGE CHANGE				1 110	DRAWN W	- 8 2	GR	5	4
DATE REVISION DESCRIPTION DRAFT CHECK 4-29-36 RELEASED (4) 38 RH 5-39-80 PER ECN 409 4 ® (4) 38 RH	H		G AKE D	31 t E	CHECK CAN		PR		
4-29-80 RELEASED 6-39-80 PER ECN 409年® 6-10-10-10-10-10-10-10-10-10-10-10-10-10-	LTR	-	,	REVI	DESCRIP		DRAFT	СНЕСК	APPR
5-3980 PER ECN 409 & ®	∢	4-24-80	E	SED			8000	RH	₩.
	a	5-30-80		N 409	1		8100	KH	RH
	. ,						,		
	, ,	-							
	, ,								
		,							

	Gremlin Industries, Inc.	ne.	PARTS	TITLE A S.S.EMBLY BC)57
	San Diego, California 92123				DWG NO OF 6 REV
ITEM NO	PART NO	_ Σ -	PER ASSY	DESCRIPTION	REF DES
_	150-0004	3		CAP E 104 f 25V	C6, C/6, C22
0	151-0001	01		CER	C13,C18,C27,C28,C30,
		,			633,637,651,653,654
N	151-0005	/		CAP CER 680 P 50V	236
4	151-00-12	12		CER .	620, 621, 634, 635, 639, 64
				,	C43,C45,C55,C56,C63,C64
S	151-0018	-			63
e	151-0052	7		ایما	CB,C15
6	152-0001	9		CAP FILM .IMf 100V	C4, C5, C10, C12, C14, C29,
					C38,C40,C41
Ø	152-0004	2		CAP FILM . 0022 LAF 50V	028,660
8	152-0005	ထ			62,69,626,625,631,
				\dashv	C+4, C57, C5B
10	152-0007	2		CAP FILM . OOI Let 250V	C19, C52
//	152-0009	7			261,262
12	152-0010	3		- 1	024,049,050
13	152-0012	1		CAP FILM . 047/4 \$ 200V	CII
14	152-0018	_		CAP FILM . 01 mf 250V	61
15	153-0003	5			67,617,623,647,648
16	153-0007	2		CAP TANT G.E Lef 25V	C32, C46
//	170-0199	_		P C BOARD	
		1			

	Comple Inductries Inc.		PARTS	TITLE ASSEMBLY 1800-3057	057 SH3 B
	San Diego, California 92123		LIST	CARNIVAL SOUND DWG NO	0F 6
ITEM	PART NO	Σ Δ	PER ASSY	DESCRIPTION	REF DES
18	212-0021	2		CONN IOPIN M PLZD	
61	313-0008	50		IC LM348 U5,U	U5,UB-U10,U14
20	3/4-0001	-		IC NESSS UT	
171	3/5-0035	_		IC MM5837 U6	
22	315-0043	7		IC CD 4069 UI-U	01-04,00-013
23	1010-174	9		RES 100 OHM 1/2W 5% R40,R4	1/2 W 5% R40, R49, R59, R113, R118, R121
72	471-0102	ري		RES IK OHM 1/2W 5% RTG,	R76, R86, R127
25	471-0103	21		RES 10K OHM 1/2W 5% RII, R33	RII, R33, R35, R53, R54, R69, R71,
				R82,R83,I	R82,R83,R85,R102,R103,R106,R106
				R109-R1	R109-R111, R128, R129, R134, R142
26	471-0104	24		RES I OOK OHM 1/2W 5% RI,RID,R	RI, RIO, RIG, R26, R30, R34, R37,
				R45,R46	R45, R46, R56, R66, R79,
				R81,	R104, R112, R115, R119.
				RI25,RI3	R125, R130, R132, R136, R137, R139
27	471-0105	24		RES IMEG OHM 1/2 W 5% R3, R4, R	R3, R4, R8, R20 - R22, R25, R28,
				R31, R31,	R32, R39, R46, R56, R61, R71, RT3, R80, R94,
				R95,R100	R95, R100, R123, R126, R143-R145
28	471-0153	_		RES 15K OHM 1/2 W 5% RTO	
62	471-0154	_		RES 150K OHM 1/2 W 5% R60	
30	471-0222	7		RES 2.2 K OHM 1/2 W 5% RI31, RI35	R135
31	471-0223	=		RES 22K OHM 1/2 W 5% R38, R	R38, R41, R42, R44, R47,
				`	R 5 7, R 6 5, R 6 7, R 7 8, R96, R14, R124
32	471-0224			RES 220K OHM 1/2W 5% R98	

U	Gremlin Industries, Inc.	j	PARTS LIST	MARNINA! SAIIND 800-3057	SH 4
ITEM		QTY I	PER ASSY		
9	PART NO			DESCRIPTION	REF DES
33	471-0225 8	2		RES 2.2 MEG OHM VZW 5% R2,R5-R	R 2, R5-R7, R/4, RI5, RIB, R29
34	471-0332			RES 3,3 K OHM 1/2W5% R138	
35	471-0333 2	~ 1		RES 33K OHM 1/2W 5% R91, R140	40
9€	471-0334 4	*		330K OHM 1/2W5%	20, RI 33, RI41
37	471-0395 4	74		RES 3.9 MEG DHM 1/2 W 5th R9, R19	R9, R19, R23, R24
38					
39	1 2740-174			RES 4.7 K OHM 1/2 W 5% R74	
40	471-0473 15	70		A7K OHM	R36,R43,R50-R52
				R 63, R 90,	R 63, R90, R97, R99, R107, R108
,		_		R146, R89	383
4	471-0474 9	~		RES 470K OHM 1/2W 500 R12, R17	R12, R17, R31, R64, R68, R84
-				R92, R	R92, RIDI, RIIT
42	471-0512 3	3		RES 5.1K OHM 1/2W 5% R75,R	R75, R87, R93
43	471-0683 1			RES GBK OHM 1/2 W 5% R55	
44	471-0754 2	0.1		RES 750K OHM 1/2 W 5% R72, R122	2122
45	471-0823 1			RES BZK OHM 1/2W501 R8B	
46	481-0006 34	4.		- 1a	D34
47	481-0008 4	, <u></u>		DIODE ZENER IN5231 D35-	-D38
48	482-0006 3	2		2N4403	415
49	482-0014 14	4		XSTR 2N4401 61-93,9	41-93,96-912,017-020
50	482-0023 3	~		X5TR 2N4093 94,9	94,95,916
	TO THE PERSON OF	ACTOR NAMED IN			

TEM PART NO QTY PI NO 1 250 - 0285 1 2 220 - 0066 1 1 3 220 - 0066 1 1 4 370 - 0005 2 1 5 800 - 0065 1 1 6 240 - 0001 1 1 10 510 - 0046 1 6 11 420 - 0046 1 6 12 250 - 0046 1 2 13 475 - 0007 1 6 14 2 4 1 15 2 2 1 16 2 2 1 17 2 2 2 18 3 3 3 19 4 2 2 10 5 4 2 10 5 4 4 10 5 4 4 10 5 <th></th> <th>DUAL SBA</th> <th>DWG NO OF 4 REV</th>		DUAL SBA	DWG NO OF 4 REV
250 - 0285 220 - 0066 220 - 0035 370 - 0002 800 - 0085 420 - 0068 475 - 0007 510 - 0014	Y PEK ASSY		
250 - 0285 220 - 0066 220 - 0035 370 - 00085 800 - 0085 420 - 0001 475 - 0007 510 - 0014		DESCRIPTION	KEF DES
220 - 0035 220 - 0035 370 - 0002 800 - 0085 240 - 0001 250 - 0068 475 - 0007 510 - 0014		CASH DOOR MODIFIED	
220 - 0035 370 - 0002 800 - 0085 240 - 0001 250 - 0068 420 - 0046 475 - 0007 510 - 0014		COIN MECHANISM	
370 - 0002		LOCK FORT LOCK IR	
800 - 0085 240 - 0001 250 - 0068 420 - 0046 475 - 0007 510 - 0014		OPTO-150LATOR 71L 139	
240 - 0001 250 - 0068 420 - 0046 475 - 0007 510 - 0014		ASSY PHOTO CALCULATOR	
250 - 0068 420 - 0046 475 - 0007 510 - 0014		KNOB, VOL. CONTRUL	
420 - 0046 475 - 0007 510 - 0014		BRACKET	
475-0007 510-0014 510-0014		DECAL, VOL. CONTROL	
510 - 0014		POTENTIOMETER 10KD CAR. PNLMT.	
1500-015		SWITCH, SLIDE, SPDT	
1500-015		SCREW 8-32×2" TAMPER-PRIDE	F
1500-015		SCREW, MECH. P.H. PHL $4-40x\frac{1}{2}$ "	
1500-015	-	SCREW, SHT MTL. PH. PHL#6	
1500-015		SCREW, MECH PH. PHL 6-32× 左"	
1500-015		WASHER, FLAT # 6	
510-0051		WASHER, LOCK SPLIT # 6	
510-0051		WASHER, LOCK #4	
510-0051		WASHER, LOCK SPLIT # 8	
510-0051		NUT HEX 8-32	
1500-015		NUT HEX 6-32	
510-0051		NUT HEX 4-40	
-019		ALUMINUM RIVETS !"	
		SWITCH PUSH BUTTON SLIDE	
24 220-0150 1		COIN MECH SBA	
25 800-0076 1		PHOTO COIN CALC	

A REV																
SH 3 OF 4	DES															
800-308/ DWG NO	REF						;									· · · · · · · · · · · · · · · · · · ·
8							·									The state of the s
TITLE ASSEMBLY COIN MECH DUAL SBA	DESCRIPTION	COUNTER DIGITAL														
			+													
PARTS LIST	PER ASSY														_	
	QTY I	J														
ies, II																
Gremlin Industries, Inc. san Diego, Galifornia 92123	PART NO	220-0008												~		
.	TEM	26									-					

