ADJUSTMENT ON GAME PC BOARD (CRIME CITY G25 00540A)

CONNECTOR (JAMMA)

	SOUND VR	
B DI	⊕) INCREAS PSW	E

☆ THE CONTROL OF THIS GAME USES ONE 8-WAY JOYSTICK AND 2 BUTTONS. (PAIR-CONTROL PANEL)

COUNTECTOR (JAMMA)										
SOLDER SIDE			COMPONENTS SIDE							
GND	A	1	GND							
GND	В	2	GND							
+ 5 V	C	3	+5V							
+5V	D	4	+ 5 V							
-5V	E	5	-5V							
+12V	F	6	+12V (+13V)							
POST	H	7	POST							
COIN COUNTER (B)	J	8	COIN COUNTER (A)							
COIN LOCKOUT (B)	K	9	COIN LOCKOUT (A)							
SPEAKER (-)	L	10	SPEAKER (+)							
	M	11								
VIDEO G	N	12	VIDEO R							
VIDEO SYNC	P	13	VIDEO B							
SERVICE SW	R	14	VIDEO GND							
TILT SW	S	15								
(COIN B)	T	16	COIN A							
2P SELECT	U	17	1P SELECT							
2P UP	V	18	1P UP							
2P DOWN	W	19	1P DOWN							
2P LEFT	X	20	1P LEFT							
2P RIGHT	Y	21	1P RIGHT							
2P ATTACK BUTTON	Z	22	1P ATTACK BUTTON							
2P JUMP BUTTON	а	23	1P JUMP BUTTON							
	b	24								
	С	25								
	d	26								
GND	е	27	GND							
GND	f	28	GND							

SEFORE CHANGING THE SETTINGS OF DIP SWITCHES. TURN THE POWER OFF.

SETTING OF DIP SWITCH A

(*) : FACTORY SETTING

						(- /		JAI DE	
SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
REGISTRATION OF	* SCRIBBLE	OFF							·
PLAYER'S NAME	3 LETTERS	ON	1	ŀ	1				
SCREEN ROTATION	* NORMAL		OFF	1					
	REVERSE	1	ON	1					
TEST MODE	* NORMAL GAME			OFF	1				
	TEST MODE	1		ON	1				
ATTRACT SOUND	* WITH				OFF	1			
	WITHOUT				ON				
PLAY PRICING COIN A	* 1 COIN 1 PLAY					OFF	OFF	1	
	2 COINS 1 PLAY	1				ON		į	
	3 COINS 1 PLAY					OFF	ON		
	4 COINS 1 PLAY					ON	UN		
	* 1 COIN 2 PLAYS							OFF	OFF
PLAY PRICING	1 COIN 3 PLAYS							ON	Urr
COIN B	1 COIN 4 PLAYS]						OFF	ON
	1 COIN 6 PLAYS							ON	UN

REGISTRATION OF PLAYER'S NAME:SCRIBBLE
THE PLAYER IS AT THE TOP CAN REGISTER DRAWING WITH BULLET
MARKS (MAX.:300 SHOTS).

SETTINGS	ICH		POSITIONS	1	2	3	4	5	6	7	8
SETTINGS	т.	DANE			-				U	<u>'</u>	L
GAME DIFFICULTY EASY (A) → DIFFICULT(D)	*	RANK	В	OFF	OFF	1					
		RANK	A	ON							
		RANK	C	OFF ON							
		RANK	D								
BONUS POINTS	*	80,00	O PTS.			OFF	OFF				
		80.00	00 PTS.EVERY			ON					
		160,0	000 PTS.			OFF	ON				
		NO BO	NUS			ON					
NUMBER OF PLAYER(S)	* 3						OFF	OFF			
	2						ON	OFF			
	1							ON			
	5						ON	UN			
CONTINUE MODE	* FREE								OFF	OFF	
	TILL 8 TIMES								ON	orr	
	TILL 5 TIMES								OFF	ON	
	NO CONTINUE									ON	011

CRIME

CRUSH OUT THE CRIME!

WE'RE THE SUPREME LAW!!





HIGH JUMP



ATTACK JUMP

<MOVEMENT OF DETECTIVES>
•THE MOVEMENT IS CHANGED DEPENDING ON THE TURNING DIRECTION OF THE 8-WAY JOYSTICK AND THE PRESSING BUTTONS.

TURN OVER IN MIDAIR (HIGH JUMP

JUMP BUTTON)





LOW JUMP (JUMP BUTTON)

WALKING (LEVER-LEFT/RIGHT)

TURN OVER-ATTACK (LEVER-DIAGONAL +

JUMP BUTTON)

SHOT IN SQUAT (LEVER-DOWN





PUNCH ATTACK BUTTON

PICK UP FOLLOWING ITEMS!!

DRUG: POINTS ARE ADDED TO THE SCORE.
AUTOMATIC-GUN: THE SHOT PIERCE ENEMY'S
BODY

MACHINE-GUN: SHOT IN SUCCESSION.

PROTECTOR: IT PROTECT THE DETECTIVE'S BODY

FROM ENEMY'S ATTACK.

