CANON BALL

DIP SWICH.

		1	2	3	4	5	6	7	8
rest mode	EST MODE YES NO								
DIFFIC- ULTY SET	NORMAL HARD HARDEST EASY		OFF ON OFF ON	OFF OFF ON ON					
SCREEN MODE	NORMAL REVERSE				OFF ON				
DEMO SOUND			1			ON OFF			
COIN/ CREDIT	1Coin1Credit 1Coin2Credit 1Coin3Credit 1Coin4Credit 2Coin1Credit 2Coin3Credit 3Coin1Credit 4coin1Credit						OFF ON OFF ON OFF ON OFF	OFF OFF ON OFF OFF ON ON	OFF OFF OFF ON ON ON ON

SOLDERING SURFACE		PART INST.SURFACE	
The state of the s			
Loit GND	1		a se se anna a
GND	2	GND	
• +5V	3	+5V	
+5V	4	+5V	
	5		
	6		
COIN COUNTER	7		
COIN 2	8 9	COIN 1	
AP Spiced		2P Speed	
1-6P Select	10	1-6P Start	
1P RIGHT	11	1P LEFT	
2P UP '	12	1P UP	A BENERAL STREET
2P RIGHT	13	2P LEFT	E P
1P DOWN	14		BUSINE .
GND	15	GND	
TV GREEN	16	TV RED	
SYNC.	17	TV BLUE	
SPEAKER +	18	2P DOWN	
+ 12V	19	+ 12V	
+ 12V	20	· + 12V	A State
GND	21	GND	
GND	22	GND	

DIP SW

		•						;	•
		1	2	3	4	- 5	6	7	3
Palle_	3				on	on	on		
~ 0 -	4				off	on	on		
	5				012	off	on		
	6				off	off	on.	1	
	7				on	on	off	S. W. Marson	
	8.				off	on	off		
	9				on	off	off		
	10				017	off	off		
Tisch				on					
Stand				off		•			a**
**************************************		off	off					off	off
	i								•
						-		12115	1200
(etc)	r		1	44.4				1	1
							1.	N	

. .\$\$* •