

Drawing Package Supplement

to

MISSILE COMMAND™

Operation, Maintenance, and Service Manual

Contents of this Drawing Package

Game Wiring Diagram, Coin Door and Power Supply Microprocessor and Sync Video Generator Input and Output Circuitry Sheet 1, Side A Sheet 1, Side B Sheet 2, Side A Sheet 2, Side B

Sheet 2, Side A Sheet 2, Side B

ATARI*

1980 © ATARI INC.

DIAGNOSTIC TESTS

Instruction Use of Test

1. Set self-test switch to an position. Note: entering self-

Press aipha base fire butand slam switch simultabusly. Release slam switch
significantly, Release slam switch
signifi

Preas omaga base fire but.

Vertical color bars appear on the acrean, to permit color hus and brightness and aisan weith a milutabously. Release slam switch is a first to be suffered to the substance of the support o

. Press delta base fire buton and slam switch simulta-(fakes about 47 seconds). After this, a blue RAM OK message appears on the sc

 Test no. 4 display
 Bad chip loca

 BAD RAM 8
 P4

 BAD RAM 7
 N4

 BAD RAM 6
 M4

 BAD RAM 5
 L4

 BAD RAM 4
 K4


 BAD RAM 3
 J4


 BAD RAM 2
 H4


 BAD RAM 1
 F4

Set self-test switch to off
 Check attract mode display and readjust brightness if necessary position.

Sheet 1, Side A DP-158-01 1st printing

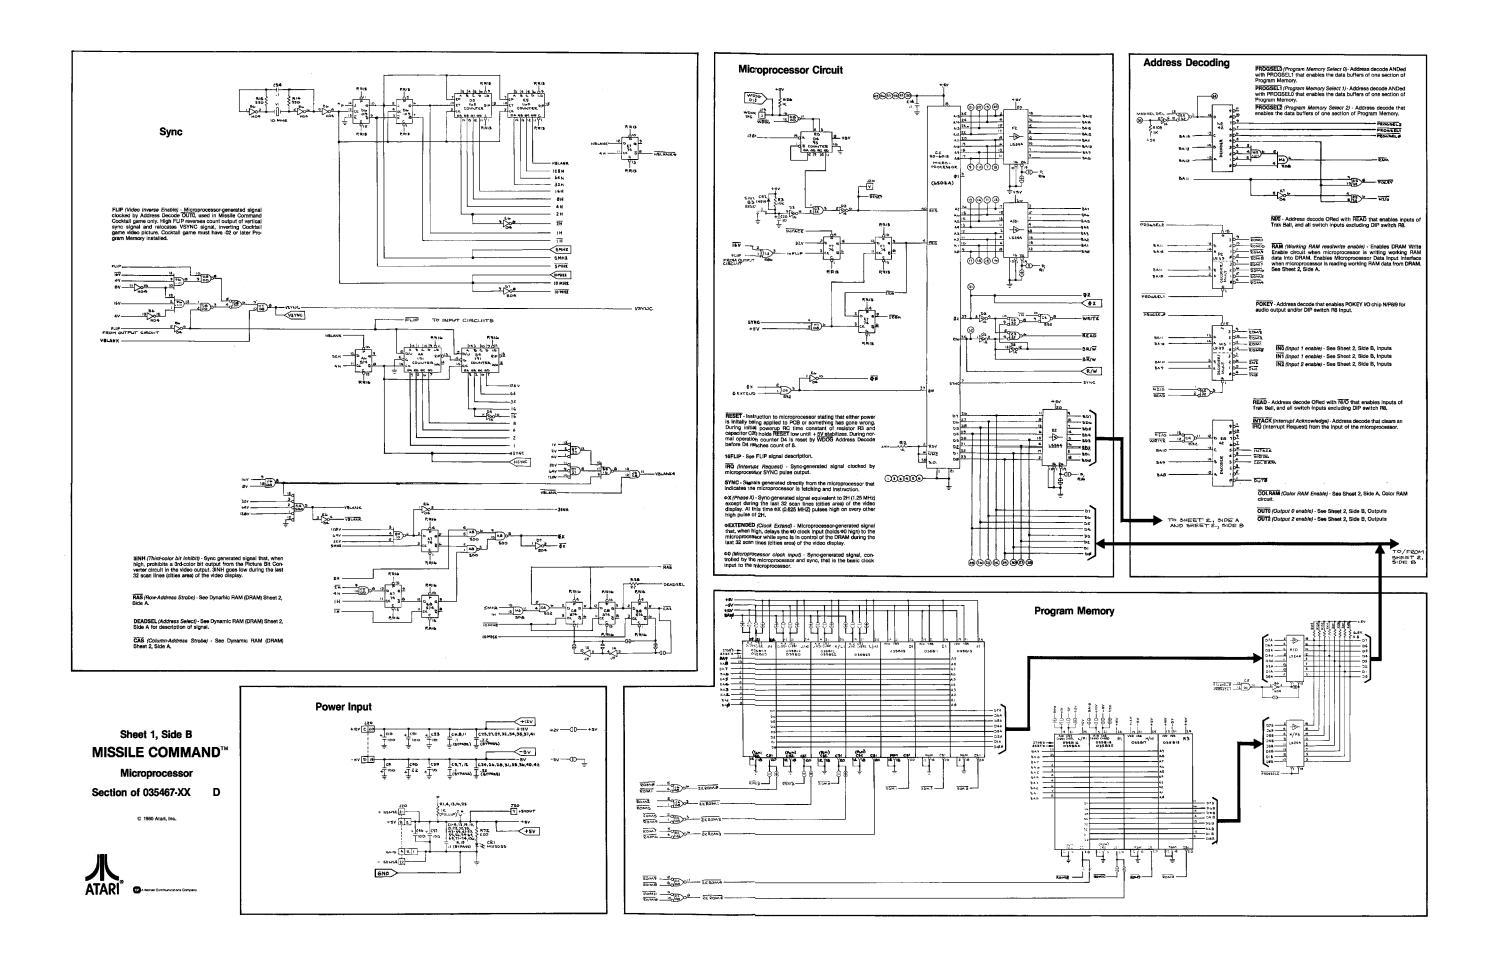

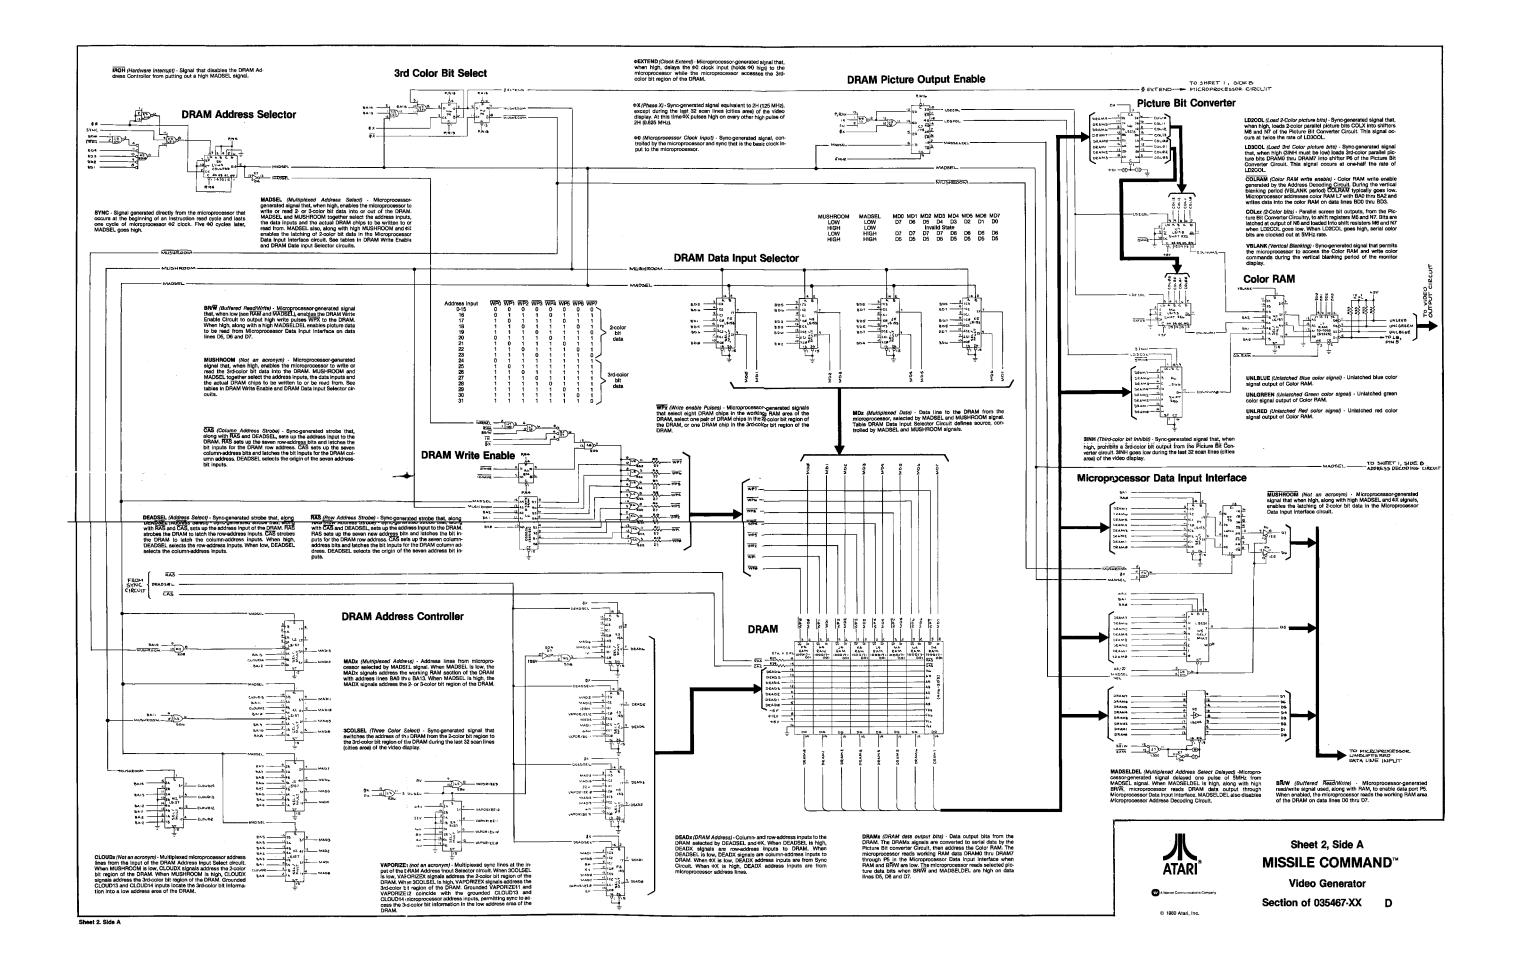

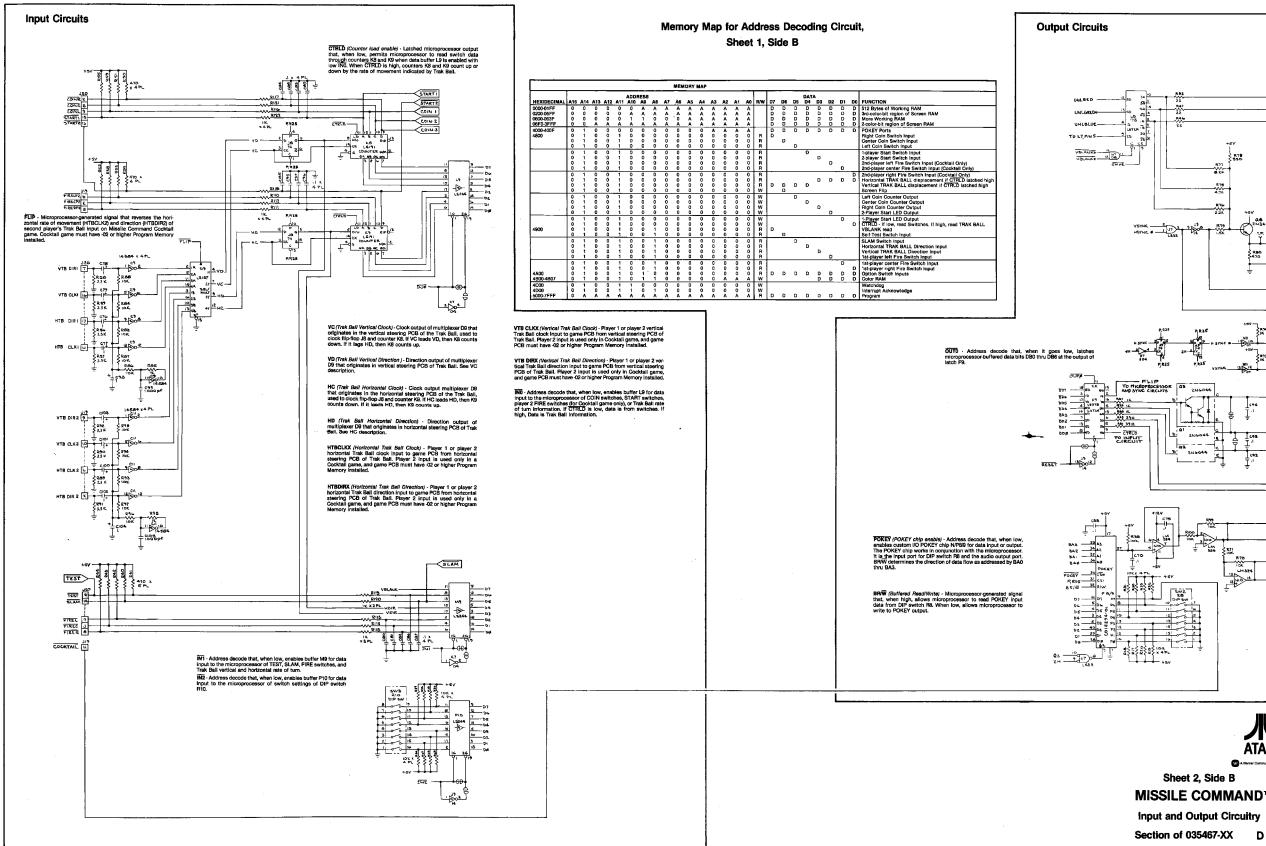

Sheet 2, Side B DP-158-02 1st printing

ATARI"

Sheet 2, Side B MISSILE COMMAND™ Input and Output Circuitry