TECMO, INC.

Victoria Business Park 18005 S. Adria Maru Lane, Carson, CA 90746 Phone: (213) 329-5880, Fax: (213) 329-6134

January 25, 1989

To All Distributors,

Ugh! A typo error in the edge connector diagram for Ninja Gaiden. That's right! I didn't catch it until after a few hundred kits went out. Please make note of the corrections shown below and let operators know of the possibility.

I am very sorry and will be flogged at high noon.

Jim

 
Edge Connector:

Solder Side	No.	No.	Parts Side
Player 2	U	17	Player 1
Grab	Z	22	Grab
Attack	a	23	Attack
Jump	ъ	24	Jump

Edge Connector


SOLDER SIZE	NO.	NO.	PARTS SIDE
BLK GND	Α	1	GND
BLK GND	В	2	GND
260 +5V	С	3	+5V
R 60 +5V	D	4	+5V
BROWN	E	5	
BCUE +12V	F	6	+12V
KEY	Н	7	KEY
COIN COUNTER 2	J	8	COIN COUNTER 1 NC
NC COIN OUT 2	К	9	COIN OUT 1 NC
BLIC SPEAKER (-)	L	10	SPEAKER (+) WHITE
	M	11	
VIDEO GREEN	N	12	VIDEO RED
WHITE VIDEO SYNC		13	VIDEO BLUE
NC SERVICE SW	R	14	VIDEO GAD NC
NC. RESETSW	S	15	NC
NC COIN 2	Т	16	COIN SW1 WHITE
RSO P2	U	17	PI BLK
BROWN UP	٧	18	UP CRANGE
WHITE DOWN	w	19	DOWN FRED
Green LEFT	X	20	LEFT GROEN
WALTE RIGHT	Y	21	RIGHT RELEGIALE
BROWN ATTACK GRAB	Z	22	GROB ALLACK WHITE
YELLON JUMP ATTICK	. a	23	ATTACK JUMP WHITE
GREEN GRAB UMMP	b	24	JUMP GRAB YESCH
	С	25	,
	d	26	
VIDED GND	е	27	GND
GND	f	28	GND

JOYSTICK LEVER - 8 directions



Dip Switch Settings

• Position of Dip SW

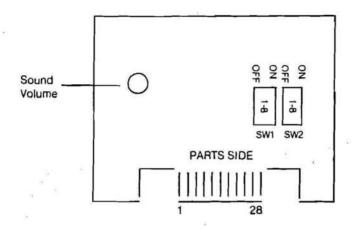

• Dip Switch A

DIP SWITCH A		1	_ 2	3	4	5	6	7	8
	1 COIN 1 CREDIT	OFF	OFF	OFF	- 13		35		
	1 COIN 2 CREDIT	ON	OFF	OFF					
	1 COIN 3 CREDIT	OFF	ON	OFF					
COIN 1	1 COIN 4 CREDIT	OFF	OFF	ON					
	2 COIN 1 CREDIT	ON	ON	OFF					
	3 COIN 1 CREDIT	ON	OFF	ON					
	4 COIN 1 CREDIT	OFF	ON	ON					
	5 COIN 1 CREDIT	ON	ON	ON					
COIN 2	1 COIN 1 CREDIT				OFF	OFF	OFF		
	1 COIN 2 CREDIT				ON	OFF	OFF		
	1 COIN 3 CREDIT				OFF	ON	OFF		
	1 COIN 4 CREDIT				OFF	OFF	ON		
	2 COIN 1 CREDIT				ON	ON	OFF		
	3 COIN 1 CREDIT		9		ON	OFF	ON		
	4 COIN 1 CREDIT				OFF	ON	ON		
	5 COIN 1 CREDIT				ON	ON	ON		
FLIP THE	NORMAL							OFF	
SCREEN	FLIP							ON	
DEMONSTRATION	SOUND								OF
SOUND	NON SOUND								ON

• Dip Switch B

DIP SWI	тсн в	1	2	3	4	5	6	7	8
	1	OFF	OFF						
THE NUMBER	2	ON	OFF						
OF STOCK PHYSICAL STRENGTH	3	OFF	ON						
	0	ON	ON						
	3			OFF	OFF				
	4			ON	OFF			000	
	5			OFF	ON				
	2			ON	ON				
DIFFICULTY	NORMAL				5	OFF	OFF		
	TBL 1					ON	OFF		
	TBL 2					OFF	ON		
	TBL 3					ON	ON		