

# 婆娑羅 (バサラ)

## DIP SWITCH [ 1 ]

		1	2	3	4	5	6	7	8
<b>Game Style</b> (ゲーム形式)	COIN PLAY	OFF							
	FREE PLAY	ON							
<b>Screen Position</b> (モニター画面反転)	NORMAL		OFF						
	REVERSE		ON						
<b>Test Mode</b> (テストモード)	NORMAL			OFF					
	TEST			ON					
<b>Demo Sound</b> (デモ音)	ON				OFF				
	OFF				ON				
<b>Coin A</b> (プレイ料金)	1COIN = 1CREDIT					OFF	OFF		
	1COIN = 2CREDIT					ON	OFF		
	2COIN = 1CREDIT					OFF	ON		
	2COIN = 3CREDIT					ON	ON		
<b>Coin B</b> (プレイ料金)	1COIN = 1CREDIT							OFF	OFF
	1COIN = 2CREDIT							ON	OFF
	2COIN = 1CREDIT							OFF	ON
	2COIN = 3CREDIT							ON	ON

## DIP SWITCH [ 2 ]

		1	2	3	4	5	6	7	8
<b>Difficulty</b> (難易度)	NORMAL	OFF	OFF						
	EASY	ON	OFF						
	DIFFICULT	OFF	ON						
	MORE DIFFICULT	ON	ON						
<b>Bomber Stock</b> (爆弾数)	2			OFF	OFF				
	3			ON	OFF				
	1			OFF	ON				
	0			ON	ON				
<b>Players Count</b> (残機数)	3					OFF	OFF		
	5					ON	OFF		
	2					OFF	ON		
	1					ON	ON		
<b>Game Voice</b> (ゲーム中セリフ)	ON							OFF	
	OFF							ON	

\*出荷時の設定は、SW 1・2ともに全てOFFです。

# CONNECTOR DIAGRAM

SOLDER SIDE	NO,	NO,	PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
誤挿入防止キ一	H	7	誤挿入防止キ一
COIN COUNTER 2	J	8	COIN COUNTER 1
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P A BUTTON	Z	22	1P A BUTTON
2P B BUTTON	a	23	1P B BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

## CONTROL PANEL

## DIP SW POSITION

