


# DRAGONNINJA

T.M.

DIP SWITCH 1					
No.	SETTING				REMARKS
1 2	OFF	ON	OFF	ON	COIN/CREDIT RIGHT SELECTOR
	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	2 1	3 1	
3 4	OFF	ON	OFF	ON	COIN/CREDIT LEFT SELECTOR
	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	2 1	3 1	
5	OFF				取扱禁止 DON'T CHANGE
6	OFF		ON		ATTRACT MODE SOUND
	YES		NO		
7	OFF		ON		SCREEN ROTATION
	NORMAL		REVERSE		
8	OFF		ON		CONTROL PANEL
	TABLE		UPRIGHT		

DIP SWITCH 2					
No.	SETTING				REMARKS
1 2	OFF	ON	OFF	ON	NUMBER OF LIVES
	OFF	OFF	ON	ON	
	3	4	2	~	
3 4	OFF	ON	OFF	ON	GAME DIFFICULTY
	OFF	OFF	ON	ON	
	NORMAL	EASY	HARD	HARDEST	
5	OFF		ON		CONTINUE MODE
	YES		NO		
6	OFF				DON'T CHANGE
7	OFF				
8	OFF				

CR 7 E-56DA-3.96 E (HRS) 3.96mm Pitch  
 CONNECTOR 1168-056 -009 (KEL) 3.96mm Pitch

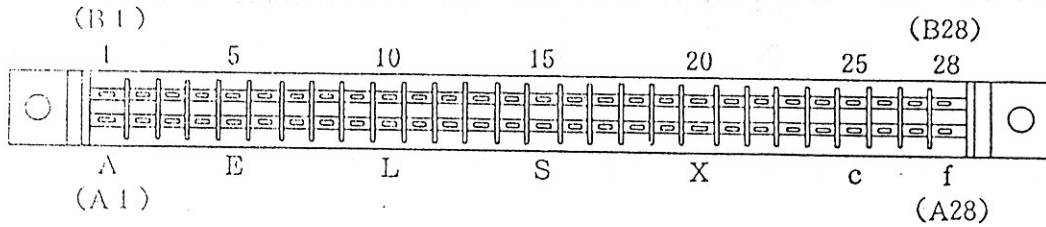

SOLDER SIDE	PIN #		PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
MISTAKEN INPUT PREVENTION	H	7	MISTAKEN INPUT PREVENTION
COIN COUNTER 2	J	8	COIN COUNTER 1
(GND)	K	9	(GND)
SPEAKER (-)	L	10	SPEAKER (+)
AUDIO (GND)	M	11	AUDIO (+)
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GND
	S	15	
COIN SWITCH 2	T	16	COIN SWITCH 1
START SWITCH 2	U	17	START SWITCH 1
2P CONTROL 1 UP	V	18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W	19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X	20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y	21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z	22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a	23	1P CONTROL 6 PUSH 2
2P CONTROL 7 PUSH 3	b	24	1P CONTROL 7 PUSH 3
2P CONTROL 8 SPARE 1	c	25	1P CONTROL 8 SPARE 1
2P CONTROL 9 SPARE 2	d	26	1P CONTROL 9 SPARE 2
GND	e	27	GND
GND	f	28	GND