

Software DIP Descriptions for "Nightmare in the Dark" —OVER SEA VERSION—

[How to Change Settings]

1. Move the joystick up and down to match the cursor to the item you want to adjust.

2. Press the A Button and proceed in the stated order to adjust settings.

[Initial Description Screen]

CONTINUE	INFINITE
GAME RANK	LEVEL 4
DEMO SOUND	ON
CREDIT DISP	ON
LEVEL DISP	OFF
HOW TO PLAY	ON
※COUNTRY	OTHERS

[Game Settings]

CONTINUE	Set the Continue Play option. (Display: INFINITE/WITHOUT/1 time~99times)
GAME RANK	Changes game difficulty to 1 of 8 levels. (Display: Level 1 <Very easy> ~ Level 8<Very hard>
DEMO SOUND	Determines whether sound is played during game demos. (Display: ON/OFF)
CREDIT DISP	Determines whether the credit display is shown. (Display: ON/OFF)
LEVEL DISP	Determines whether the level(GAME RANK) display is shown. (Display: ON/OFF)
HOW TO PLAY	Determines whether the "How to Play" demo is shown at the start of the game. (Display: ON/OFF)
※[COUNTRY]	Allows cabinet settings to be made on US cabinets and those of other countries. (Display: OTHERS/USA)

※.....The [COUNTRY] display item does not appear in Japanese and US cabinets.



SETTING UP THE SOFT DIP ON THE MULTI VIDEO SYSTEM



HARDWARE TEST
SETTING UP THE HARD DIP
▶ SETTING UP THE SOFT DIP
BOOKKEEPING
SETTING UP THE CODE NUMBER
SETTING UP THE CALENDAR
EXIT

1. TURN POWER ON.

2. PRESS THE TEST BUTTON
INSIDE THE CABINET.

3. THE FOLLOWING SCREEN
WILL BE DISPLAYED WILL
APPEAR.

CABINET SET UP
SLOT 1 (GAME TITLE)
▶ SLOT 2 (GAME TITLE)
SLOT 3 (GAME TITLE)
SLOT 4 (GAME TITLE)
SLOT 5 (GAME TITLE)
SLOT 6 (GAME TITLE)

4. SELECT THE GAME TITLE
YOU WANT AND PRESS
“A” BUTTON TO VIEW THE
SOFT DIPSETTING OF
EACH INDIVIDUAL GAME.