

# DRAGONNINJA

T.M.


| DIP SWITCH 1 |                  |        |         |        |                               |
|--------------|------------------|--------|---------|--------|-------------------------------|
| No.          | SETTING          |        |         |        | REMARKS                       |
| 1            | OFF              | ON     | OFF     | ON     | COIN/CREDIT<br>RIGHT SELECTOR |
| 2            | OFF              | OFF    | ON      | ON     |                               |
|              | 1 COIN<br>1 PLAY | 1<br>2 | 2<br>1  | 3<br>1 |                               |
| 3            | OFF              | ON     | OFF     | ON     | COIN/CREDIT<br>LEFT SELECTOR  |
| 4            | OFF              | OFF    | ON      | ON     |                               |
|              | 1 COIN<br>1 PLAY | 1<br>2 | 2<br>1  | 3<br>1 |                               |
| 5            | OFF              |        |         |        | 取扱禁止 DON'T CHANGE             |
| 6            | OFF              |        | ON      |        | ATTRACT MODE SOUND            |
|              | YES              |        | NO      |        |                               |
| 7            | OFF              |        | ON      |        | SCREEN ROTATION               |
|              | NORMAL           |        | REVERSE |        |                               |
| 8            | OFF              |        | ON      |        | CONTROL PANEL                 |
|              | TABLE            |        | UPRIGHT |        |                               |

| DIP SWITCH 2 |         |      |      |         |                 |
|--------------|---------|------|------|---------|-----------------|
| No.          | SETTING |      |      |         | REMARKS         |
| 1            | OFF     | ON   | OFF  | ON      | NUMBER OF LIVES |
| 2            | OFF     | OFF  | ON   | ON      |                 |
|              | 3       | 4    | 2    | ~       |                 |
| 3            | OFF     | ON   | OFF  | ON      | GAME DIFFICULTY |
| 4            | OFF     | OFF  | ON   | ON      |                 |
|              | NORMAL  | EASY | HARD | HARDEST |                 |
| 5            | OFF     |      | ON   |         | CONTINUE MODE   |
|              | YES     |      | NO   |         |                 |
| 6            | OFF     |      |      |         | DON'T CHANGE    |
| 7            | OFF     |      |      |         |                 |
| 8            | OFF     |      |      |         |                 |



FLIPPERSPILL.COM

CR 7 E-56DA-3.96 E (HRS) 3.96mm Pitch  
 CONNECTOR 1168-056 -009 (KEL) 3.96mm Pitch

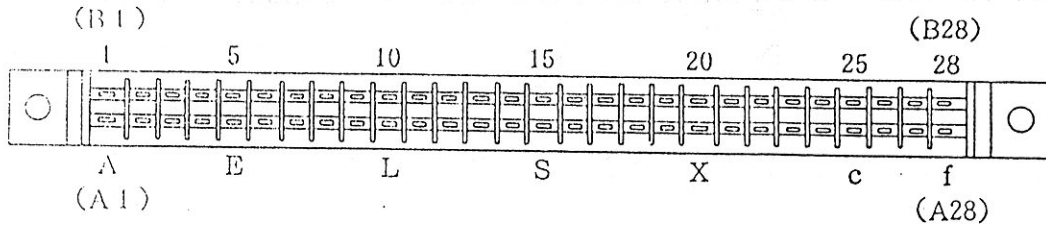

| SOLDER SIDE               | PIN # |    | PARTS SIDE                |
|---------------------------|-------|----|---------------------------|
| GND                       | A     | 1  | GND                       |
| GND                       | B     | 2  | GND                       |
| +5V                       | C     | 3  | +5V                       |
| +5V                       | D     | 4  | +5V                       |
|                           | E     | 5  |                           |
| +12V                      | F     | 6  | +12V                      |
| MISTAKEN INPUT PREVENTION | H     | 7  | MISTAKEN INPUT PREVENTION |
| COIN COUNTER 2            | J     | 8  | COIN COUNTER 1            |
| (GND)                     | K     | 9  | (GND)                     |
| SPEAKER (-)               | L     | 10 | SPEAKER (+)               |
| AUDIO (GND)               | M     | 11 | AUDIO (+)                 |
| VIDEO GREEN               | N     | 12 | VIDEO RED                 |
| VIDEO SYNC                | P     | 13 | VIDEO BLUE                |
| SERVICE SWITCH            | R     | 14 | VIDEO GND                 |
|                           | S     | 15 |                           |
| COIN SWITCH 2             | T     | 16 | COIN SWITCH 1             |
| START SWITCH 2            | U     | 17 | START SWITCH 1            |
| 2P CONTROL 1 UP           | V     | 18 | 1P CONTROL 1 UP           |
| 2P CONTROL 2 DOWN         | W     | 19 | 1P CONTROL 2 DOWN         |
| 2P CONTROL 3 LEFT         | X     | 20 | 1P CONTROL 3 LEFT         |
| 2P CONTROL 4 RIGHT        | Y     | 21 | 1P CONTROL 4 RIGHT        |
| 2P CONTROL 5 PUSH 1       | Z     | 22 | 1P CONTROL 5 PUSH 1       |
| 2P CONTROL 6 PUSH 2       | a     | 23 | 1P CONTROL 6 PUSH 2       |
| 2P CONTROL 7 PUSH 3       | b     | 24 | 1P CONTROL 7 PUSH 3       |
| 2P CONTROL 8 SPARE 1      | c     | 25 | 1P CONTROL 8 SPARE 1      |
| 2P CONTROL 9 SPARE 2      | d     | 26 | 1P CONTROL 9 SPARE 2      |
| GND                       | e     | 27 | GND                       |
| GND                       | f     | 28 | GND                       |