

This document has been downloaded from:



The largest resource for amusement machines
documentation on the world wide web!



FLIPPERSPILL.COM



OPERATOR'S GUIDE

CAPCOM®

○PCB CONNECTOR

JAMMA STANDARD


○CRT MONITOR

HORIZONTAL SCREEN

○CONTROL PANEL

8 Way Joystick


Walk away from screen

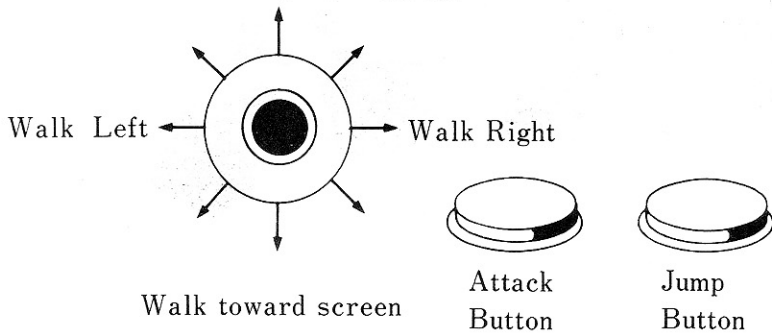

○A Death Blow performed by pushing the Attack and Jump Buttons simultaneously.

○Unable to insert more than 9 credits

○DIP SW

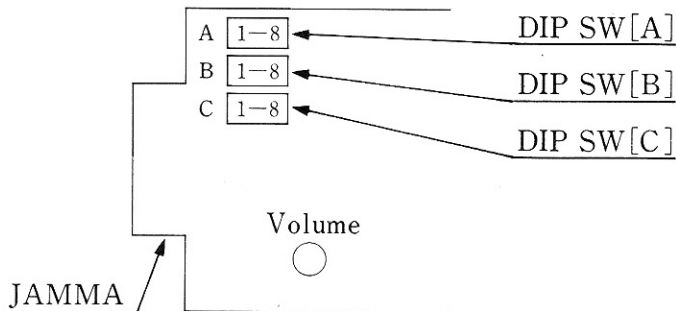

JAMMA STANDARD

Solder Side			Components Side	
GND	A	1	GND	
GND	B	2	GND	
+5V	C	3	+5V	
+5V	D	4	+5V	
N.C.	E	5	N.C.	
+12V	F	6	+12V	
	H	7		
COIN COUNTER 2	J	8	COIN COUNTER 1	
(COIN LOCK OUT 2)	K	9	(COIN LOCK OUT 1)	
SP.(-)	L	10	SP.(+)	
N.C.	M	11	N.C.	
VIDEO GREEN	N	12	VIDEO RED	
VIDEO SYNC	P	13	VIDEO BLUE	
SERVICE SW	R	14	VIDEO GND	
	S	15	TEST SW	
COIN SW 2	T	16	COIN SW 1	
START SW 2	U	17	START SW 1	
2P UP	V	18	1P UP	
2P DOWN	W	19	1P DOWN	
2P LEFT	X	20	1P LEFT	
2P RIGHT	Y	21	1P RIGHT	
2P PUSH 1	Z	22	1P PUSH 1	
2P PUSH 2	a	23	1P PUSH 2	
N.C.	b	24	N.C.	
N.C.	c	25	N.C.	
N.C.	d	26	N.C.	
GND	e	27	GND	
GND	f	28	GND	

●PARTS NAME

CR7E-56DA-3.96E : (HIROSE)

OR

1168-056-009 : (KEL)

●DIP SW[A]

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
Coin 1	1 Coin 1 Credit	OFF	OFF	OFF					
	1 Coin 2 Credits	ON	OFF	OFF					
	1 Coin 3 Credits	OFF	ON	OFF					
	1 Coin 4 Credits	ON	ON	OFF					
	1 Coin 6 Credits	OFF	OFF	ON					
	2 Coins 1 Credit	ON	OFF	ON					
	3 Coins 1 Credit	OFF	ON	ON					
	4 Coins 1 Credit	ON	ON	ON					
Coin 2	1 Coin 1 Credit				OFF	OFF	OFF		
	1 Coin 2 Credits				ON	OFF	OFF		
	1 Coin 3 Credits				OFF	ON	OFF		
	1 Coin 4 Credits				ON	ON	OFF		
	1 Coin 6 Credits				OFF	OFF	ON		
	2 Coins 1 Credit				ON	OFF	ON		
	3 Coins 1 Credit				OFF	ON	ON		
	4 Coins 1 Credit				ON	ON	ON		
Continue Coin	NORMAL							OFF	
	ONLY 1 COIN REQUIRED TO CONTINUE							ON	
Not Used									OFF
									ON

※If Continue Coin Mode is ON, Game starts with 2 coins and continues with 1 coin.
Coin 1 & Coin 2 settings are ignored.

●DIP SW[B]

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
DIFFICULTY LEVEL 1	EASY 1	OFF	OFF	OFF					
	↑ 2	ON	OFF	OFF					
	3	OFF	ON	OFF					
	NORMAL 4	ON	ON	OFF					
	5	OFF	OFF	ON					
	6	ON	OFF	ON					
	↓ 7	OFF	ON	ON					
	DIFFICULTY 8	ON	ON	ON					
DIFFICULTY LEVEL 2	EASY 1				OFF	OFF			
	NORMAL 2				ON	OFF			
	↓ 3				OFF	ON			
	DIFFICULTY 4				ON	ON			
EXTEND	100000(NORMAL)						OFF	OFF	
	200000						ON	OFF	
	100000,200000 EVERY						OFF	ON	
	NO EXTEND						ON	ON	
NOT USED									OFF
									ON

●DIP SW[C]

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
NUMBER OF PLAYERS	2 (NORMAL)	OFF	OFF						
	3	ON	OFF						
	4	OFF	ON						
	1	ON	ON						
FREE PLAY	NORMAL			OFF					
	FREE			ON					
SCREEN PAUSE	NORMAL				OFF				
	PAUSE				ON				
SCREEN FLIP	NORMAL					OFF			
	FLIP					ON			
DEMON-STRATION SOUND	DISABLED						OFF		
	ENABLED						ON		
CONTINUE MODE	DISABLED							OFF	
	ENABLED							ON	
TEST MODE	GAME MODE								OFF
	TEST MODE								ON

※Highlighted Character when shipped.

※Reset DIP SW setting when the power is off.

※Keep DIP SW off when No instruction is given.

CAPCOM[®] CO.,LTD.

CAPCOM BLDG. NO. 4-12, OHTEDORI 1-CHOME,
CHUO-KU, OSAKA 540, JAPAN
TEL (06) 947-1156 (FAX NO. 06-946-6657)