



SOLDER SIDE

PARTS SIDE

-5V	1	+12V
SOUND CH 1	2	SOUND CH 1
2P SHOOT	3	
2P LEFT	4	2P RIGHT
1P START	5	2P START
	6	2P UP
1P SHOOT	7	SERVICE
1P RIGHT	8	1P LEFT
1P UP	9	2P DOWN
COIN 1	10	COIN 2
1P DOWN	11	COIN COUNTER 1
	12	COIN COUNTER 2
TV GREEN	13	TV BLUE
TV RED	14	TV SYNC
SOUND CH 2	15	SOUND CH 2
GND	16	GND
GND	17	GND
+5V	18	+5V

