

PARTS CATALOGUE

SEGA®



WORLD CLUB
Champion Football™
European Clubs 2004-2005



Before using this product, read this SERVICE MANUAL carefully to understand the contents stated herein.
After reading this manual, be sure to keep it available nearby the product or somewhere convenient in order
to be able to refer to it whenever necessary.



CONTENTS

From among the parts used for the product, regarding the stickers/sheets such as warning and cautionary displays intended for players, and those describing the name of hazard prevention equipment such as the emergency stop button, etc, the official language applicable to the installation location is employed. These stickers/sheets are important parts from the point of view of safety and should be replaced immediately if soiled or peeled off. The parts list herein contains only the parts numbers of stickers/sheets described in English (with suffixed E or EG or UK)

1.	MAIN PROJECTION UNIT	2
1.1	TOP ASSY CFB MAIN.....	3
1.2	ASSY BILLBOARD (CFB-0500UK)	4
1.3	ASSY FRONT FL (CFB-0800UK).....	5
1.4	ASSY DLP BASE (CFB-1000UK).....	6
1.5	ASSY SUB CABI (CFB-1001UK).....	7
1.6	ASSY FAN (HDT-1080UK).....	8
1.7	ASSY ELEC LOWER (CFB-4000UK).....	9
1.8	ASSY ELEC UPPER (CFB-4100UK).....	10
1.9	ASSY PC BASE.....	11
2.3	SATELLITE CABI (CFB-1502).....	17
2.4	ASSY SPEAKER L (CFB-1700)	18
2.5	ASSY SPEAKER R (CFB-1710).....	19
2.6	ASSY WIRE SATL DC (CFB-6001).....	20
2.7	ASSY AC BKT CÉ.....	21
2.8	ASSY CASH BOX DOOR (CFB-1565).....	22
2.9	ASSY SIDE BOX L (CFB-1570).....	24
2.10	ASSY SIDE BOX R (CFB-1580).....	25
2.11	ASSY MONITOR BASE (CFB-1620).....	26
2.12	ASSY MONITOR CASE (CFB-1630).....	27
2.13	ASSY CTRL PNL L (CFB-1640).....	28
2.14	ASSY CTRL PNL L (CFB-1650).....	29
2.15	ASSY RW UNIT (CFB-1660).....	30
2.16	ASSY SW UNIT SATL (CFB-1670).....	31
2.17	ASSY SELECTOR (CFB-1680).....	32
2.18	ASSY BACK DOOR (CFB-1690).....	33
2.19	ASSY SUPPLY DOOR (CFB-1695).....	34
2.20	ASSY SATL BD (CFB-4500).....	35
2.21	ASSY ELEC SATL (CFB-4600).....	36

From among the parts used for the product, regarding the stickers/sheets such as warning and cautionary displays intended for players, and those describing the name of hazard prevention equipment such as the emergency stop button, etc, the official language applicable to the installation location is employed. These stickers/sheets are important parts from the point of view of safety and should be replaced immediately if soiled or peeled off. The parts list herein contains only the parts numbers of stickers/sheets described in English (with suffixed E or EG or UK)

In the case where the asterisk mark "*" is indicated in the note column of the Parts list, that particular part has the applicable official language available. As such, when placing orders ensure that the corresponding official language is available for that particular part. For example, if you desire the stickers/sheets described in French, Suffix FR in lieu of UK.

However, note that if a common expression can be used, only one expression is registered for plural official languages and in this case, only one language is available.


The following are suffix character(s) of the Part Numbers for the corresponding official language.

E of EG or UK	ENGLISH
SP	SPANISH
DU	DUTCH
FR	FRENCH
PT	PORTUGUESE
SW	SWEDISH
GM	GERMAN
IT	ITALIAN
NW	NORWEGIAN


Note that Parts List herein does not include the individual parts of assemblies and manufactured items. Be sure to understand that inquiries and placing orders as regards the individual parts below may be unacceptable.

- Assemblies only for finished product sales (such as printed circuit boards on which IC's and fuses are mounted).
- Manufactured items incorporated for this product (projectors etc.). As a rule, the products listed in Item No. 101 – 199 of the parts list.
- Units which are assembled by employing welding, riveting and adhesives.

1. MAIN PROJECTION UNIT

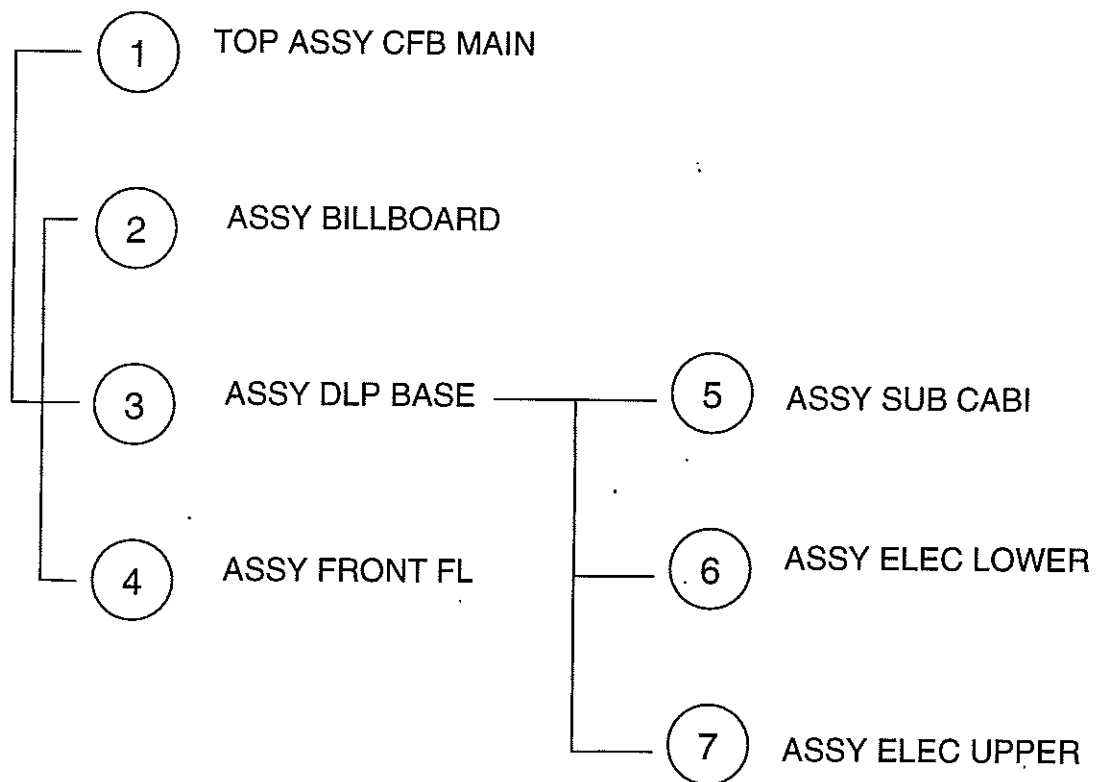


1.1 TOP ASSY CFB MAIN (ECS-1001UK)

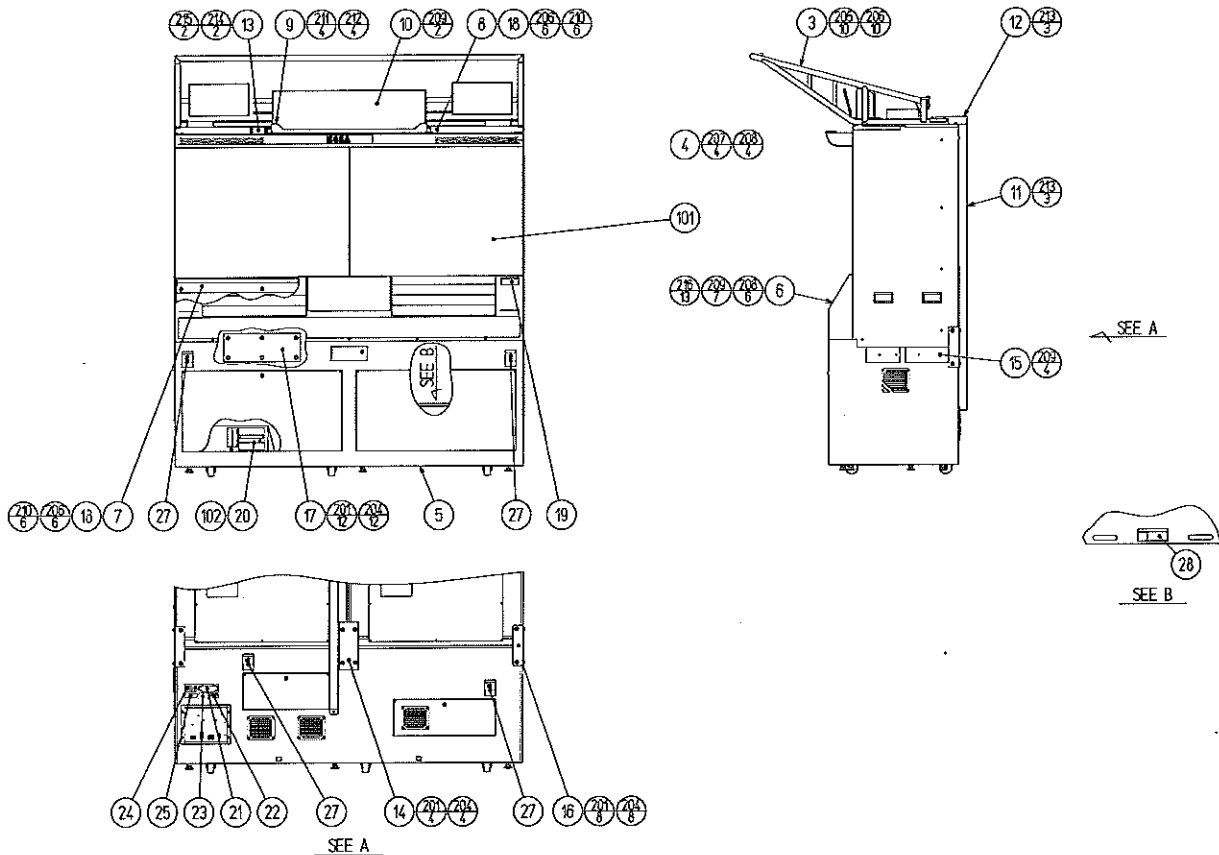


ITEM NO.	PART NUMBER	DESCRIPTION
3	CFB-0500UK	ASSY BILLBOARD
4	CFB-0800UK	ASSY FRONT FL
5	CFB-1000UK	ASSY DLP BASE
6	CFB-0001-01	DLP COVER 04
7	CFB-0002	FRONT COVER HOLDER
8	CFB-0003	FRONT FL BOX HOLDER
9	CFB-0004	BILLBOARD PLATE HOLDER
10	CFB-00005-01	BILLBOARD PLATE 04
11	CFB-0006	WIRE COVER DLP BACK
12	CFB-0007	WIRE COVER TOP END
13	CFB-0008	WIRE COVER FRONT LOWER
14	CFB-0009	PROJECTION JOINT CENTRE
15	CFB-0010	CASTER LID
16	DOC-1182	PROJECTION JOINT A
17	DOC-1185	PROJECTION JOINT PLATE
101	200-5952-31	PJTN DSPL T 50TYPE 31K (JOIN)
102	610-0718-CE	ASSY PC CFB CE

1.2 ASSY BILLBOARD (CFB-0500UK)

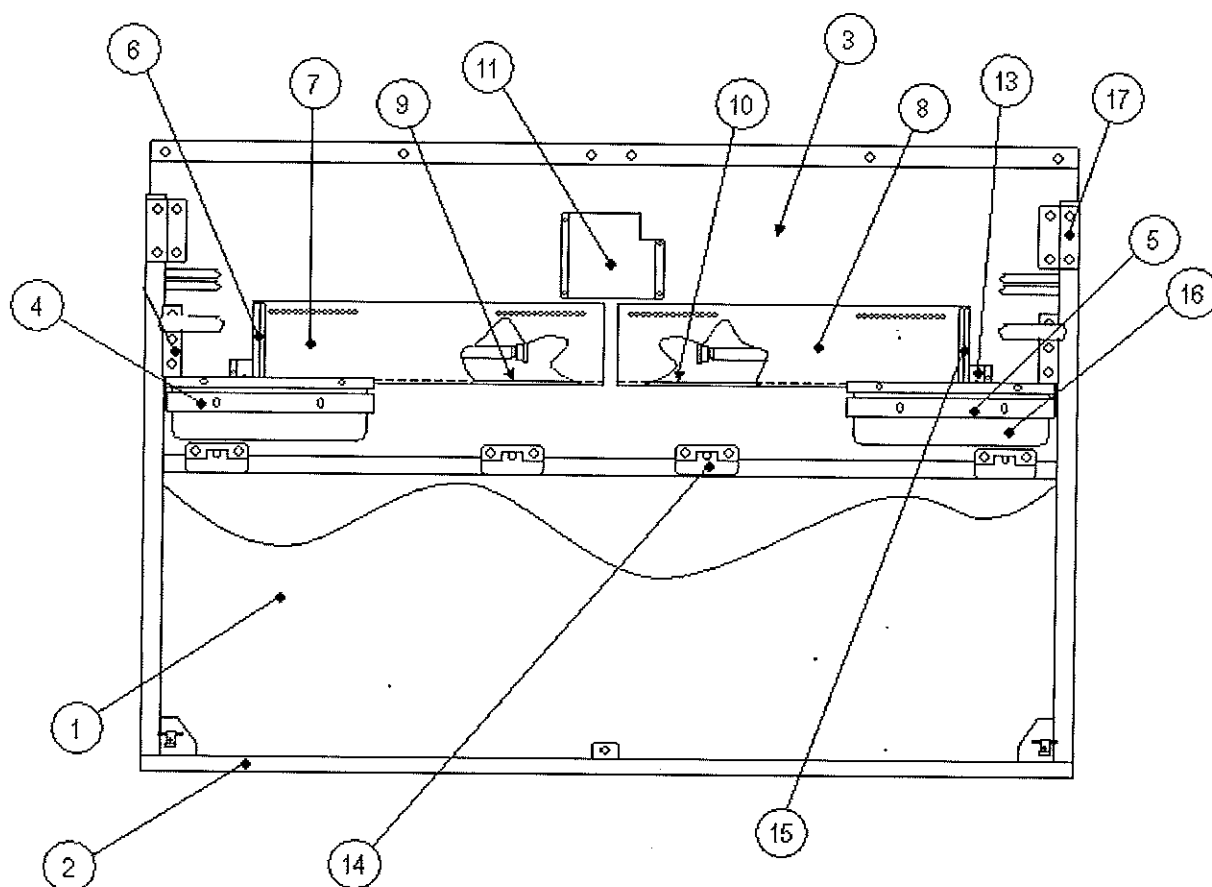


ITEM NO.	PART NUMBER	DESCRIPTION
1	CFB-0508-02UK	TENT CFB 04-05
2	CFB-0502	TOP FRAME
3	CFB-0501UK	WOODEN BASETOP
4	CFB-0302UK	SPEAKER BASE L
5	CFB-0402UK	SPEAKER BASE R
6	CFB-0514UK	REAR FL BOX L
7	CFB-0518-04	FL PLATE REAR LEFT/RIGHT 04-05
8	CFB-0518-04	FL PLATE REAR LEFT/RIGHT 04-05
9	CFB-0516UK	REAR FL BOX LID L
10	CFB-0517UK	REAR FL BOX LID R
11	CFB-0519UK	WIRE COVER REAR CENTRE
13	CFB-0521UK	WIRE COVER SPEAKER R
14	CFB-0503UK	TOP FRAME FRONT HOLDER A
15	CFB-0515UK	FL BOX R
16	130-5239	SPEAKER
17	CFB-0505UK	TOP FRAME END HOLDER

1.3 ASSY FRONT FL (CFB-0800UK)

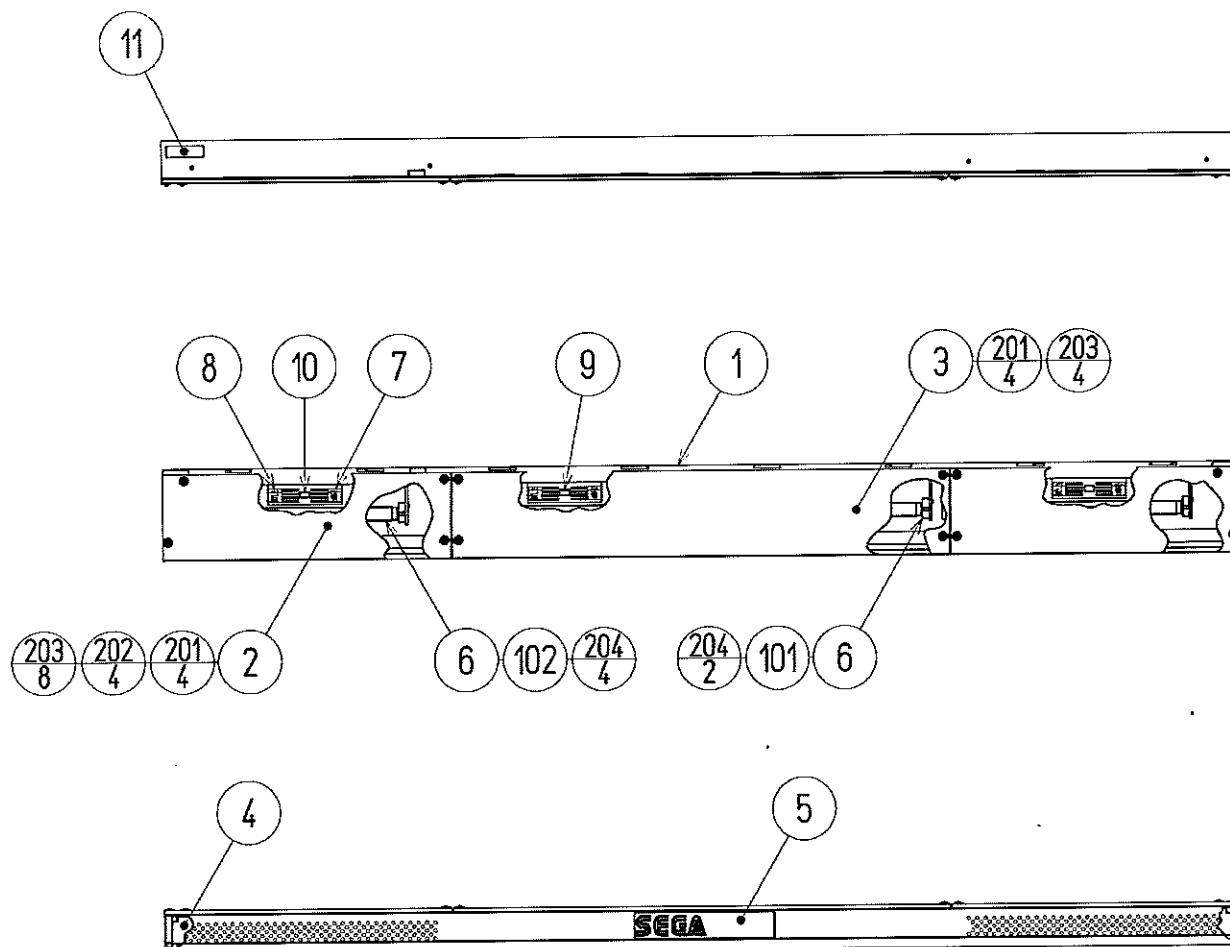


ITEM NO.	PART NUMBER	DESCRIPTION
1	CFB-0801UK	FRONT FL BOX
2	CFB-0803-01	FL PLATE FRONT LEFT 04-05
3	CFB-0803-02	FL PLATE CENTRE
4	CFB-0804-01	RED SHEET FRONT LOGO FL 04-05
5	CFB-0805	STICKER LOGO SEGA
6	390-5695-40-DUK ✓	FL TUBE 40W
7	LB1102	STICKER HI VOLTAGE
8	LB1104	STICKER HOT SURFACE
9	421-7501-10	STICKER FL 40W
10	421-7501-10	STICKER FL 40W
101	390-5695-40-CUK ✓	ASSY FL 40W 110V 600L
102	390-5695-40-CUK ✓	ASSY FL 40W 110V 600L

1.4 ASSY DLP BASE (CFB-1000UK)

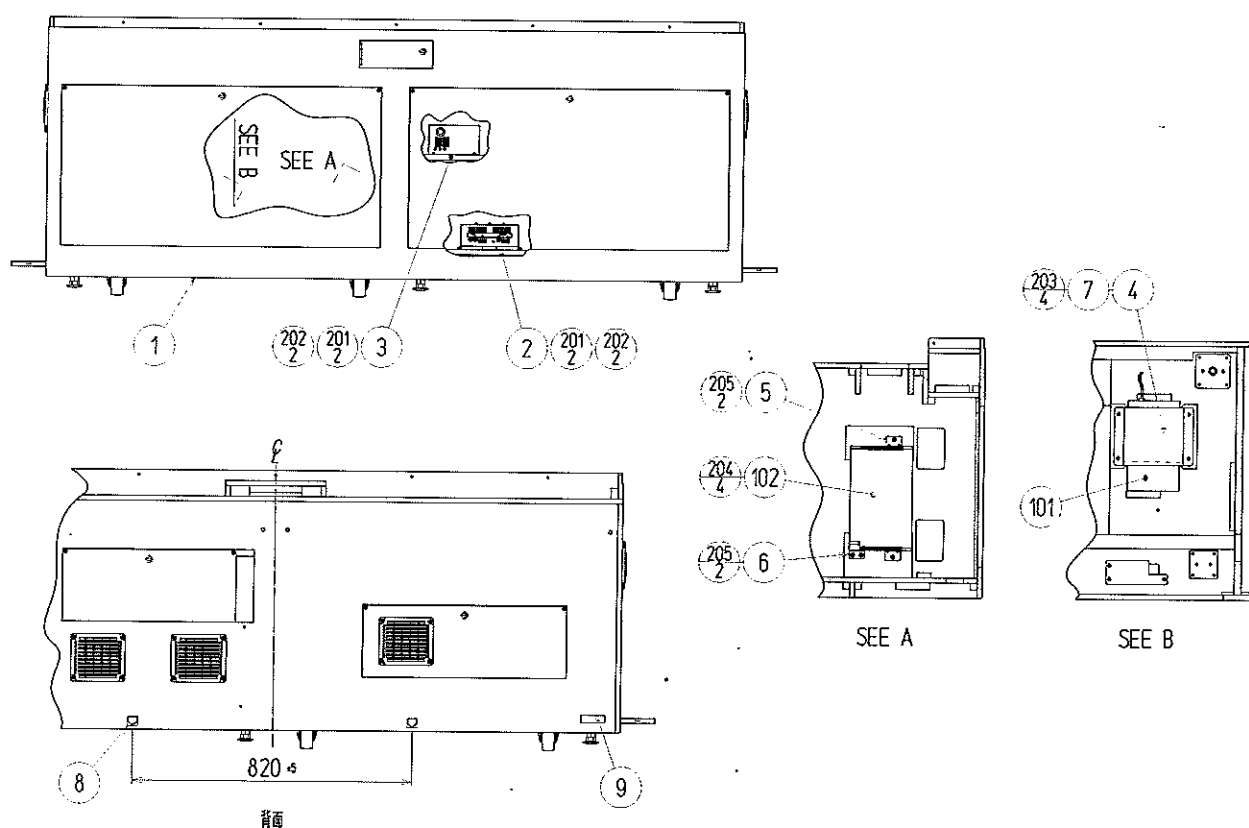


ITEM NO.	PART NUMBER	DESCRIPTION
1	CFB-1001	ASSY SUB CABI
2	CFB-4000	ASSY'ELEC LOWER
3	CFB-4100	ASSY ELEC UPPER
4	CFB-1013	UPS HOLDER
5	CFB-1014	HUB HOLDER
6	CFB-1015	HUB HOOK
7	CFB-1019	CUSHION
8	421-11416	STICKER CAUTION FORK
101		UPS
102		HUB

1.5 ASSY SUB CABI (CFB-1001UK)

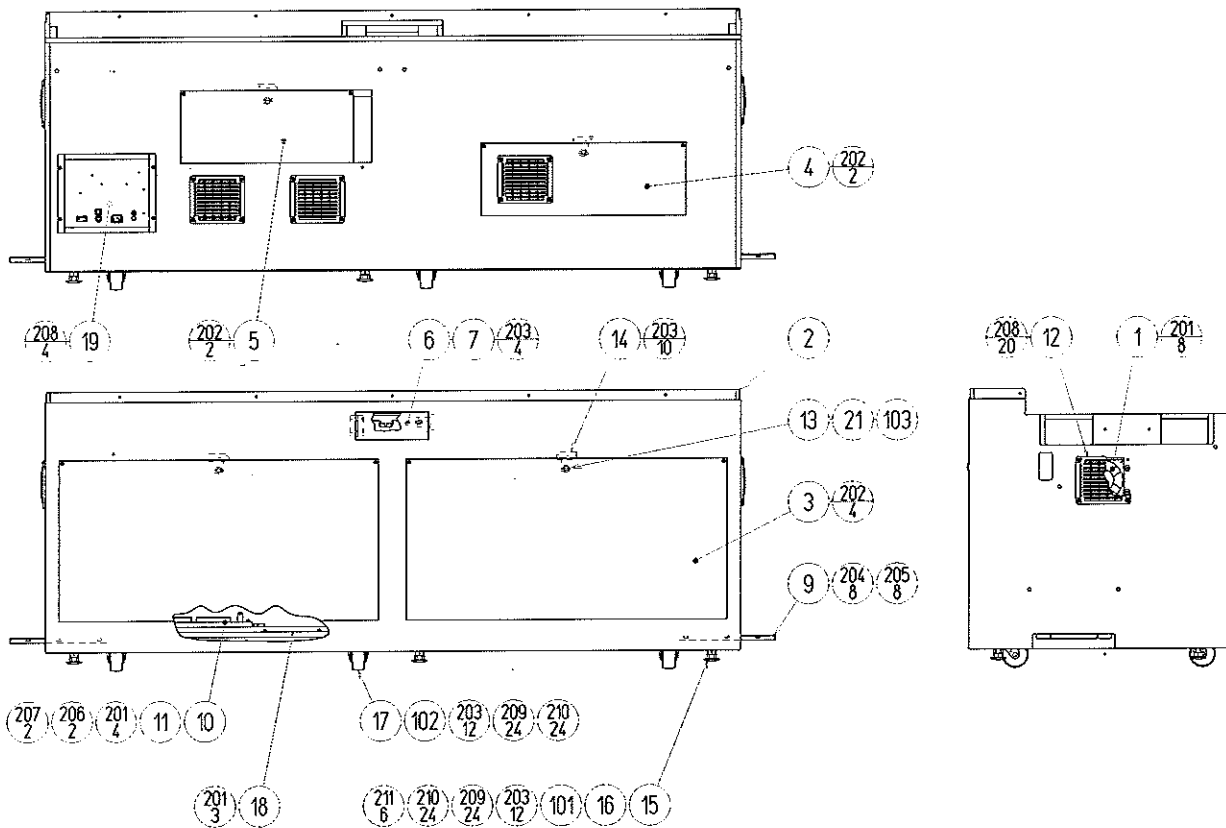


ITEM NO.	PART NUMBER	DESCRIPTION
1	HDT-1530-01UK	ASSY FAN
2	CFB-1002-AUK	DLP CABI BLANK
3	CFB-1003UK	FRONT DOOR
4	CFB-1005UK	BACK DOOR R
5	CFB-1004UK	BACK DOOR L
6	CFB-1006UK	SW DOOR
7	CFB-1007UK	HINGE L 60
10	610-0718-CE	ASSY PC CFB 04
12	253-5460-01	AIR VENT BLACK
13	117-0062	PLATE LOCK RETAINER
14	117-5098	TNG RETAINING PLATE
15	BJH-1209UK	LEG BRACKET
16	DOC-1027UK	NUT PLATE FOR LEG BKT
17	SCR-1008UK	NUT PLATE FOR CASTER
18	CFB-1017UK	CABLE HOLE LID
19	CFB-1018CE	ASSY AC BKT

1.6 ASSY FAN (HOT-1530UK)

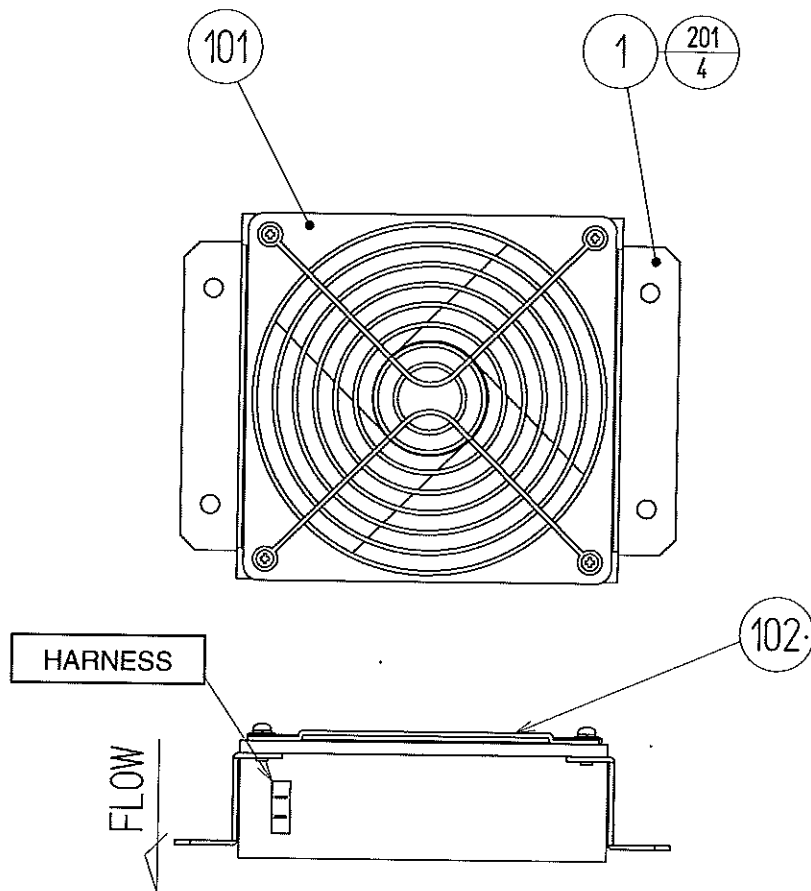


ITEM NO.	PART NUMBER	DESCRIPTION
1	SPY-1081UK	FAN BKT
101	260-0011-02	AXIAL FLOW FAN AC100V 50HZ
102	601-8543	FAN GUARD
201	000-P00312-W	MSCR PH W/FS M3X12

1.7 ASSY ELEC LOWER (CFB-4000UK)

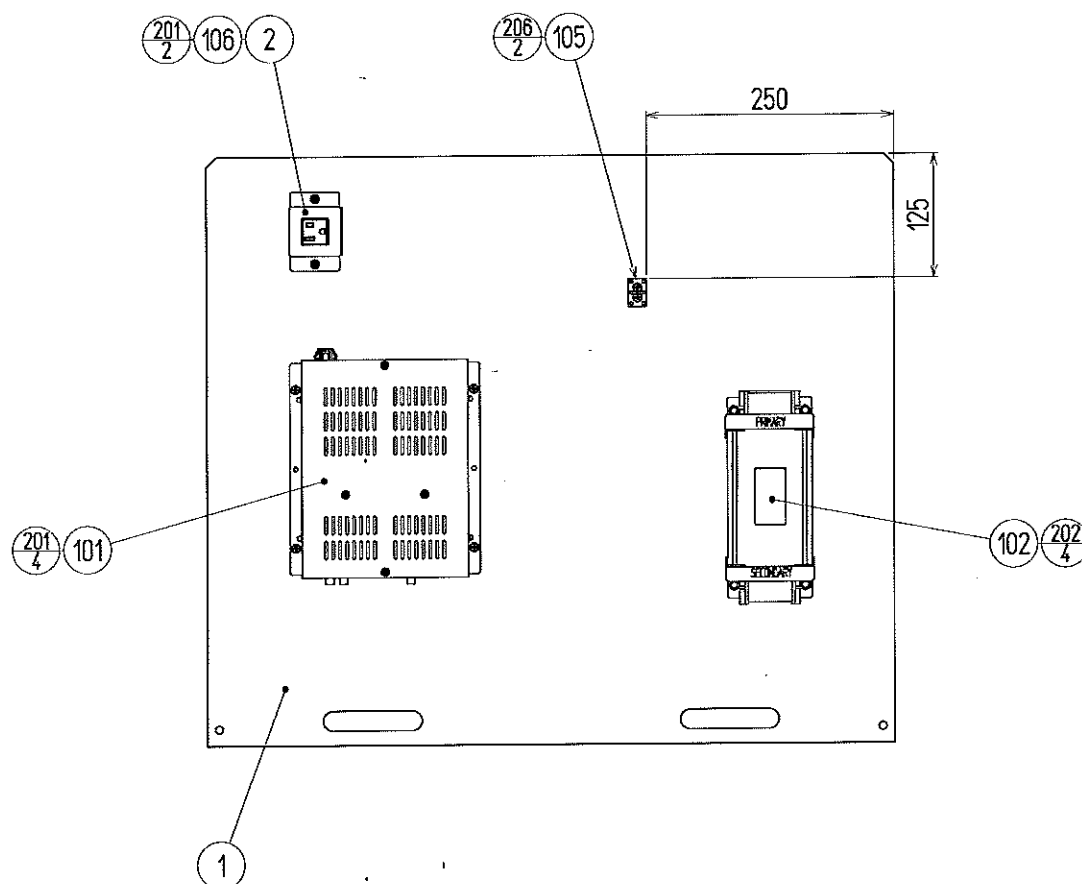


ITEM NO.	PART NUMBER	DESCRIPTION
1	CFB-4001UK	ELEC BASE LOWER
2	CFB-4002UK	OUTLET BRACKET
101	601-10369CE	STEREO PWR AMP 47 CE
102	560-5431-V	XFMR 220-240V 100V 15A WB
105	117-5402-06-91	EARTH TERMINAL PLATE 6P
106	601-6851	AC OUTLET W/EARTH
201	000-P00416-W	MSCR PH W/FS M4X16
202	000-P00616-W	MSCR PH W/FS M6X16
205	000-P00430-W	MSCR PH W/FS M4X30
206	0101-F00316	TAP SCR FH 3X16

1.8 ASSY ELEC UPPER (CFB-4100UK)

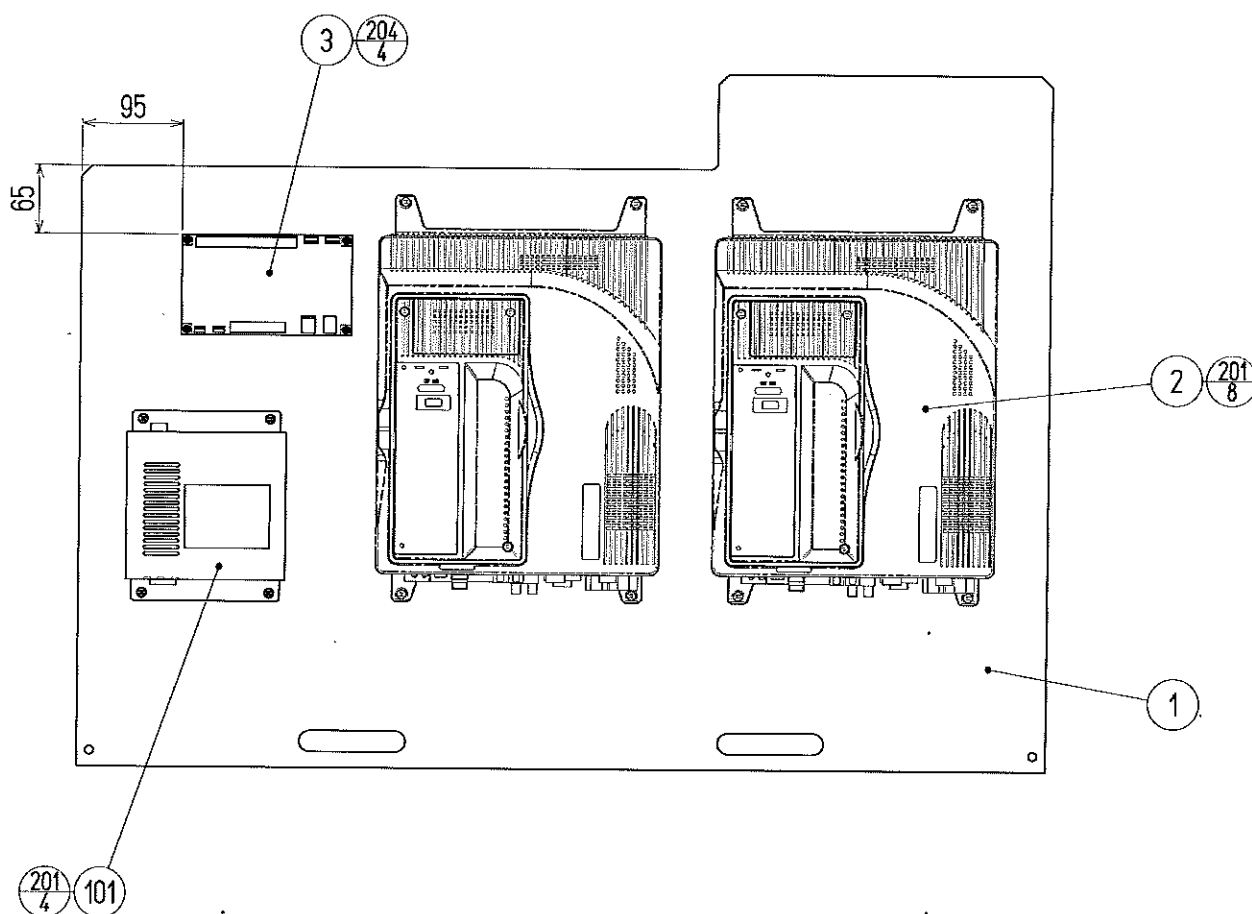


ITEM NO.	PART NUMBER	DESCRIPTION
1	CFB-4101UK	ELEC BASE UPPER
2	840-0159D-02	ASSY CASE NAT CFB 04 EXP
3	NOT USED	NOT USED
101	400-5397	SW RUGU FOR JVS

1.9 ASSY PC BASE (CFB-4200UK)

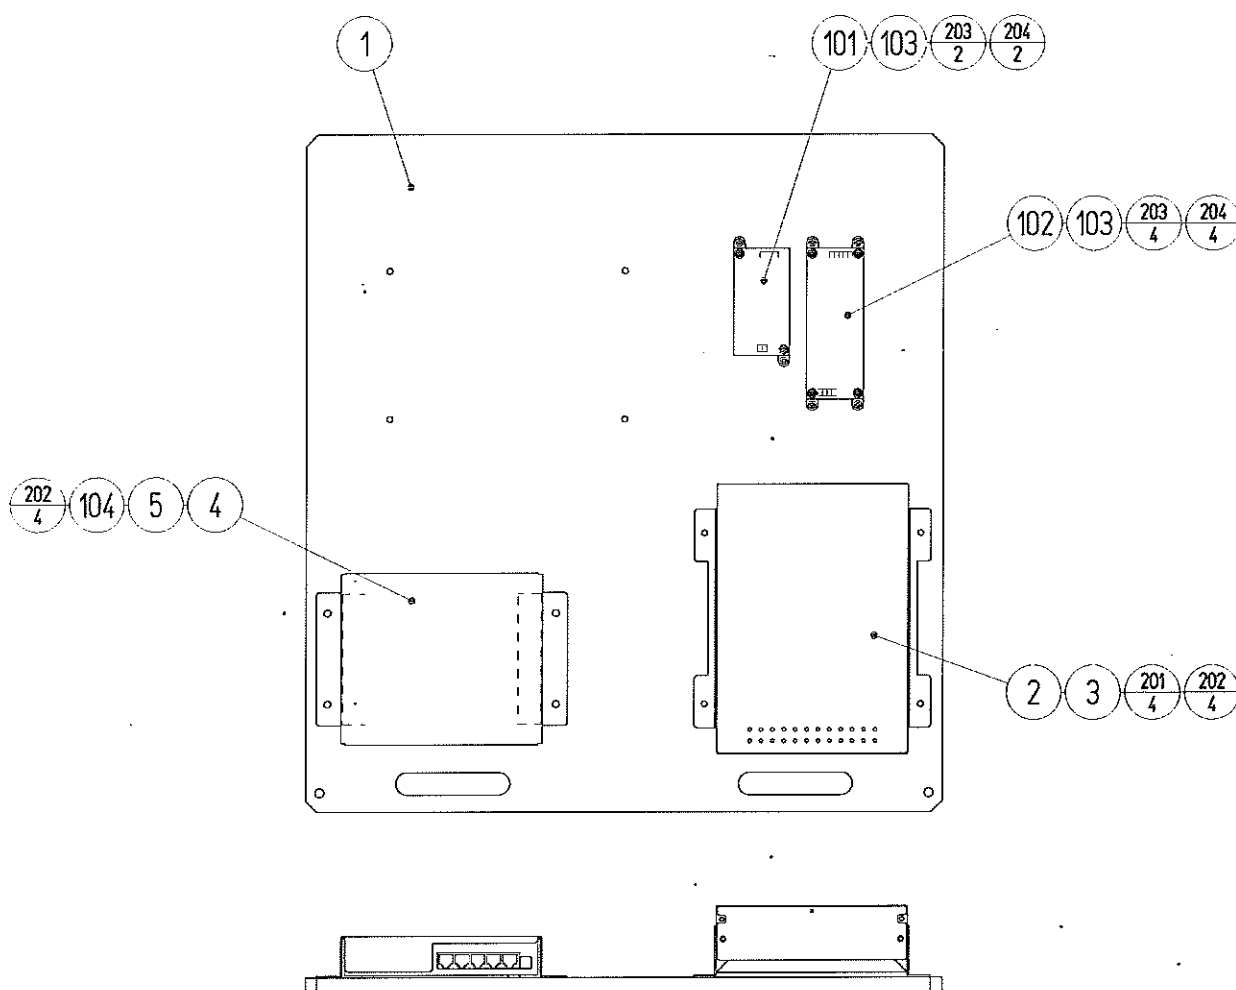

ITEM NO.	PART NUMBER	DESCRIPTION
1	CFB-4201UK	WOODEN BASE
2	610-0716	DVD DRIVE UNIT
3	105-5522-01	DVD BRKT NOM
4	601-11490-04	ROUTER OMRON MR304X CFB
5	SMT-4105	ROUTER HOLDER
101	400-5421-01005	SW REG LCA30S-05
102	400-5421-03012	SW REG LCA30S-12
103	601-7467	L-LOCK PK4
104	OS1230	FOAM STRIP
201	000-P00308-W	M3X08 M SCR PAN W/FS PAS
202	000-P00416-W	M4X16 M SCR PAN W/S PAS
203	000-P00408-W	M4X08 M SCR PAN W/S PAS
204	011-T03516	TAP SCR TH 3.5X16


2.1 TOP ASSY CFB SATELLITE (CFB-15001)

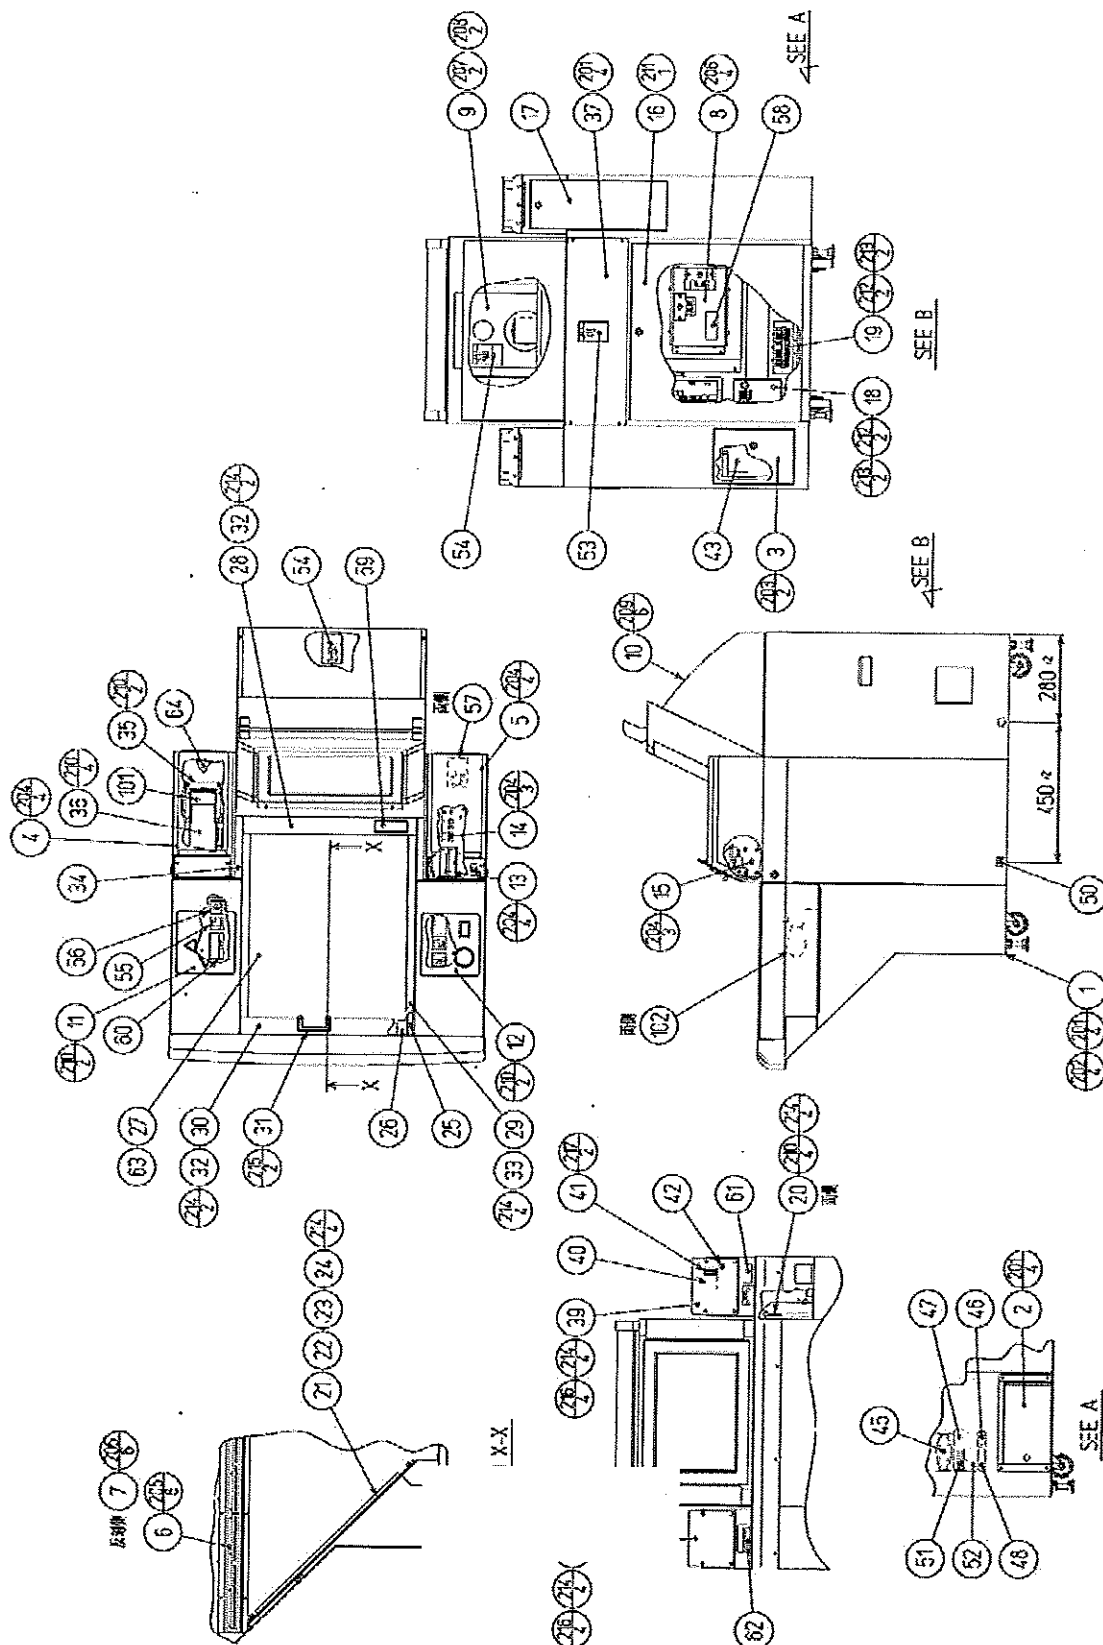

ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1501	ASSY SUBCABI SATL
2	CFB-1560	AC UNIT SATL
3	CFB-1565	ASSY CASH BOX DOOR
4	CFB-1570	ASSY SIDE BOX L
5	CFB-1580	ASSY SIDE BOX R
6	CFB-1590	ASSY LED L
7	CFB-1595	ASSY LED R
8	CFB-1600	ASSY CCD CASE
9	CFB-1620	ASSY MONITOR BASE
10	CFB-1630	ASSY MONITOR COVER
11	CFB-1640	ASSY CTRL PNL L
12	CFB-1650	ASSY CTRL PNL R
13	CFB-1660	RW UNIT
14	CFB-1670	SW UNIT SATL
15	CFB-1680	ASSY SELECTOR
16	CFB-1690	ASSY BACK DOOR
17	CFB-1695	ASSY SUPPLY DOOR
18	CFB-4500	ASSY SATL BD
19	CFB-4600	ASSY ELEC SATL
20	CFB-1530	CHAIN
21	CFB-1531	MIRROR
22	CFB-1532	MIRROR RUBBER A
23	CFB-1533	MIRROR RUBBER B
24	CFB-1534	MIRROR HOLDER
25	CFB-1535	GLASS RUBBER A
26	CFB-1536	GLASS RUBBER B
27	CFB-1537-B	FIELD GLASS BLANK
28	CFB-1538	GLASS SASH REAR
29	CFB-1539	GLASS SASH SIDE
30	CFB-1540	GLASS SASH FRONT
31	CFB-1541	GOAL
32	CFB-1542	SASH RUBBER A
33	CFB-1543	SASH RUBBER B
34	CFB-1544	SIDE BRKT
35	CFB-1545	DISP HOLDER LOWER
36	CFB-1546	DISP HOLDER UPPER
37	CFB-1547	BACK LID
38	CFB-1548-04	INSTR PLATE L 04
39	CFB-1549-04	INSTR PLATE R 04
40	421-7308-121	DENOMI SH 1PLAY¥300 2PLAY¥500
41	220-5167-13	COIN ENTRY ¥500.
42	250-5669	ASSY REJECT BUTTON L59
43	253-5366	CASH BOX
44	SGM-4500	POLY COVER 1125 × 1450 × 1320
49	421-8479	STICKER INSTR SUNLIGHT
50	421-11416	STICKER CAUTION FORK
52	421-9107-92-176	STICKER UNIT WEIGHT 176KG
53	440-WS0002XJP	STICKER W POWER OFF
54	440-DS0013XJP	STICKER D MONITOR
55	440-WS0141-JP	STICKER W HIGH TEMP S
56	440-WS0142-JP	STICKER W POWER OFF S
57	440-CS0157-JP	STICKER C CONT
58	440-WS0165-JP	STICKER W BD POWER OFF S
59	440-CS0186-JP	STICKER C EPILEPSY 40


ITEM NO.	PART NO.	DESCRIPTION
60	440WS0241 JP	STICKER W FL BOWL
61	CFB1529	STICKER CLUB CARD
62	CFB-1550	STICKER PLAYING CARD
63	CFB-1537-AX	FIELD SHEET
64	440-CS0140-JP	STICKER C GEAR
101	610-0646	WRAPPED CARD DISPENSER VCD-200
102	390-6726	FL LAMP EFA12EN TOSHIBA
103	280-5275-SR10	CORD CLAMP SR10
201	000-T00408-0C	M SCR TH CRM M4 x 8
202	068-441616-0C	FLT WSHR CRM 4.4-16 x 1.6
203	000-F00308	M SCR FH M3 x 8
204	000-P00410-W	M SCR PH W/FS M4 x 10
205	000-P00408-WB	M SCR PH W/FS BLK M4 x 8
206	050-F00500	FLG NUT M5
207	030-000612-S	HEX BLT W/S M6 x 12
208	060-F00600	FLT WSHR M6
209	000-T00408-0B	M SCR TH BLK M4 x 8
210	000-P00408-W	M SCR PH W/FS M4 x 8
211	000-T00430-0C	M SCR TH CRM M4 x 30
212	000-P00425-S	M SCR PH W/S M4 x 25
213	068-441616	FLT WSHR 4.4-16 x 1.6
214	050-F00400	FLG NUT M4
215	000-P00305-W	M SCR PH W/FS M3 x 5
216	031-000410-0C	CRG BLT CRM M4 x 10
217	000-P00308	M SCR PH M3 x 8
401	601-6604-70	CARTON BOX 70
402	220-5576	KEY MASTER FOR 220-5575
403	SGM-4111X	KEY BAG
404	600-6729-01	AC CABLE CONNECT TYPE 15A W/E
405	600-7269-1000	ASSY LAN CABLE 1000CM
406	270-5117	FERRITE CORE TDK ZCAT3035-1330
407	280-5009-01	CORD CLAMP 21
408	CFB-1553	STICKER BLINDFOLD SATL

2.2 ASSY SUBCABI SATELLITE (CFB-1501)

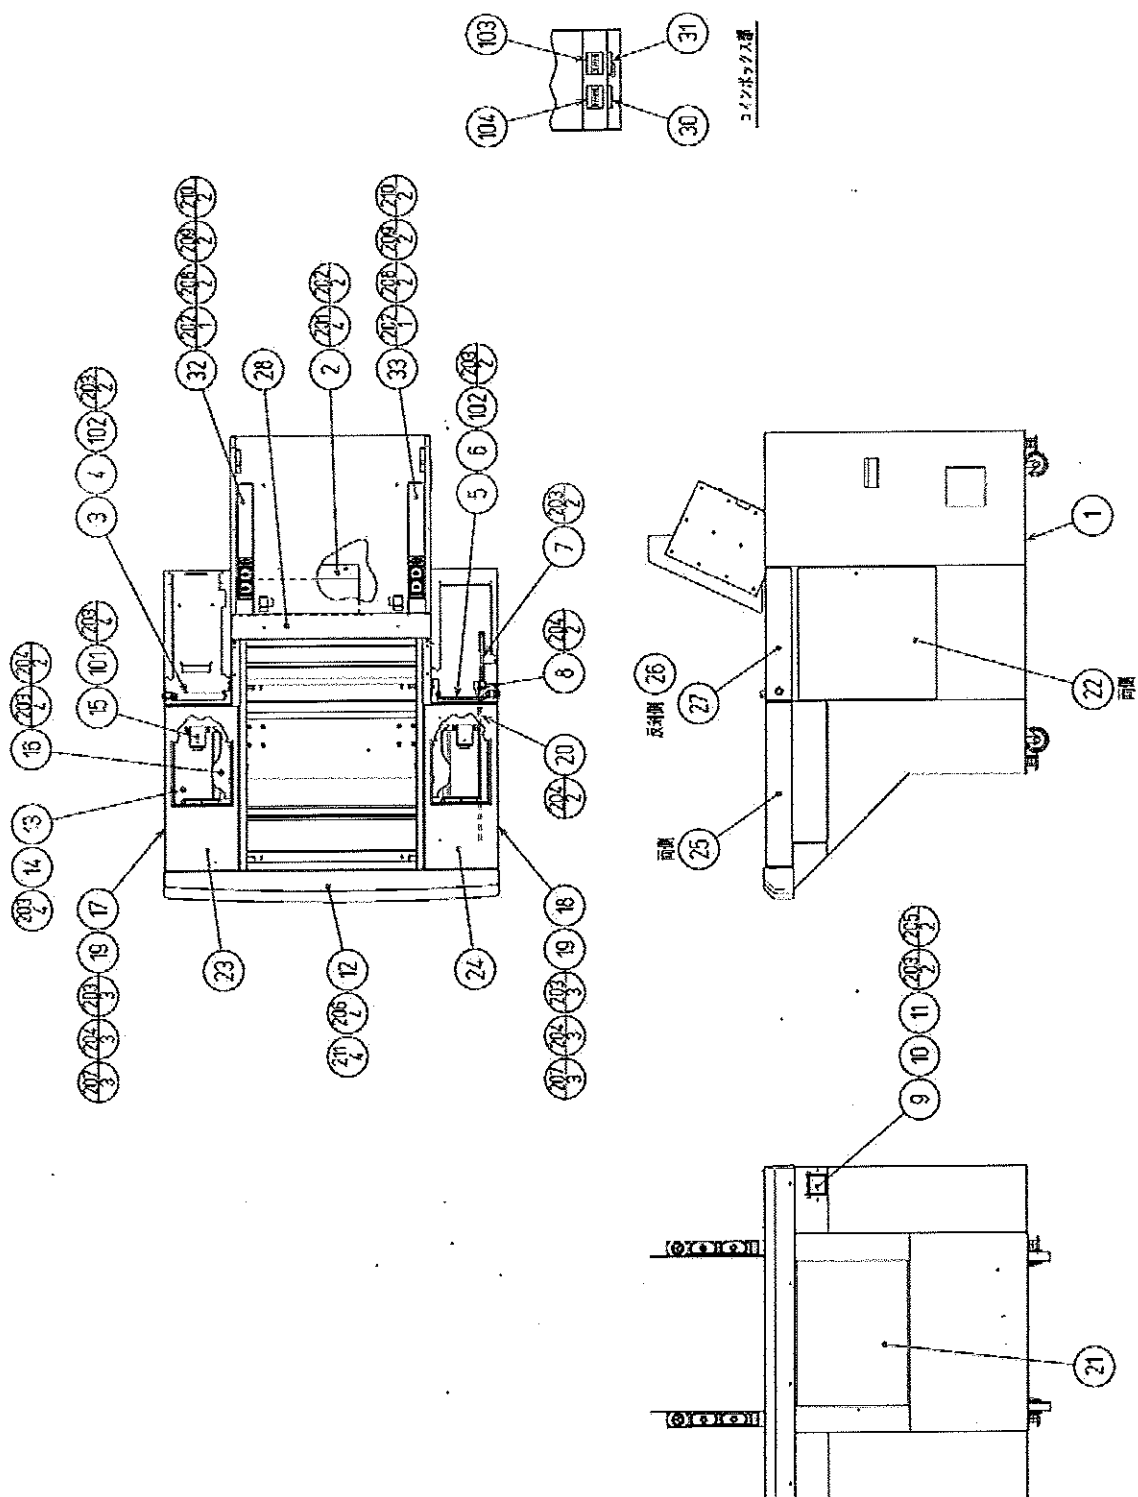


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1502	SATELLITE CABI
2	CFB-1503	CCD HOLDER
3	CFB-1504	HOOK L
4	CFB-1505	HOOK HOLDER L
5	CFB-1506	HOOK R
6	CFB-1507	HOOK HOLDER R
* 7	CFB-1508	COIN CHUTE*
8	CFB-1509	REJECT CHUTE A
9	CFB-1510	REJECT CUP
10	NOA-1405	FLAP
11	CFB-1511	REJECT COVER
12	CFB-1512	FRONT COVER
13	CFB-1513-02	ORANGE PLATE SATL 04
14	CFB-1514	PLATE HOLDER
15	CFB-1515	LAMP BASE
16	CFB-1516	LAMP COVER
17	CFB-1517	CTRL BASE L
18	CFB-1518	CTRL BASE R
19	CFB-1519	CTRL BASE HINGE
20	CFB-1520	REJECT CHUTE B
21	CFB-1521-03	STICKER FRONT LOGO 04
22	CFB-1522-03	STICKER SIDE LOGO 04
23	CFB-1523-05	STICKER CTRL BASE L 04
24	CFB-1524-05	STICKER CTRL BASE R 04
25	CFB-1525-02	STICKER SIDE LONG 04
26	CFB-1526-02	STICKER SIDE SHORT L 04
27	CFB-1527-02	STICKER SIDE SHORT R 04
28	CFB-1528	STICKER BLACK CFB
30	421-6591-16	STICKER COIN METER ¥100
31	421-6591-29	STICKER COIN METER ¥500
32	CFB-1700	ASSY SPEAKER L
33	CFB-1710	ASSY SPEAKER R
101	214-0254-100	LAMP SOCKET E26 W/CONN 100MM
102	220-5575	CAM LOCK MASTER W/O KEY
103	220-5643-01	MAG CNTR DC5V 6P WH MZ-674-D04
104	220-5643-02	MAG CNTR DC5V 6P YE MZ-674-D05
105	280-5009-01	CORD CLAMP 21
106	280-5275-SR10	CORD CLAMP SR10
201	050-F00500	FLG NUT M5
202	000-P00510-W	M SCR PH W/FS M5 x 10
203	050-F00400 FLG	NUT M4
204	000-P00408-W	M SCR PH W/FS M4 x 8
205	000-P00306-W	M SCR PH W/FS M3 x 6
206	000-T00408-0B	M SCR TH BLK M4 x 8
207	031-000410-0C	CRG BLT CRM M4 x 10
208	050-H00500	HEX NUT M5
209	060-S00500	SPR WSHR M5
210	060-F00500	FLT WSHR M5
211	000-F00408	M SCR FH M4 x 8
301	CFB-6001	ASSY WIRE SATL DC
302	CFB-60044X	WIRE HARN EXT AC
303	600-7009-1000	ASSY RGB CA D-SUB 15P 1000MM

2.3 SATELLITE CABI (CFB-1502)

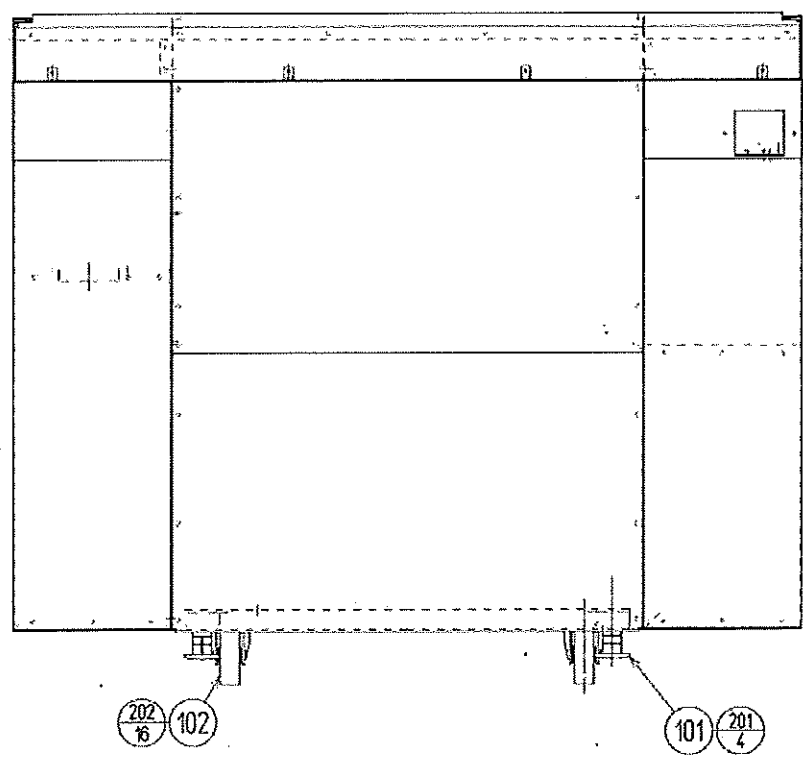


ITEM NO.	PART NO.	DESCRIPTION
101	601-5699X	LEG ADJUSTER BOLT M16 × 75
102	601-11158	CASTER 75 6NYLON
201	050-H01600-3	HEX NUT TYPE3 M16 .
202	030-000616-W	HEX BLT W/FS M6 × 16

2.4 ASSY SPEAKER L (CFB-1700)

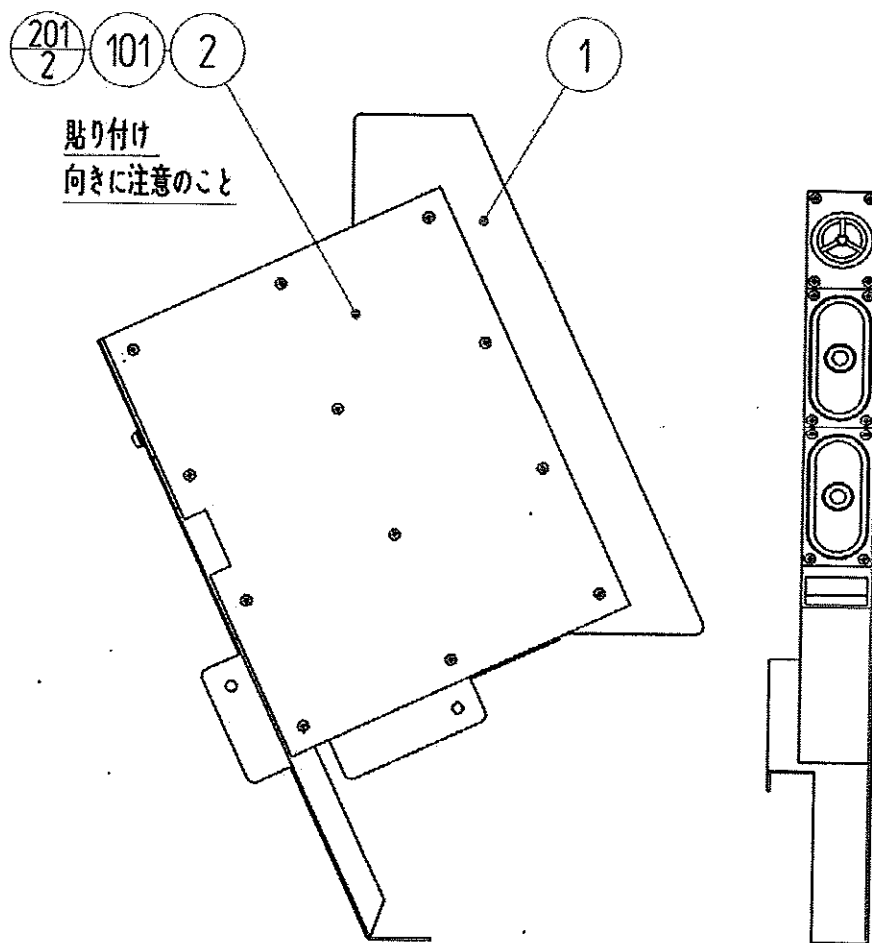

ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1701	SPEAKER BRKT L 2 CFB-1702 SPEAKER SPACER
101	130-5156-01	SPEAKER BOX 8OHM 20W VA1
102	280-5275-SR10	CORD CLAMP SR10
201	000-P00512-W	M SCR PH W/FS M5 × 12

2.5 ASSY SPEAKER R (CFB-1710)

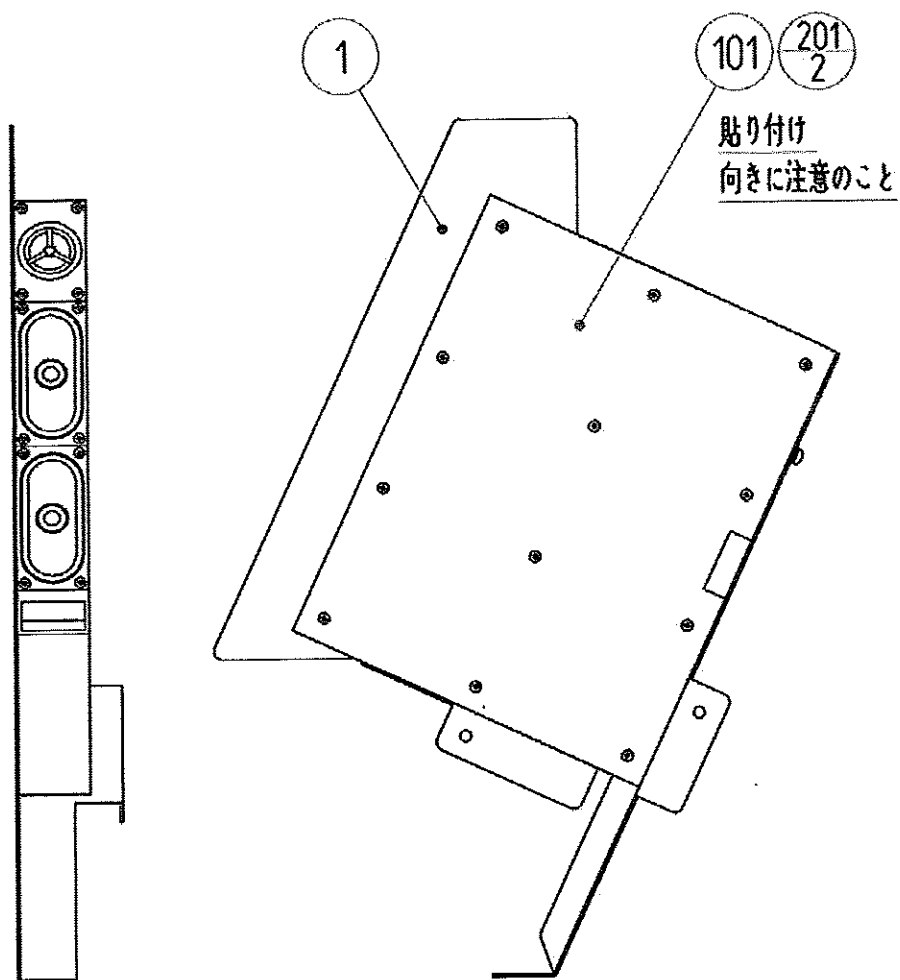


ITEM NO.	PART NO.	DESCRIPTION NOTE
1	CFB-1711	SPEAKER BRKT R
101	130-5156-01	SPEAKER BOX 8OHM 20W VA1
102	280-5275-SR10	CORD CLAMP SR10
201	000-P00512-W	M SCR PH W/FS M5 x 12

2.6 ASSY WIRE SATL DC (CFB-6001)


<u>ITEM NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
101	601-0460	PLASTIC TIE BELT 100 MM
301	CFB-60020	WIRE HARN SW UNIT
302	CFB-60021	WIRE HARN EXT SPEAKER OUT
303	CFB-60022	WIRE HARN EXT CAMER PWR
304	CFB-60023	WIRE HARN EXT LED BD
305	CFB-60027X	WIRE HARN EXT MAPLE
306	CFB-60028X	WIRE HARN EXT DISPENSER PWR
307	CFB-60029	WIRE HARN EXT DISPENSER
308	CFB-60032	WIRE HARN EXT CONT PNL A
309	CFB-60034	WIRE HARN EXT CONT PNL B
310	CFB-60036	WIRE HARN EXT COIN
311	CFB-60037	WIRE HARN EXT CARD IN
312	CFB-60039	WIRE HARN EXT LED
313	CFB-60042	WIRE HARN EXT CARD SERIAL

2.7 ASSY AC BKT CE (CFB-1560)

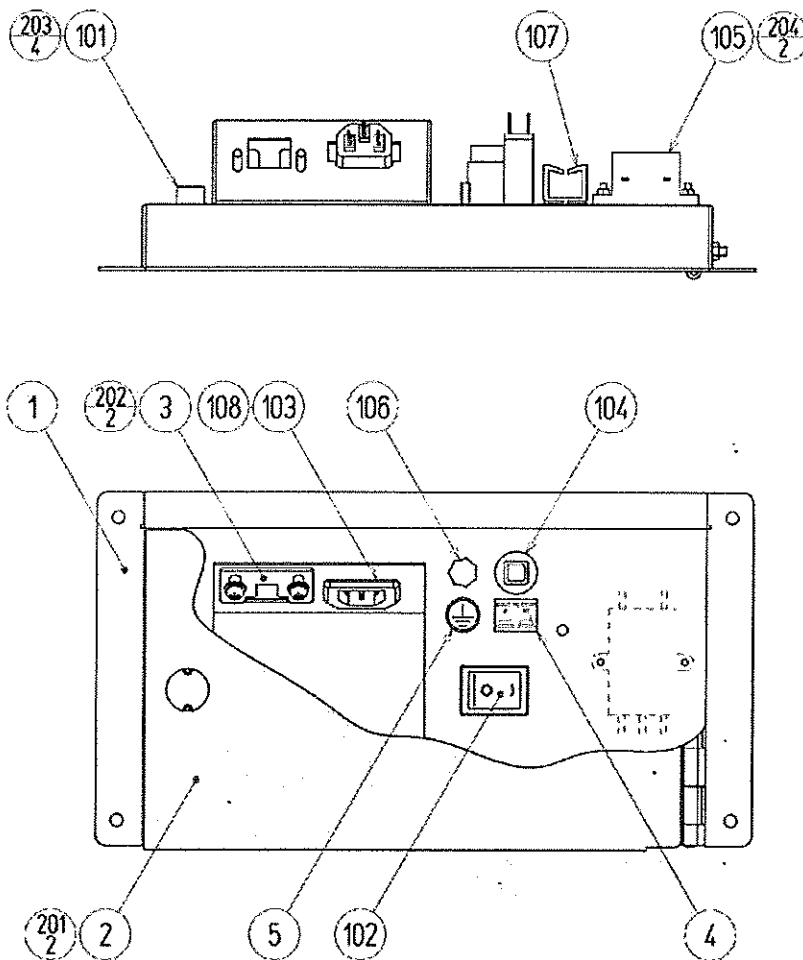


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1561	AC BRKT
2	CFB-1562	AC LID
3	CFB-1563	WIRE HOLDER
4	421-7468-02	STICKER C.P W/PIC
5	421-8202	STICKER EARTH MARK
101	601-10837	CATCH SUGATSUNE B-JCU
102	509-5876	LOCKER SW JW-L21RKK
103	214-0202	AC INLET PANEL TYPE
104	512-5046-5000	C.P 5000MA CE UL
105	270-5020	NOISE FILTER AC250V 6A
106	280-0417	TERMINAL BINDING POST BLACK
107	280-5188-2W	WIRE SADDLE WS-2W
108	310-5029-G20	SUMITUBE F G 20MM
109	280-5275-SR10	CORD CLAMP SR10
110	601-0460	PLASTIC TIE BELT 100 MM
201	050-F00400	FLG NUT M4
202	000-P00410-WB	M SCR PH BLK W/FS M4 x 10
203	000-F00305	M SCR FH M3 x 5
204	050-F00300	FLG NUT M3
301	CFB-60001	WIREHARN AC UNIT
302	CFB-60002	WIRE HARN NF OUT

2.8 ASSY CASH BOX DOOR (CFB-1565)

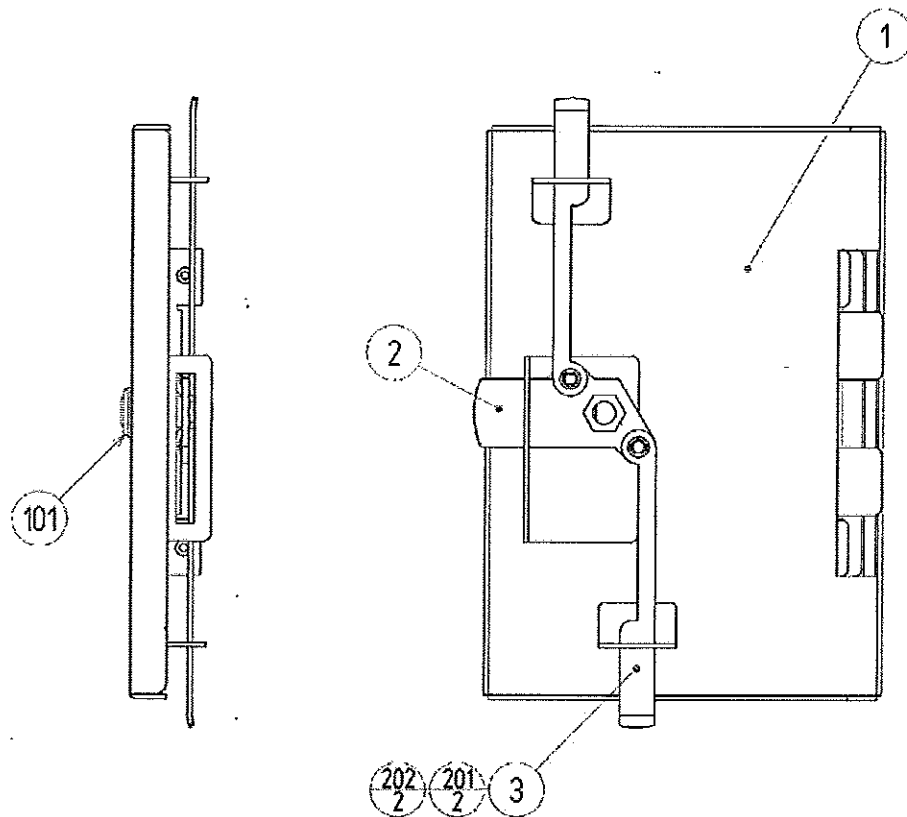


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1566	CASH BOX DOOR
2	HOT-1203X	CENTER TNG
3	HOT-1204X	SIDE TNG
101	220-5574	CAM LOCK W/KEYS
201	060-F00400	FLT WSHR M4
202	065-E00300	E RING 3MM

2.9 ASSY SIDE BOX L (CFB-1570)

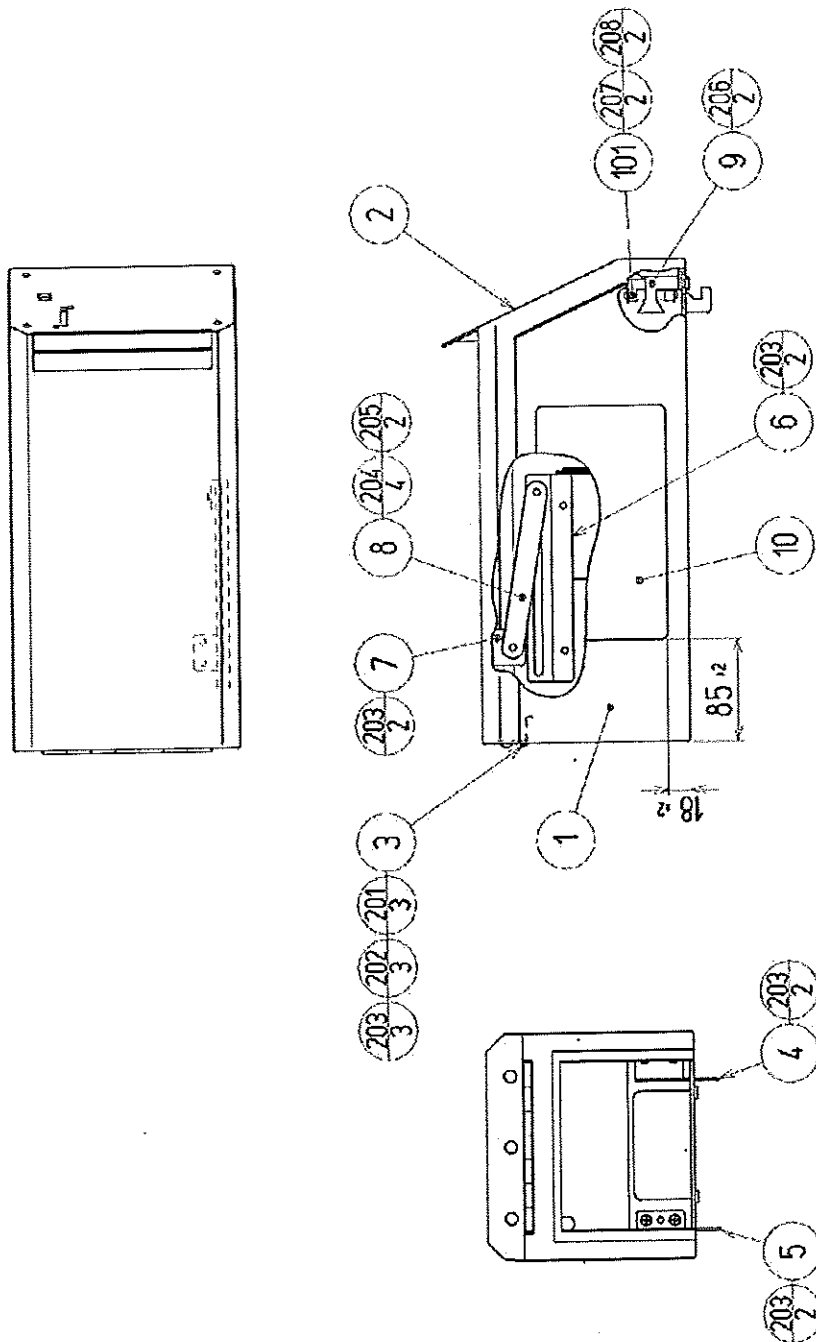


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1571	SIDE BASE L
2	CFB-1572	SIDE COVER L
3	CFB-1573	SIDE COVER HINGE
4	CFB-1574	LOCKING BRKT LL
5	CFB-1575	LOCKING BRKT LR
6	CFB-1576	STAY HOLDER A
7	CFB-1577	STAY HOLDER B
8	CKT-0404	PLATE STAY
9	CFB-1578	DISP GUIDE
10	CFB-1579-02	STICKER EC 04
101	370-5232-01	PHOTO SENSOR OMT-01L-SS
102	280-5275-SR10	CORD CLAMP SR10
201	031-000410-0B	CRG BLT BLK M4 x 10
202	050-F00400	FLG NUT M4
203	000-P00408-W	M SCR PH W/FS M4 x 8
204	068-652016	FLT WSHR 6.5-20 x 1.6
205	065-E00500	E RING 5MM
206	000-P00410-W	M SCR PH W/FS M4 x 10
207	012-P00314	TAP SCR #2 PH 3 x 14
208	250-5421	FLT WSHR 3.5-12 T=1.0
301	CFB-60030	WIRE HARN DISPENSER
302	CFB-60031	WIRE HARN EXT CARD OUT SENS

2.10 ASSY SIDE BOX R (CFB-1580)

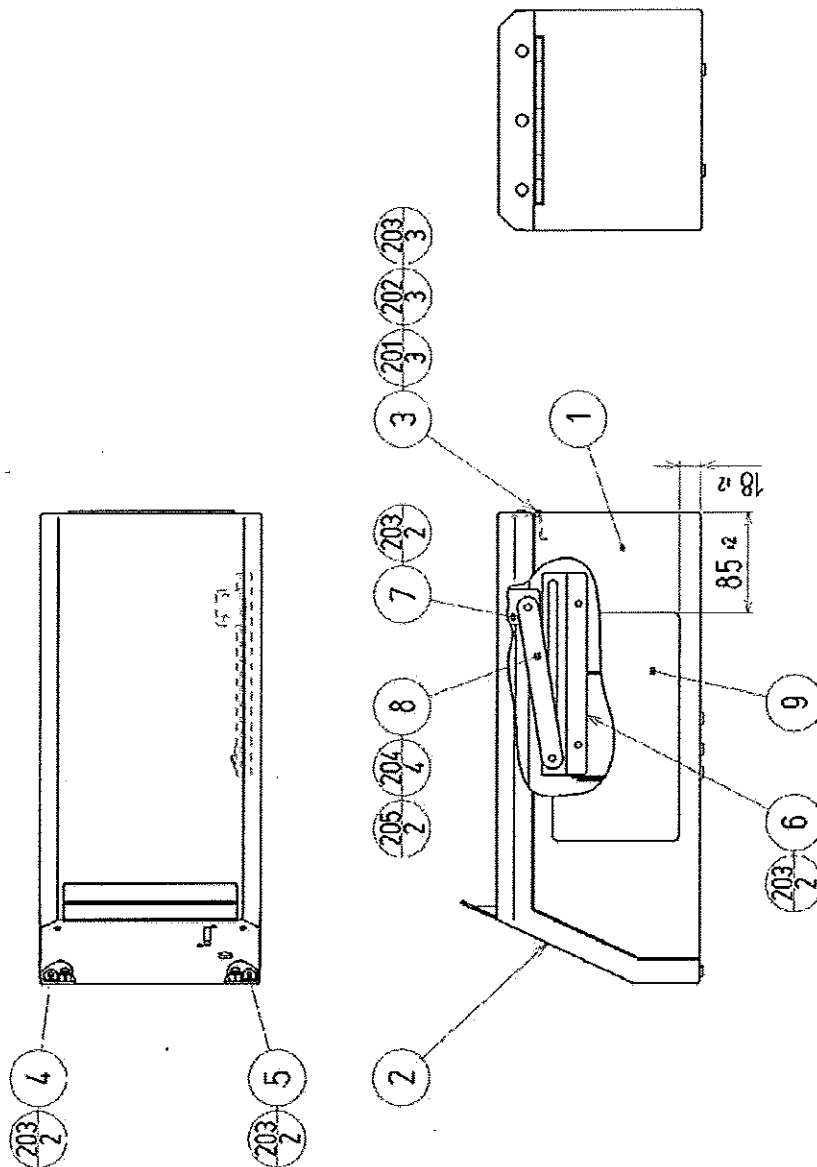


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1581	SIDE BASE R
2	CFB-1582	SIDE COVER R
3	CFB-1573	SIDE COVER HINGE
4	CFB-1583	LOCKING BRKT RL
5	CFB-1584	LOCKING BRKT RR
6	CFB-1576	STAY HOLDER A
7	CFB-1577	STAY HOLDER B
8	CKT-0404	PLATE STAY
9	CFB-1579-02	STICKER EC 04
201	031-000410-0B	CRG BLT BLK M4 x 10
202	050-F00400	FLG NUT M4
203	000-P00408-W	M SCR PH W/FS M4 x 8
204	068-652016	FLT WSHR 6.5-20 x 1.6
205	065-E00500	E RING 5MM

2.11 ASSY MONITOR BASE (CFB-1620)

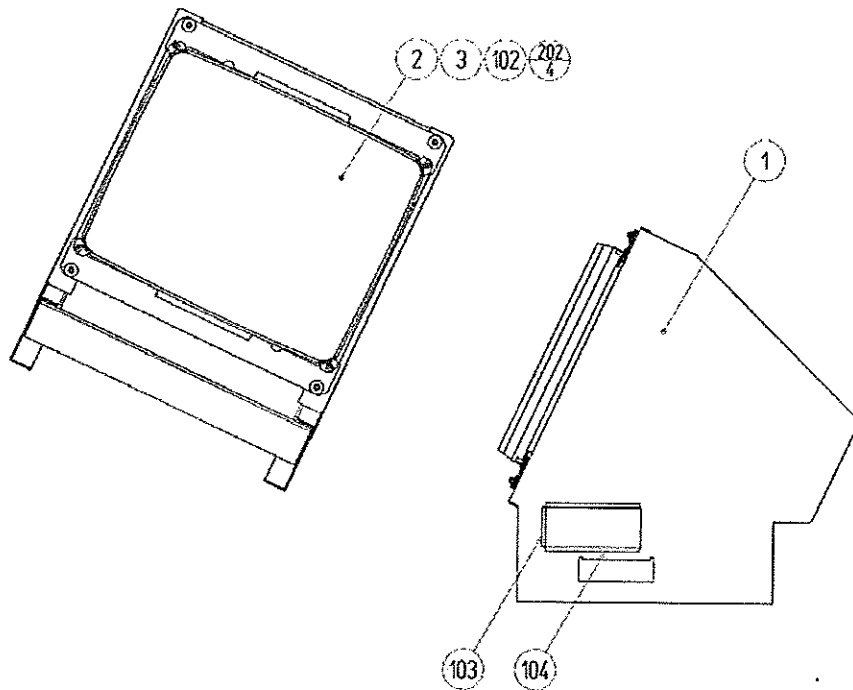


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1621	MONITOR BASE
2	253-5448	BUSHING CE
3	253-5258	SPACER
102	200-5958	ASSY CLR DSPL 19 31K 100V TOEI
103	601-6231-D058	EDGING NEW TYPE
104	601-6231-D137	EDGING NEW TYPE
202	050-F00500	FLG NUT M5

2.12 ASSY MONITOR CASE (CFB-1630)

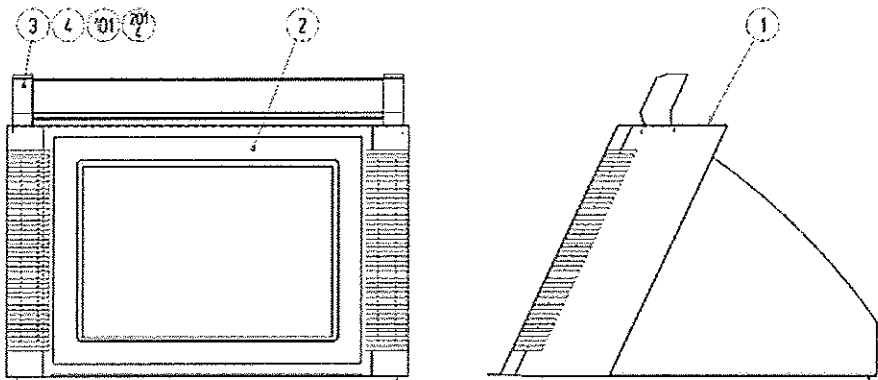


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1631	MONITOR COVER
2	CFB-1632-02	STICKER MASK 04
3	CFB-1633	WINNER PLATE
4	CFB-1634	COVER BRKT
101	390-6725-91	WINNER LED UNIT
102	280-5275-SR10	CORD CLAMP SR10
103	601-6231-C060	EDGING NEW TYPE
201	000-P00410-W	M SCR PH W/FS M4 × 10
301	CFB-60040	WIRE HARN LED

2.13 ASSY CTRL PNL L (CFB-1640)

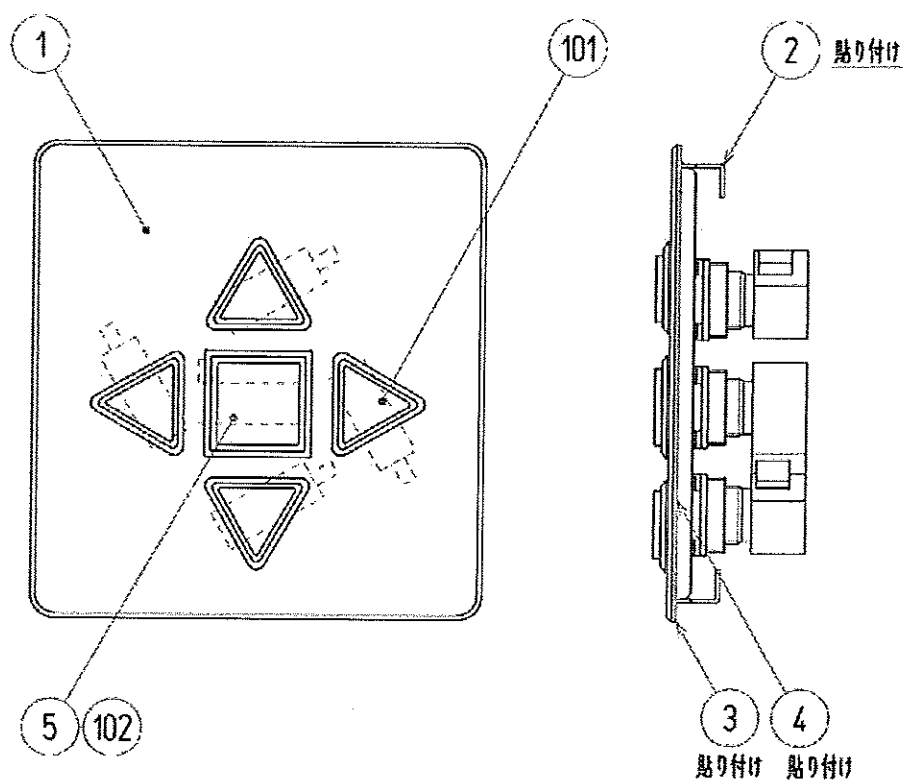


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1641	CTRL PNL L
2	CFB-1642	PANEL HOLDER L
3	CFB-1643	PANEL RUBBER A
4	CFB-1644	PANEL RUBBER B
5	CFB-1645	FILM PB PRESS
101	509-6002-91	SW OBSA-30US-Y/W-1FLE-3YH SANW
102	509-6003-91	SW OBSA-45UKK-R-1TLE-2R SANWA
103	280-5009-01	CORD CLAMP 21
301	CFB-60033	WIRE HARN CTRL PNL A

2.14 ASSY CTRL PNL R (CFB-1650)

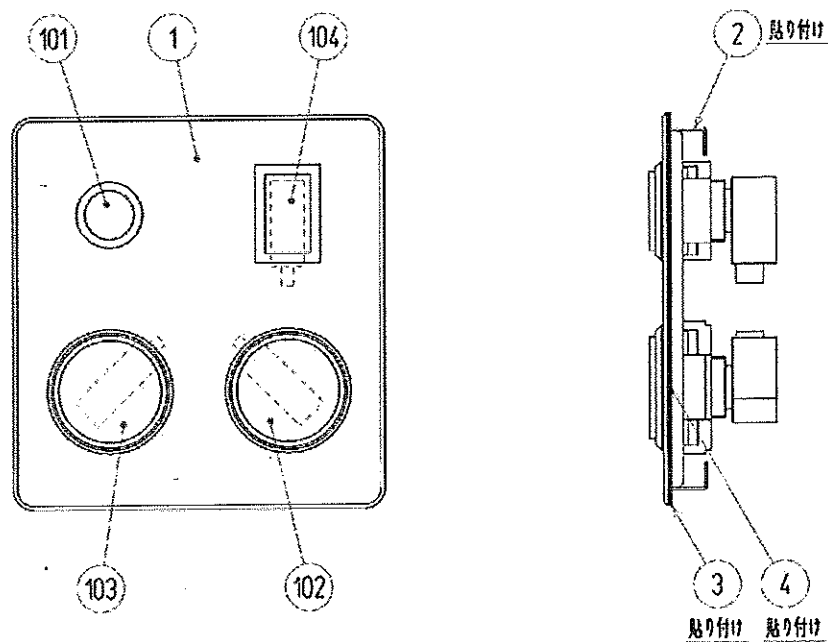


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1651	CTRL PNL R
2	CFB-1652	PANEL HOLDER R
3	CFB-1643	PANEL RUBBER A
4	CFB-1644	PANEL RUBBER B
101	509-5755-04	SW PB D30 YELLOW
102	509-6039-01	SW OBSA-60UM-B-1FLED-B-12V
103	509-6005-01-91	SW OBSA-60UM-R-1FLE-2R SANWA
104	509-6006-91	SW OBSA-45UK-G-1FLN SANWA
105	280-5009-01	CORD CLAMP 21
301	CFB-60035	WIRE HARN CTRL PNL B

2.15 RW UNIT (CFB-1660)

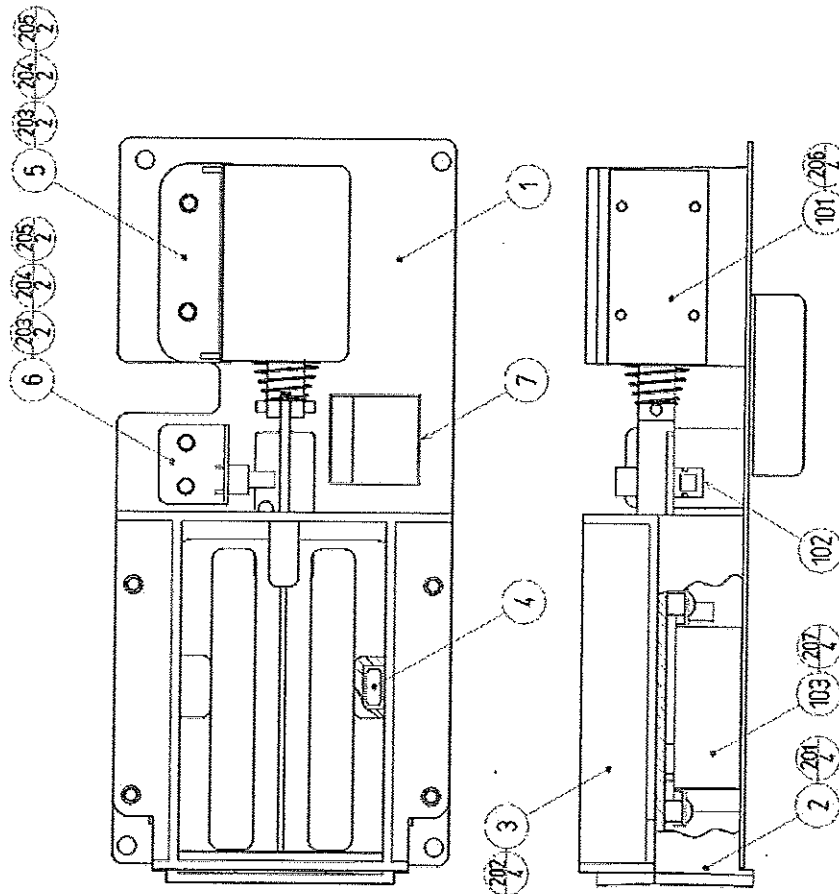



ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1661	RW BASE
2	CFB-1662	RW GUIDE LOWER
3	CFB-1663	RW GUIDE UPPER
4	CFB-1664	ROLLER
5	CFB-1665	SOL BASE
6	CFB-1666	SENSOR BRKT
7	440-WS0179-JP	STICKER W HI TEMP M
101	610-0648	SOLENOID UNIT
102	370-5161	PHOTO INTERRUPTER GP1A71A
103	601-11132	IC CARD READER HW210 (TAMURA)
104	280-5009-01	CORD CLAMP 21
105	280-5275-SR10	CORD CLAMP SR10
201	FAS-120001	TAP SCR #2 TH BLK 4 x 10
202	000-P00410-W	M SCR PH W/FS M4 x 10
203	050-H00400	HEX NUT M4
204	060-S00400	SPR WSHR M4
205	060-F00400	FLT WSHR M4
206	000-P00308-W	M SCR PH W/FS M3 x 8
207	FAS-120017	TAP SCR #2 TH 3 x 6
301	CFB-60038	WIRE HARN CARD IN
302	CFB-60043	WIRE HARN CARD READER

2.16 SW UNIT SATL (CFB-1670)

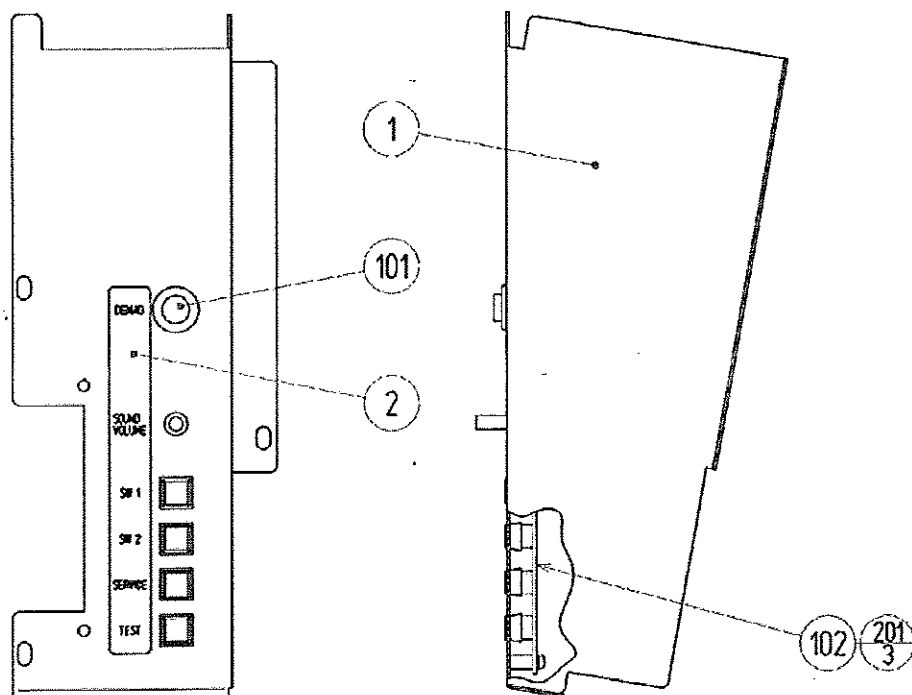


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1671	SW BRKT
2	421-11527	STICKER SW UNIT
101	509-5028	SW PB 1M (MIYAMA DS-412R)
102	838-13739	SW BD NAOMICABINET
103	280-5009-01	CORD CLAMP 21
201	000-P00308-W	M SCR PH W/FS M3 x 8
301	CFB-60019	WIRE HARN DEMAG SW

2.17 ASSY SELECTOR (CFB-1680)

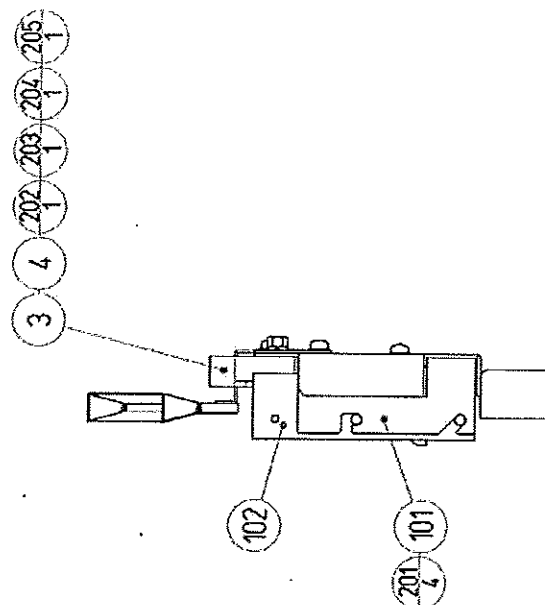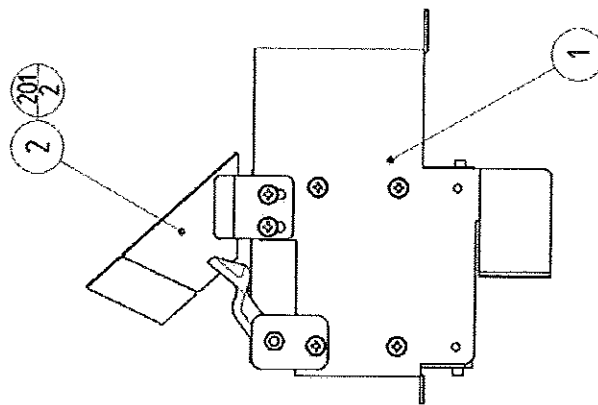


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1681	COIN CHUTE BRKT
2	CFB-1682	UPPER COIN CHUTE
3	CFB-1683	REJECT SHAFT
4	VSC-1474	REJECT CAM
101	220-5756	CHANNEL BRKT CB-624S
102	220-5755-91	ELEC CC REJR ¥500/¥100 AD-622E
201	010-P00408-F	S-TITE SCR PH W/F M4 x 8
202	050-H00500	HEX NUT M5
203	060-S00500	SPR WSHR M5
204	060-F00500	FLT WSHR M5
205	065-E00300	E RING 3MM

2.18 ASSY BACK DOOR (CFB-1690)

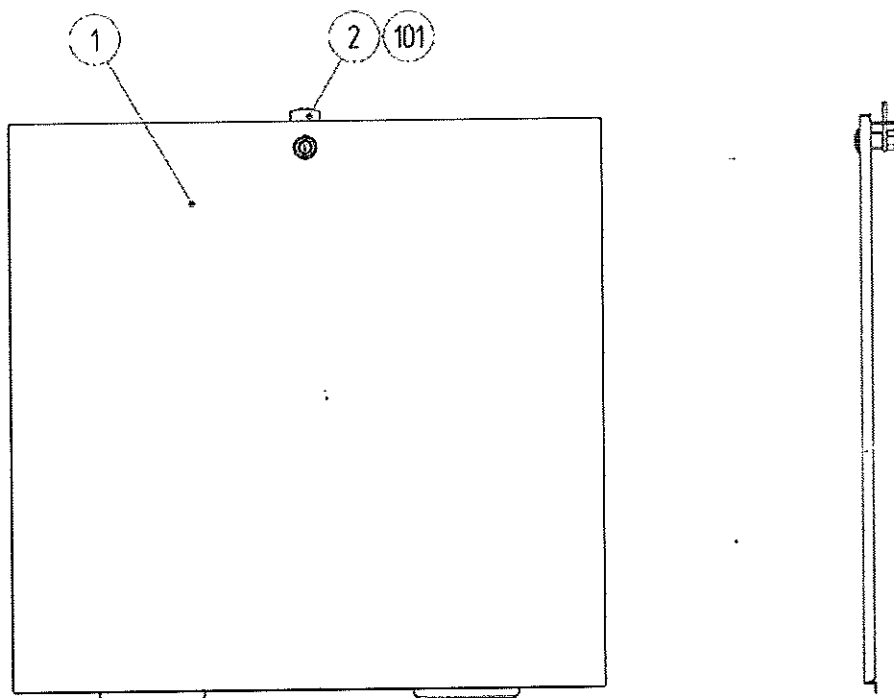


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1691	BACK DOOR
2	DP-1167	TNG LKG
101	220-5575	CAM LOCK MASTER W/O KEY

2.19 ASSY SUPPLY DOOR (CFB-1695)

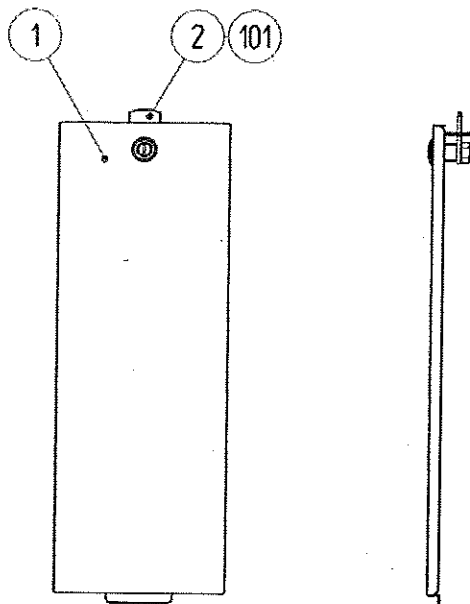


ITEM NO.	PART NO.	DESCRIPTION
1	CFB-1696	SUPPLY DOOR
2	DP-1167	TNG LKG
101	220-5575	CAM LOCK MASTER W/O KEY

2.20 ASSY SATL BD (CFB-4500)

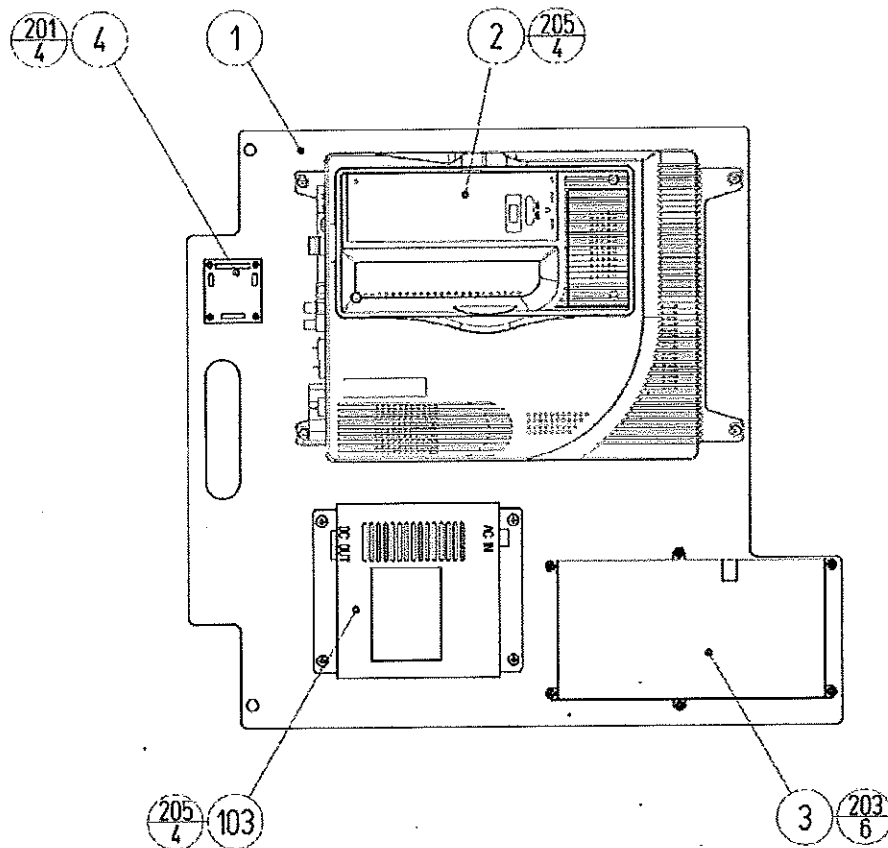

ITEM NO.	PART NO.	DESCRIPTION
1	CFB-4501	WOODEN BASE SATL BD
2	840-0159D.	ASSY CASE NAT CFB 04 JPN
3	837-13844-02	I/O CONTROL BD 2 W/O 232C DOG
4	839-1204	SERIAL I/F BD
101	280-5009-01	CORD CLAMP 21
102	280-0419	HARNESS LUG
103	400-5397-01	SW REGU FOR JVS VA
104	601-0460	PLASTIC TIE BELT 100 MM .
201	011-P00325	TAP SCR PH 3 × 25
202	011-T03512	TAP SCR TH 3.5 × 12
203	011-T03516	TAP SCR TH 3.5 × 16
204	011-F00310	TAP SCR FH 3 × 10
205	000-P00416-W	M SCR PH W/FS M4 × 16
301	CFB-60008	WIRE HARN EXT DC OUT
302	CFB-60009	WIRE HARN DC OUT VL 6P
303	CFB-60010	WIRE HARN DC OUT VL 8P
304	CFB-60011	WIRE HARN SERIAL
305	CFB-60012X	WIRE HARN MAPLE
306	CFB-60013	WIRE HARN AC 100V
307	CFB-60014	WIRE HARN I/O BD
308	CFB-60015	WIRE HARN I/O BD 12V
309	CFB-60041	WIRE HARN CARD SERIAL
310	600-7141-100	CABLE JVS TYPE A-B, 100CM
311	600-7158-0100	CA AUDIO RCA TO RCA 2CH 100CM

2.21 ASSY ELEC SATL (CFB-4600)

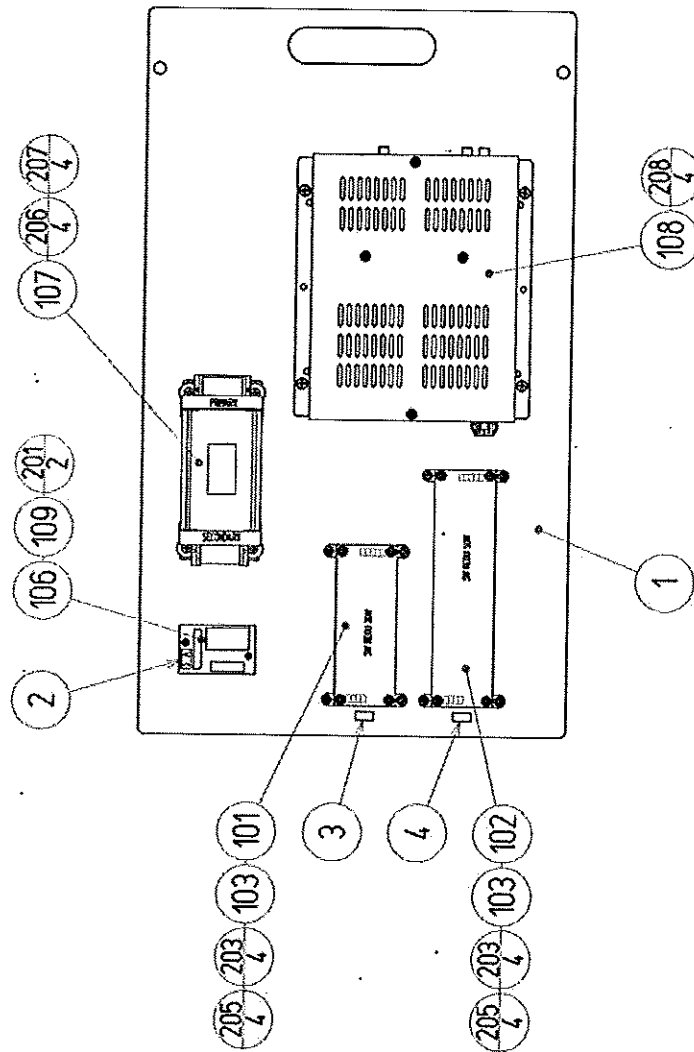

ITEM NO.	PART NO.	DESCRIPTION
1	CFB-4601	WOODEN BASE ELEC SATL
2	421-6595-05	STICKER 5A (80426)
3	421-9693-12	STICKER DC 12V
4	421-9693-24	STICKER DC 24V
101	400-5421-03012	SW REGU LCA30S-12
102	400-5421-05024	SW REGU LCA50S-24
103	601-7467	L-LOCK BK
104	280-5009-01	CORD CLAMP 21
105	280-0419	HARNESS LUG
106	514-5036-5000	FUSE 6.4 x 30 5000MA 125V
107	560-5433-V	XFMR 100V-120V 100V 5A WB
108	601-10369	STEREO PWR AMP 47
109	838-11856-01-UL	CONNECT BD W/FUSE & COVER UL
201	011-P00325	TAP SCR PH 3 x 25
202	011-T03512	TAP SCR TH 3.5 x 12
203	011-T03516	TAP SCR TH 3.5 x 16
204	011-F00310	TAP SCR FH 3 x 10
205	000-P00310-W	M SCR PH W/FS M3 x 10
206	000-P00416-S	M SCR PH W/S M4 x 16
207	069-000005	FLT WSHR 4.4-16 x 1.6
208	000-P00412-W	M SCR PH W/FS M4 x 12
301	CFB-60003	WIRE HARN XFMR OUT
302	CFB-60004	WIRE HARN AC OUT 15P
303	CFB-60005	WIRE HARN AC OUT 9P
304	CFB-60006X	WIRE HARN LCA 50S-24
305	CFB-60007X	WIRE HARN LCA 30S-12

SEGA AMUSEMENTS EUROPE

Suite 3a, Oaks House,
12/22 West Street,
Epsom.
SURREY. KT18 7RG

UK Customers

Tel: +44(0) 1372 731 820

Fax: +44(0) 1372 731 849

SEGA



© SEGA