


This document has been downloaded from:



FLIPPERSPILL.COM

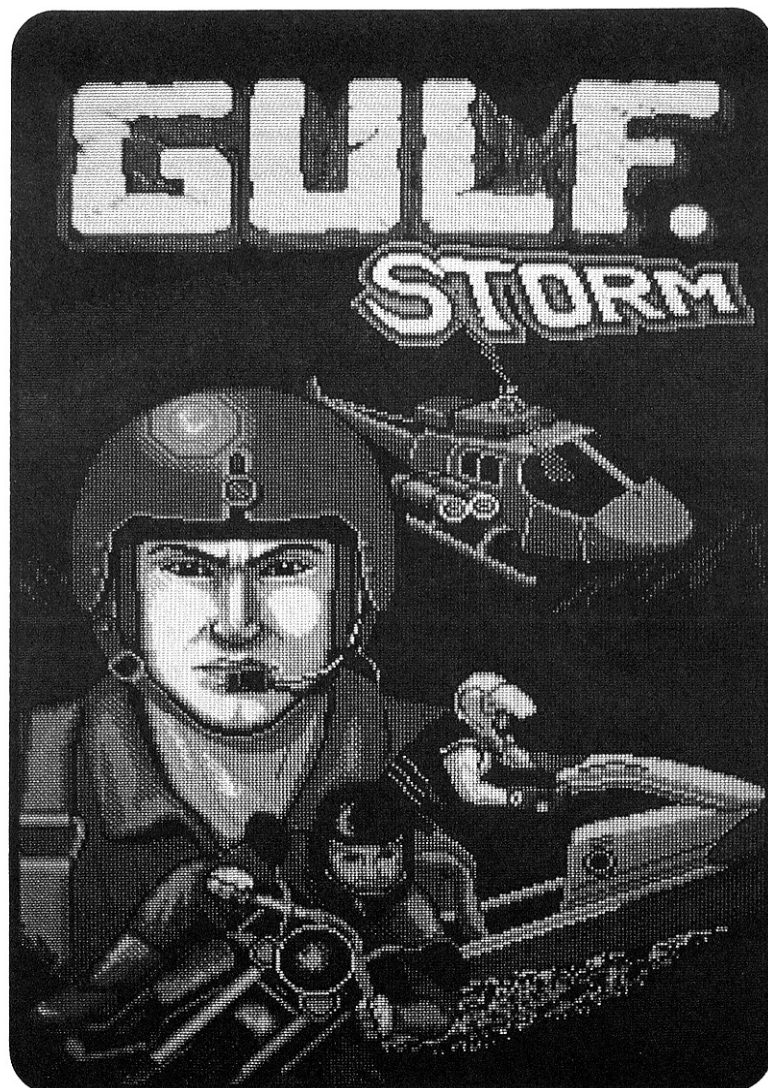

取扱説明書
Service Manual

 **メディア商事株式会社**

エッジコネクタ ● Edge Connector

● JAMMA規格

仕様 Technical information

- (1) 電源 Required Power Capacity
 +5V 4A or more
 +12V 1A or more
- (2) 出力 Output
 R— analog, positive
 G— analog, positive
 B— analog, positive
 SYNC— H-V complexed,
 negative

プレイ インストラクション Play Instruction


SHOOT1 マシンガン MACHIN GUN
 SHOOT2 ファイヤーボム FIRE BOMB

- A** BOMBがふえる
 Available one more
 FIRE BOMB
- B** ショットのパワーアップ
 Power up
- C** オート連射
 Automatic shooting

半田面 SOLDER SIDE			部品面 COMPONENT SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SP (-)	L	10	SP (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
START SW 2	U	17	START SW 1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOOT 1	Z	22	1P SHOOT 1
2P SHOOT 2	a	23	1P SHOOT 2
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

コントロールパネル CONTROL PANEL

PCボード レイアウト P.C. BOARD LAYOUT

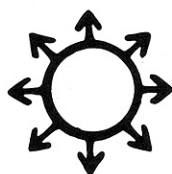

8方向レバー
8-WAY LEVER



ボタン 1
BUTTON 1



ボタン 2
BUTTON 2



音量
Sound adjustment



DIP SW A



DIP SW B

ディップスイッチ●Dip Switch

DIP SW A		1	2	3	4	5	6	7	8
MODE	* GAME MODE TEST MODE	OFF ON							
COIN TYPE	* TYPE 1 TYPE 2		OFF ON						
デモ時の音 DEMONSTRATION SOUND	* 有り YES 無し NO			OFF ON					
画面反転 SCREEN REVERSE	* 標準 NORMAL 反転 INVERT				OFF ON				
	TYPE 1	TYPE 2							
プレイ料金 PLAY PRICING COIN 1	* 1 COIN 1 PLAY 1 COIN 2 PLAY 2 COIN 1 PLAY 2 COIN 3 PLAY	1 COIN 1 PLAY 2 COIN 1 PLAY 3 COIN 1 PLAY 4 COIN 1 PLAY				OFF ON OFF ON	OFF OFF ON ON		
プレイ料金 PLAY PRICING COIN 2	* 1 COIN 1 PLAY 1 COIN 2 PLAY 2 COIN 1 PLAY 2 COIN 3 PLAY	1 COIN 2 PLAY 1 COIN 3 PLAY 1 COIN 4 PLAY 1 COIN 6 PLAY						OFF ON OFF ON	OFF OFF ON ON

DIP SW B		1	2	3	4	5	6	7	8
プレイヤー数 NUMBER OF PLAYER	* 3 2 4 1	OFF ON OFF ON	OFF OFF ON ON						
SCREEN STOP									
難易度 DIFFICULTY	* 普通 NORMAL 易しい EASY 難しい HARD 大変難しい HARDEST			OFF ON OFF ON	OFF OFF ON ON				
ボーナス プレイヤー 1 UP BONUS	* 300,000 EVERY 400,000 EVERY 500,000 EVERY 無し NO BONUS					OFF ON OFF ON	OFF OFF ON ON		
パワーアップ POWER UP	1 2							OFF ON	
ゲームのコンテニュー CONTINU PLAY	* 有り WITH 無し WITHOUT								OFF ON

*印は出荷時の設定を示す。

* SHOWS RECOMMENDED SETTINGS.