


# CONTRA™




lazpig

CONTRA™ is a registered trademark of Konami Inc. © 1987 Konami Inc.  
KONAMI® is a trademark of Konami Industry Co., Ltd.


# KONAMI'S CABINET AC FLOW CHART

1. Green/Yellow
2. Black
3. Red
4. Blue
5. Brown
6. Yellow/Red
7. Orange/White
8. Red/White
9. Black/White
10. None
11. None
12. White
13. Orange
14. Green
15. Violet







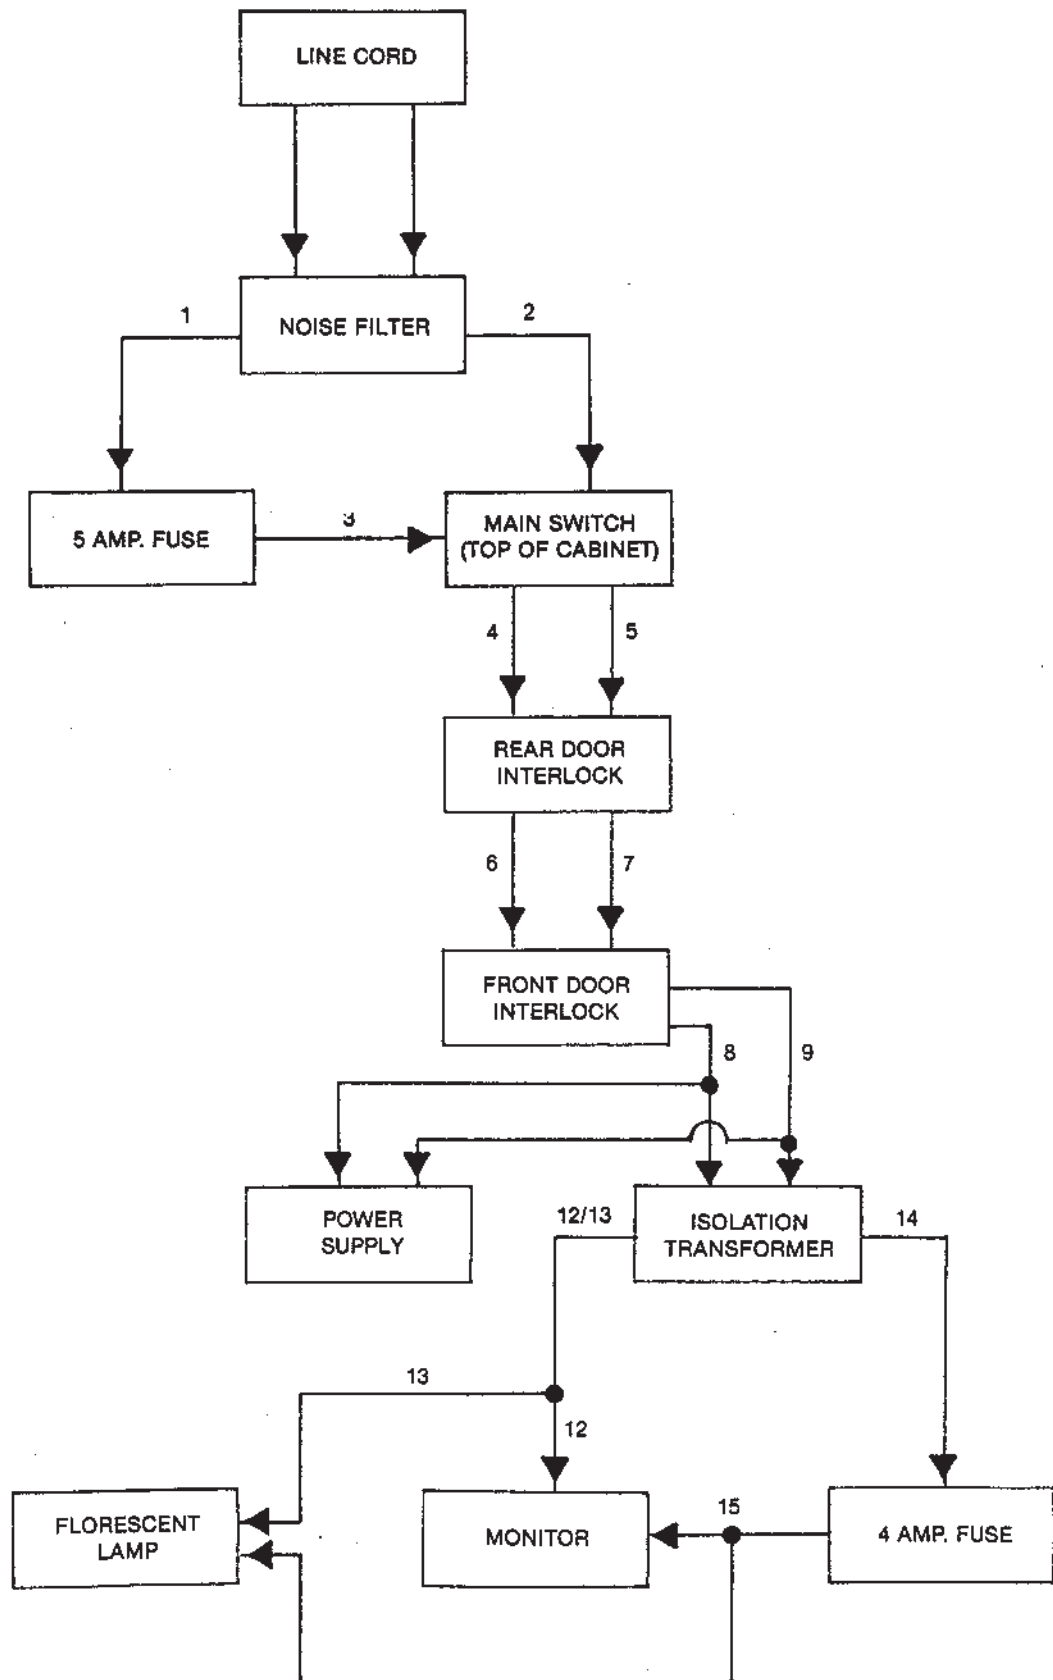


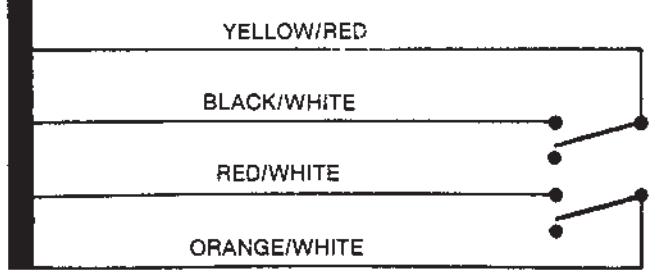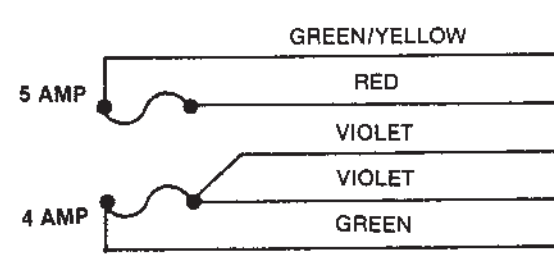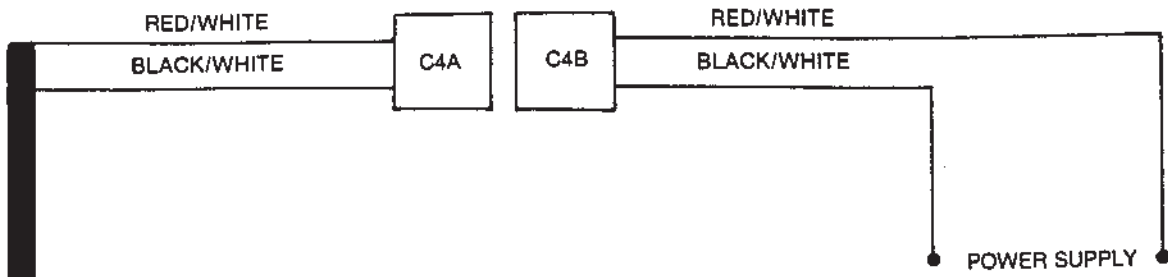

FRONT DOOR INTERLOCK

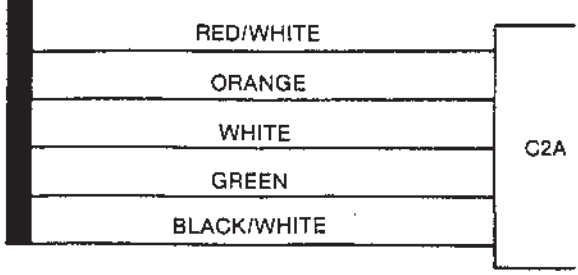


KONAMI'S CABINET AC CABLE

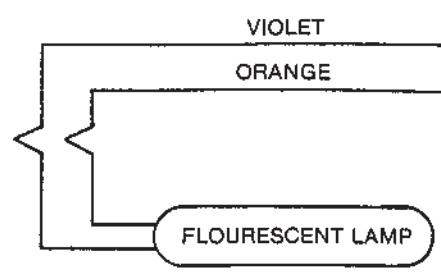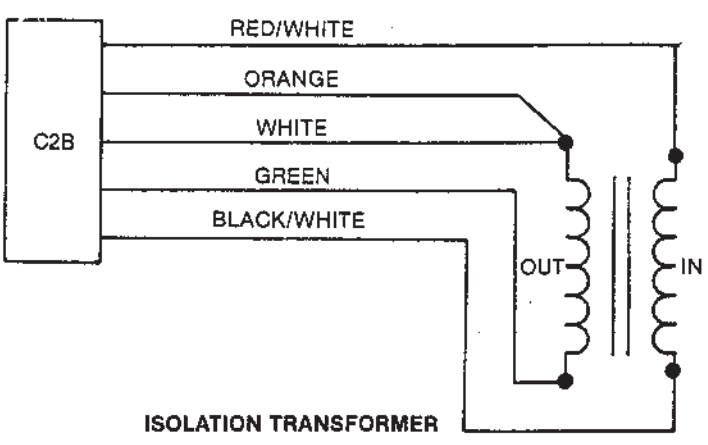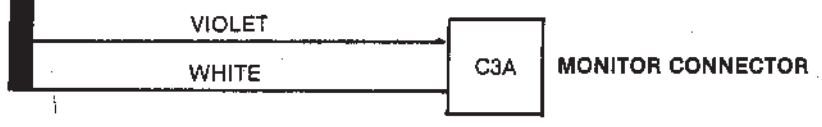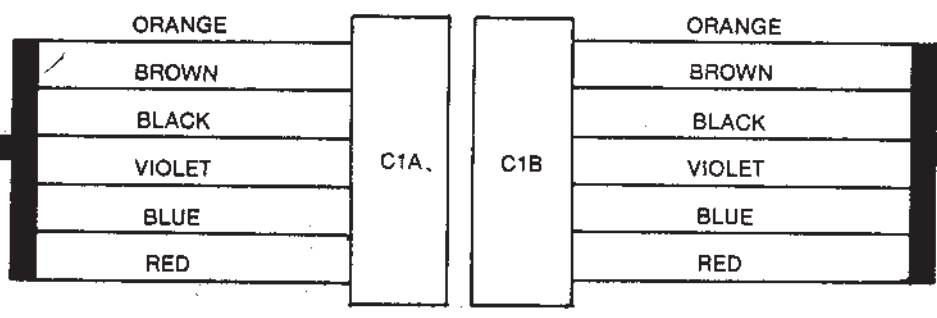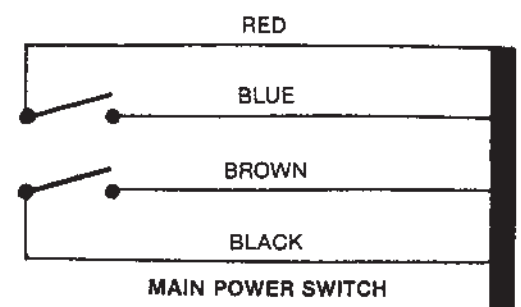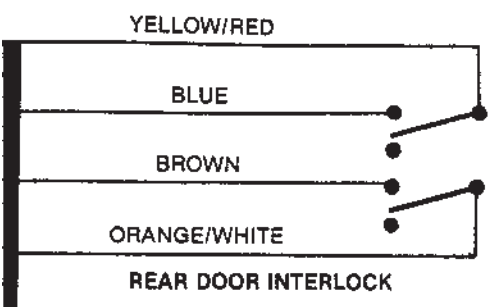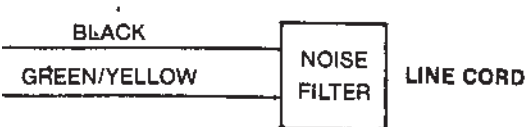

# CONTRA

## WIRING DIAGRAM

- NOTES -
- 1 1P NO.1 PLAYER
- 2 2P NO.2 PLAYER

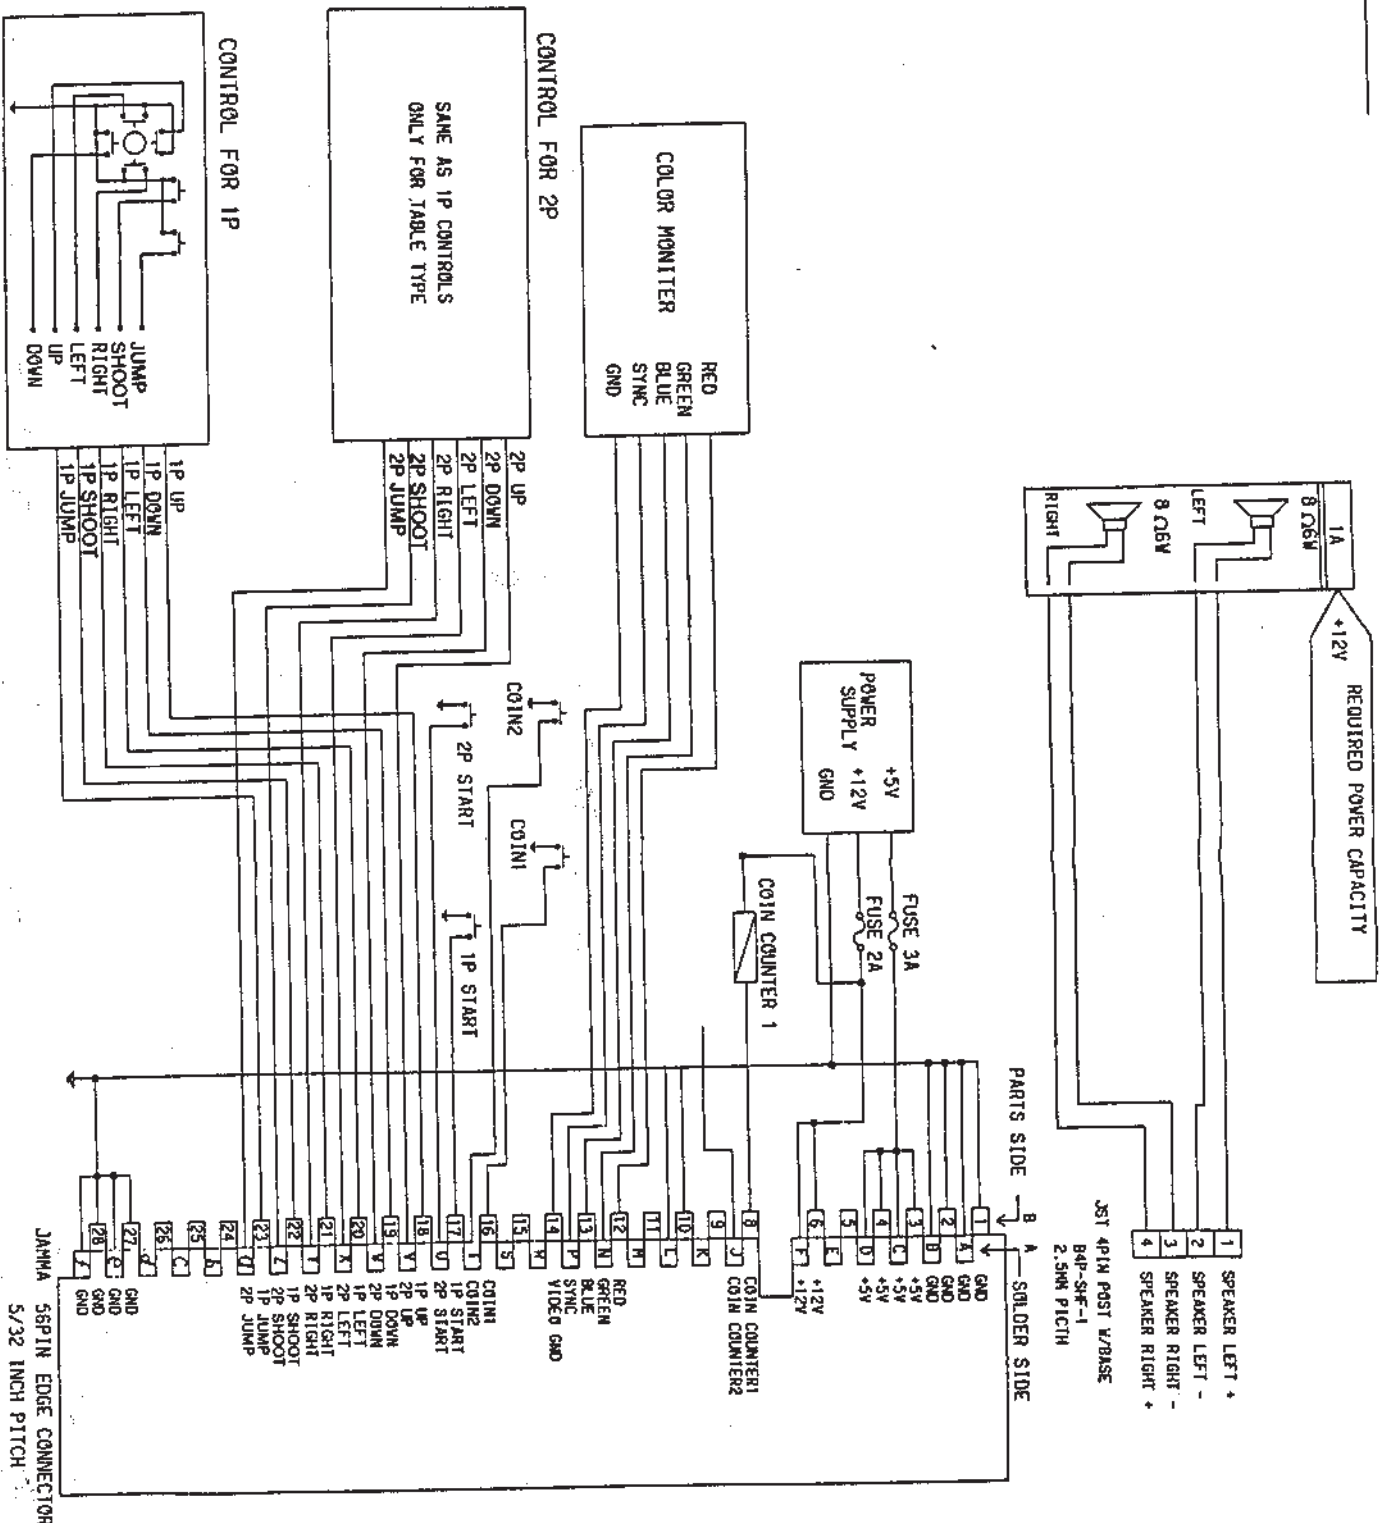



# CONTRA: WIRING HARNESS

Solder Side ← → Parts Side

## WIRE COLOR KEY:

BLACK	GND	A	1	GND	BLACK
BLACK	GND	B	2	GND	BLACK
RED	+5V DC	C	3	+5V DC	RED
RED	+5V DC	D	4	+5V DC	RED
	NOT USED	E	5	NOT USED	
ORANGE	+12V DC	F	6	+12V DC	ORANGE
	*KEY	H	7	*KEY	
BROWN/YELLOW	COIN COUNTER 2	J	8	COIN COUNTER 1	GREEN/GRAY
	(EMPTY)	K	9	(EMPTY)	
	(EMPTY)	L	10	(EMPTY)	
	(EMPTY)	M	11	(EMPTY)	
WHITE/GREEN	VIDEO GREEN	N	12	VIDEO RED	RED/WHITE
WHITE	VIDEO SYNC	P	13	VIDEO BLUE	BLUE/WHITE
RED/YELLOW	SERVICE SW	R	14	VIDEO GROUND	BLACK
	(EMPTY)	S	15	(EMPTY)	
VIOLET/WHITE	COIN 2	T	16	COIN 1	BLUE/BROWN
RED/GREEN	2P START	U	17	1P START	PINK/YELLOW
BLUE/YELLOW	2P UP	V	18	1P UP	ORANGE/WHITE
VIOLET/YELLOW	2P DOWN	W	19	1P DOWN	BLACK/WHITE
ORANGE/GREEN	2P LEFT	X	20	1P LEFT	RED/GRAY
ORANGE/YELLOW	2P RIGHT	Y	21	1P RIGHT	GRAY/WHITE
BLACK/YELLOW	2P SHOOT	Z	22	1P SHOOT	PINK/WHITE
ORANGE/GRAY	2P JUMP	a	23	1P JUMP	GREEN/BROWN
	NOT USED	b	24	NOT USED	
	NOT USED	c	25	NOT USED	
	NOT USED	d	26	NOT USED	
BLACK	GND	e	27	GND	BLACK
BLACK	GND	f	28	GND	BLACK

(BASE COLOR/LINE COLOR)

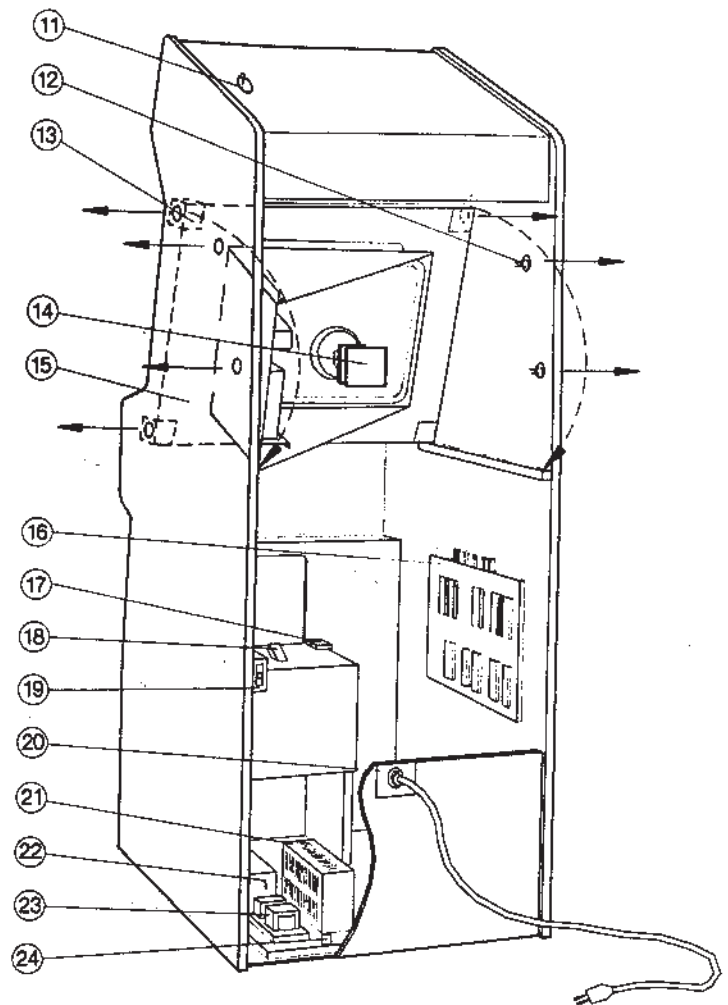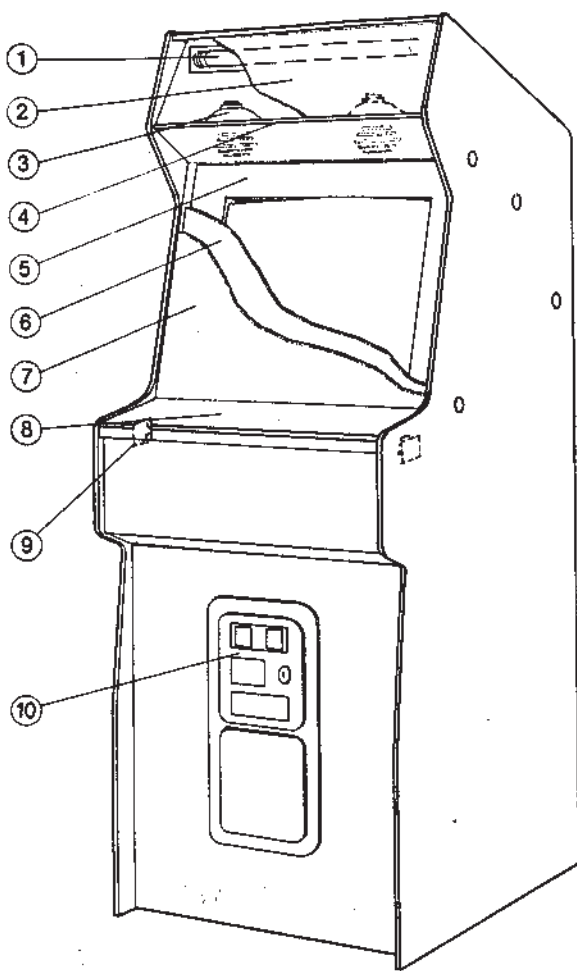

No.	Konami Part No.	Description
1	KEV-101	Marquee Florescent Light
2*	KEV-102	Marquee Plexi
3	KEV-103	8 ohm Speaker x 2
4	KEV-104	Marquee Bracket
5	KEV-105	Foam Monitor Bezal
6	KEV-106	Tinted Plexi
7	KEV-107	Tempered Glass
8*	KEV-108	Wood Control Panel
9	KEV-109	Control Panel Latch (2 piece)
10	KEV-110	Over & Under Coin Door
11	KEV-111	D.P.D.T. On-Off Switch
12	KEV-112	Monitor Bolts x 8


No.	Konami Part No.	Description
13	KEV-113	2-Position Monitor Bracket
14	KEV-114	R.G.B. Monitor
15	KEV-115	Wooden Monitor Housing
16*	KEV-116	Game P.C.B.
17	KEV-117	D.P.D.T. 2-way Interlock Switch
18	KEV-118	12 Volt Coin Meter
19	KEV-119	D.P.D.T. 2-way Interlock Switch
20	KEV-120	Line Cord w/Mounting Bracket
21	KEV-121	4 Output Voltage Power Supply
22	KEV-122	AC Voltage Fuse Holder x 2
23	KEV-123	Isolation Transformer x 2
24	KEV-124	In-Line Noise Filter

**NOT SHOWN**

- KEV-125 Marquee Light Shield (Cardboard)
- KEV-126 DC Wiring Harness
- KEV-127 AC Wiring Harness

\*PLEASE INDICATE NAME OF GAME WHEN ORDERING

# COMPLETE COIN DOOR ASSEMBLY EXPLODED VIEW

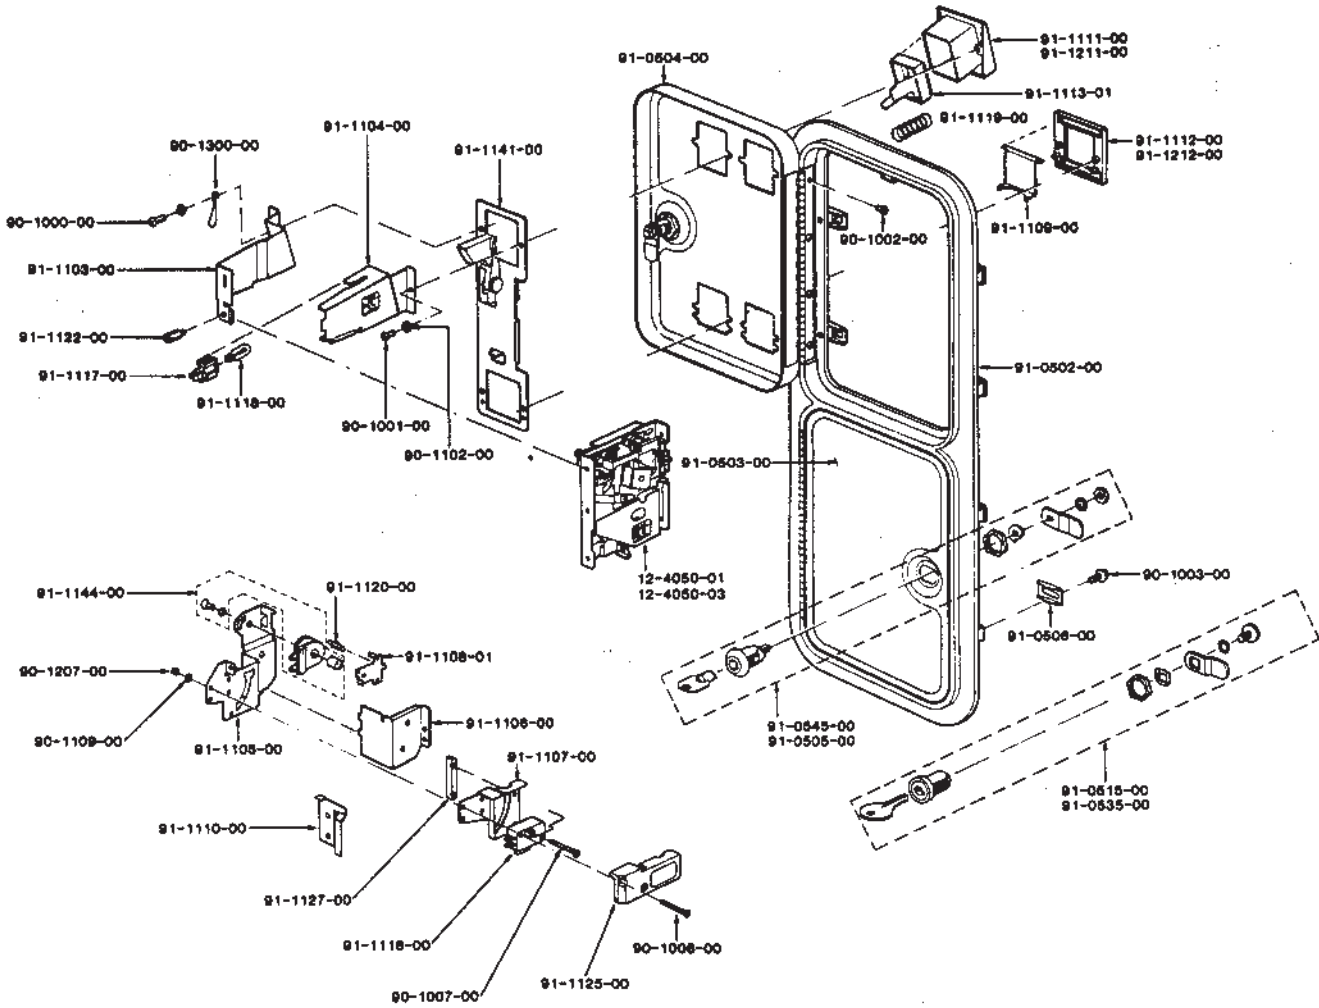

## PARTS LIST

12-4050-01 S-10 Acceptor Body  
US 25¢  
12-4050-03 S-10 Acceptor Body  
Canadian 25¢  
20-4177-00 Plastic Cash Box  
20-4179-00 Steel Enclosure  
22-1400-00 Locking Bar  
24-1150-00 Wire Harness  
90-1000-00 Keyhook Bezel Screw  
90-1001-00 Bezel Screw  
90-1002-00 Hinge Screw  
90-1003-00 Clamp Screw  
90-1007-00 Flat Head Microswitch  
Mounting Screw  
90-1008-00 Panhead Microswitch  
Mounting Screw

90-1102-00 Washer for Bezel Screw  
90-1207-00 Nut for Microswitch  
Mounting Screw  
90-1300-00 Keyhook  
91-0502-00 Zinc Die Cast Frame  
91-0503-00 Lower Door  
91-0504-00 Upper Door  
91-0505-00 Round Lock and Cam  
Assembly  
91-0506-00 Flat Lock and Cam  
Assembly  
91-0515-00 Flat Lock and Cam  
Assembly  
91-0535-00 Flat Lock and Cam  
Assembly  
91-0545-00 Round Lock and Cam  
Assembly

91-1103-00 Coin Inlet Lamp Side  
91-1104-00 Coin Inlet Cover Side  
91-1105-00 Reject Cup Side Plate  
91-1108-00 Reject Cup Base Plate  
91-1107-00 Microswitch Bracket  
91-1108-01 Lockout Flap US 25¢  
91-1109-00 Reject Flap  
91-1110-00 Metal Switch Adjuster  
91-1111-00 Black Button Bezel  
91-1112-00 Black Reject Bezel  
91-1113-01 Entry/Reject Button  
US 25¢  
91-1116-00 Microswitch (Black End  
Arm)  
91-1117-00 Lampholder  
91-1118-00 6 Volt Wedge Base Lamp

91-1119-00 Button Spring  
91-1120-00 Lockout Spring  
91-1122-00 Retaining Screw for  
Acceptor Body  
91-1125-00 Clear Plastic Cover for  
Microswitch  
91-1127-00 Plastic Switch Adjuster  
91-1141-00 Base Plate With Pivot  
and Stud  
91-1144-00 6 Volt DC Lockout Coil  
Assembly  
91-1211-00 Zinc Plated Button Bezel  
91-1212-00 Zinc Plated Reject Bezel



# QUICK CHANGE MONITOR


AS ALWAYS, WHEN INVOLVED IN SERVICING OF A VIDEO MONITOR BE EXTREMELY CAREFUL OF THE HIGH VOLTAGE.

The Konami Cabinet has been uniquely designed to be utilized for a horizontal or vertical monitor game. The Konami Cabinet is built with a vertical style monitor which is mounted on a 22½" by 22½" square mounting board. The monitor mounting board has a 13 gauge steel two-way bracket in each corner. Since the monitor board is square and the brackets are mirror-imaged, the monitor can be quickly and easily converted from vertical to horizontal or vice-versa.

1. Make sure the power line cord is unplugged.
2. Remove back door and control panel.
3. Remove tempered glass, tinted plexi, and foam bezel.
4. Disconnect all wires leading to the monitor.
5. Disconnect all wires leading to the top of the cabinet.
6. Remove bolts 'B', 'C', and 'D' from each side of the cabinet.
7. Lower the top part of the monitor down, leaving the pivoting bolt 'A' in place, until the monitor rests on the shelf (as shown in figure to the right).
8. Remove bolts 'A' and the monitor is free to slide out of the cabinet.
9. Turn monitor to desired position.

NOTE: When mounting the monitor vertically; monitor chassis should be toward the bottom of the cabinet.  
When mounting the monitor horizontally; monitor chassis should be to your left when looking in the back of the cabinet.

10. Slide monitor back into the cabinet.
11. Secure bottom of monitor with bolts 'A'.
12. Depending on desired angle secure top of monitor bolts  
B  $\approx 70^\circ$   
C  $\approx 40^\circ$   
D  $\approx 15^\circ$
13. Reconnect all wires.

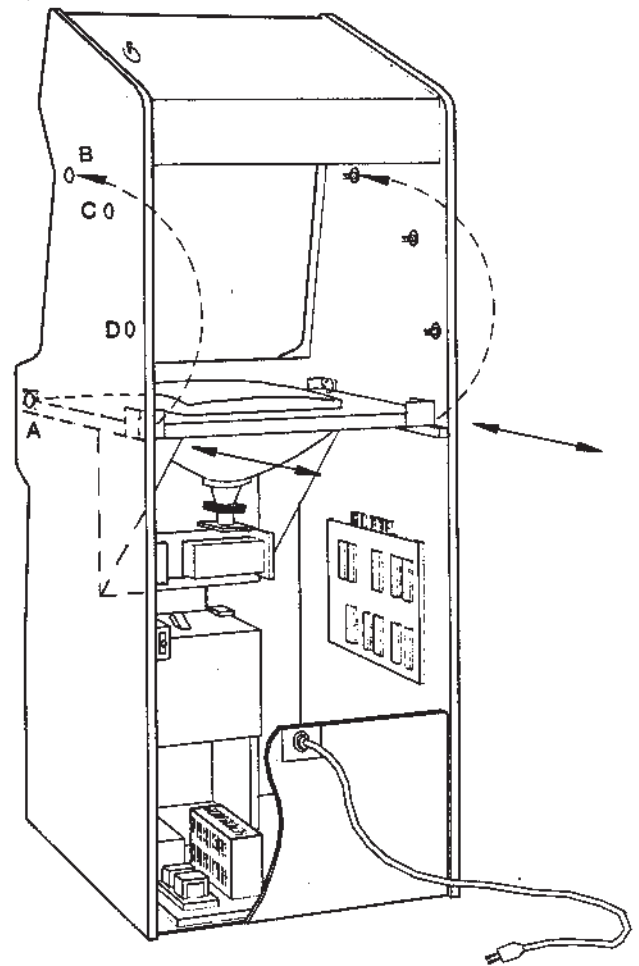

# CONTRA

## DIP SWITCH SETTINGS

### DIP SWITCH NO. 1 SETTINGS

#### 1. COIN.1

SW	1	2	3	4	COIN	PLAY
●	OFF	OFF	OFF	OFF	1	1
	ON	OFF			1	2
	OFF	ON			1	3
	ON	ON			1	4
	OFF	OFF	ON	OFF	1	5
	ON	OFF			1	6
	OFF	ON			1	7
	ON	ON			2	1
	OFF	OFF	OFF	ON	2	3
	ON	OFF			2	5
	OFF	ON			3	1
	ON	ON			3	2
	OFF	OFF	ON	ON	3	4
	ON	OFF			4	1
	OFF	ON			4	3
	ON	ON			FREEPLAY	

#### 2. COIN.2

SW	5	6	7	8	COIN	PLAY
●	OFF	OFF	OFF	OFF	1	1
	ON	OFF			1	2
	OFF	ON			1	3
	ON	ON			1	4
	OFF	OFF	ON	OFF	1	5
	ON	OFF			1	6
	OFF	ON			1	7
	ON	ON			2	1
	OFF	OFF	OFF	ON	2	3
	ON	OFF			2	5
	OFF	ON			3	1
	ON	ON			3	2
	OFF	OFF	ON	ON	3	4
	ON	OFF			4	1
	OFF	ON			4	3
	ON	ON			VOID	

### DIP SWITCH NO. 2 SETTINGS

SW3: NOT USED

#### 1. THE NUMBER OF THE PLAYER'S LIFE

SW	1	2	NUMBER
●	OFF	OFF	2
	ON	OFF	3
	OFF	ON	5
	ON	ON	7

#### 3. BONUS LIFE

SW	4	5	BONUS LIFE
●	OFF	OFF	at 30,000 pts, then every 70,000 pts
	ON	OFF	at 40,000 pts, then every 80,000 pts
	OFF	ON	at 40,000 pts only
	ON	ON	at 50,000 pts only

#### 4. DIFFICULTY OF THE GAME

SW	6	7	DIFFICULTY
●	OFF	OFF	EASY
	ON	OFF	NORMAL
	OFF	ON	DIFFICULT
	ON	ON	VERY DIFFICULT

#### 5. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
●	OFF	OFF
	ON	ON

### DIP SWITCH NO. 3 SETTINGS

SW2: NOT USED

#### 1. VIDEO SCREEN FLIP

SW	1	
●	OFF	NORMAL
	ON	UPSIDE DOWN

#### 3. CHANGE OF MODE

SW	3	MODE
●	OFF	GAME MODE
	ON	TEST MODE

#### 4. SOUND MODE

SW	4	SOUND MODE
●	OFF	STEREO
	ON	MONAURAL

● SHOWS NORMAL SETTING

