This document has been downloaded from:



The largest resource for amusement machines documentation on the world wide web!





į,

THIS EQUIPMENT COMPLIES WITH THE REQUIREMENTS IN PART 15 OF FCC RULES FOR A CLASS A COMPUTING DEVICE. OPERATION OF THIS EQUIPMENT IN A RESIDEN-TIAL AREA MAY CAUSE UNACCEPTABLE INTERFERENCE TO RADIO AND TV RECEPTION REQUIRING THE OPERATOR TO TAKE WHATEVER STEPS ARE NECESSARY TO CORRECT THE INTERFERENCE.





815 Mittel Drive, Wood Dale, Illinois 60191 Telephone: (312) 595-1443, Telex: 6871385 KONAM UW, Fax: (312) 595-2973

INSTRUCTION MANUAL

MAIN EVENTTM is a registered trademark of Konami Inc. © 1988 Konami Inc. KONAMI® is a trademark of Konami Industry Co., Ltd.



MAIN EVENT: WIRING HARNESS

MAIN EVENT: SUB HARNESS

MAIN EVENT: W	IRING HARN	ESS							1	
								1	Coin 3	White/Violet
						•		2	Empty	
	Solder Side 🗲 🗕			> Parts Side				3	3P Left	White/Red
VIRE COLOR KEY:								4	3P Right	White/Yellow
BLACK	GND	A	1	GND	BLACK			5	3P Up	White/Black
BLACK	GND	В	2	GND	BLACK			6	3P Down	White/Blue
RED	+ 5V DC	С	3	+ 5V DC	RED		CN3	7	3P Tag	White/Brown
RED	+ 5V DC	D	4	+ 5V DC	RED		3P	8	3P Action	White/Orang
	NOT USED	E	5	NOT USED			CONTROLS	9	Empty	
ORANGE	+ 12V DC	F	6	+ 12V DC	ORANGE			10	Empty	
	*KEY	н	7	*KEY				11	Empty	
	(EMPTY)	J	8	COIN COUNTER	GREEN/GRAY			12	Empty	
	(EMPTY)	к	9	(EMPTY)				13	Empty	
YELLOW	SPEAKER (-)	L	10	SPEAKER (+)	BLUE			14	Empty	
	(EMPTY)	м	11	(EMPTY)				15	Ground	Black
WHITE/GREEN	VIDEO GREEN	N	12	VIDEO RED	RED/WHITE					
WHITE	VIDEO SYNC	P	13		BLUE/WHITE			1	Coin 4	Blue
	(EMPTY)	R	14	VIDEO GROUND	BLACK			2	Empty	
	(EMPTY)	S	15	(EMPTY)				3	4P Left	Yellow/Black
VIOLET/WHITE	COIN 2	Т	16		BLUE/BROWN			4	4P Right	Brown/Black
RED/GREEN	2P START	U	17	1P START	PINK/YELLOW			5	4P Up	Green/Yellov
BLUE/YELLOW	2P UP	v	18	1P UP	ORANGE/WHITE			6	4P Down	Yellow/Red
VIOLET/YELLOW	2P DOWN	w	19	1P DOWN	BLACK/WHITE		CN4	7	4P Tag	Yellow/White
ORANGE/GREEN	2P LEFT	x	20	 1P LEFT	RED/GRAY		4P	8	4P Action	Yellow/Blue
ORANGE/YELLOW	2P RIGHT	Y	21	1P RIGHT	GRAY/WHITE		CONTROLS	9	Empty	
BLACK/YELLOW	2P TAG	Z	22	1P TAG	RED/WHITE			10	Empty	
ORANGE/GRAY	2P ACTION	a	23	1P ACTION	GREEN/BROWN	¢		11	Empty	
	NOT USED	b	24	NOT USED				12	Empty	
	NOT USED	с	25	NOT USED		e		13	Empty	
	NOT USED	d	26	NOT USED				14	Empty	
BLACK	GND	е	27	GND	BLACK			15	Ground	Black
BLACK	GND	f	28	GND	BLACK					
			1	_				_ 1	Lamp 1	Violet
	(BASE C	OLOR	LINE	COLOR)			CN2	2	Lamp 2	Blue
							ACTION	3	Lamp 3	Green
							LAMP	4	Lamp 4	Yellow
,							OUTPUTS	5	Empty	
								6	+ 12 Volts	Black

White/Violet

2

DIP SWITCH SETTINGS

DIP SWITCH NO. 1 SETTINGS

SW5 through SW8 are not used.

1. BONUS ENERGY

1

OFF

ON

OFF

ON

SW

٠

DIP SWITCH NO. 2 SETTINGS

2

OFF

ON

1. COIN 1

SW	1	2	3	4	COIN	CREDIT
•	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			3	1
-	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON			4	3
	ON				4	5

ENERGY

90

80

70

60

2. DIFFICULTY OF THE GAME

SW	6	7	DIFFICULTY
	OFF	OFF	EASY
•	ON		NORMAL
	OFF	ON	DIFFICULT
	ON		VERY DIFFICULT

3. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
	OFF	OFF
•	ON	ON

SW 1, SW2 and SW3 are not used.

DIP SWITCH NO.3 SETTINGS

1. VIDEO SCREEN FLIP

sw	1	
•	OFF	NORMAL
	ON	UPSIDE DOWN

2. CHANGE OF MODE

SW	3	MODE
•	OFF	GAME
	ON	TEST


SW2 and SW4 are not used.


Shows recommended settings

1. GREEN/YELLOW 2. BLACK 3. RED 4. BLUE 5. BROWN 6. RED/BLACK 7. BLACK/WHITE 8. WHITE 9. GREEN


10. VIOLET


11. ORANGE

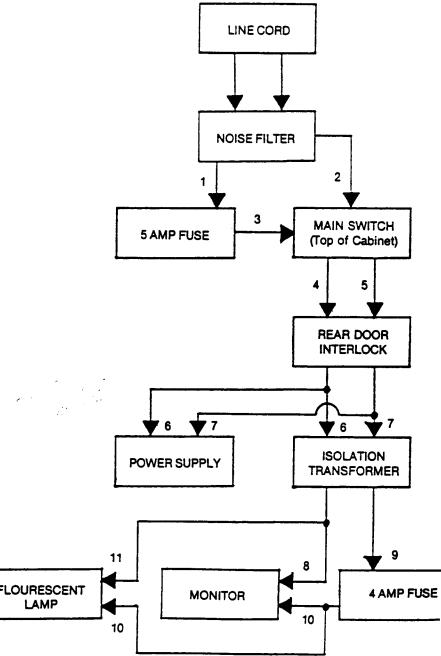


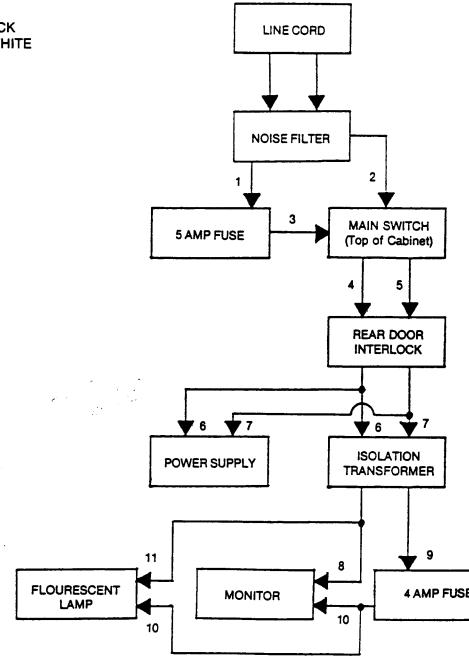



MAIN EVENT: AC FLOW CHART

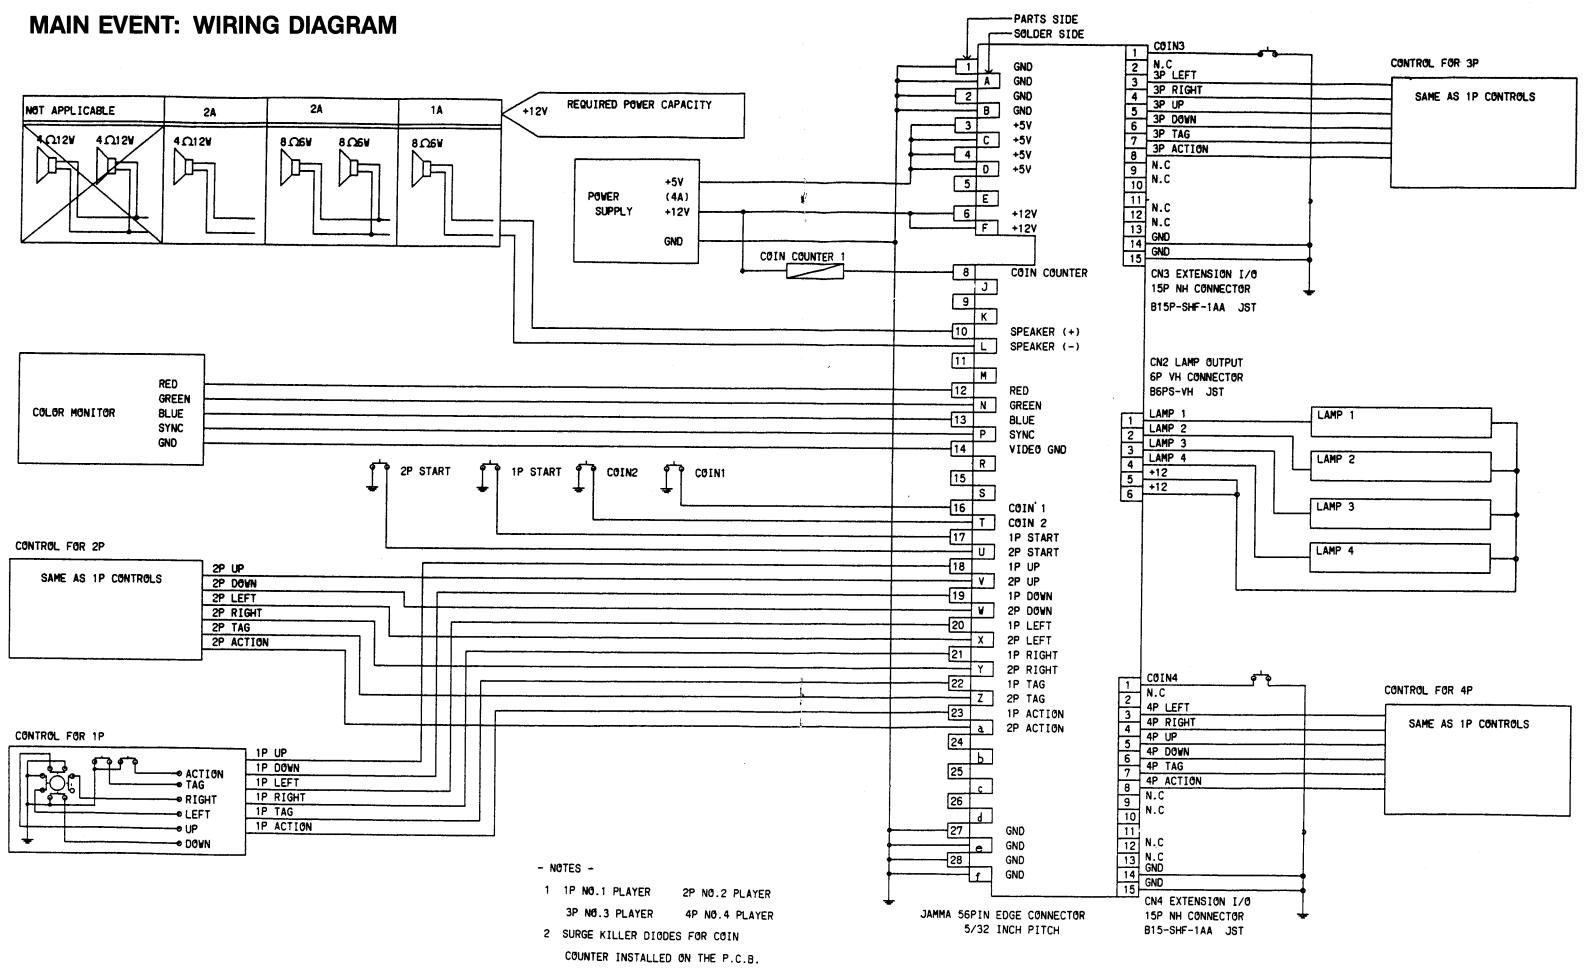

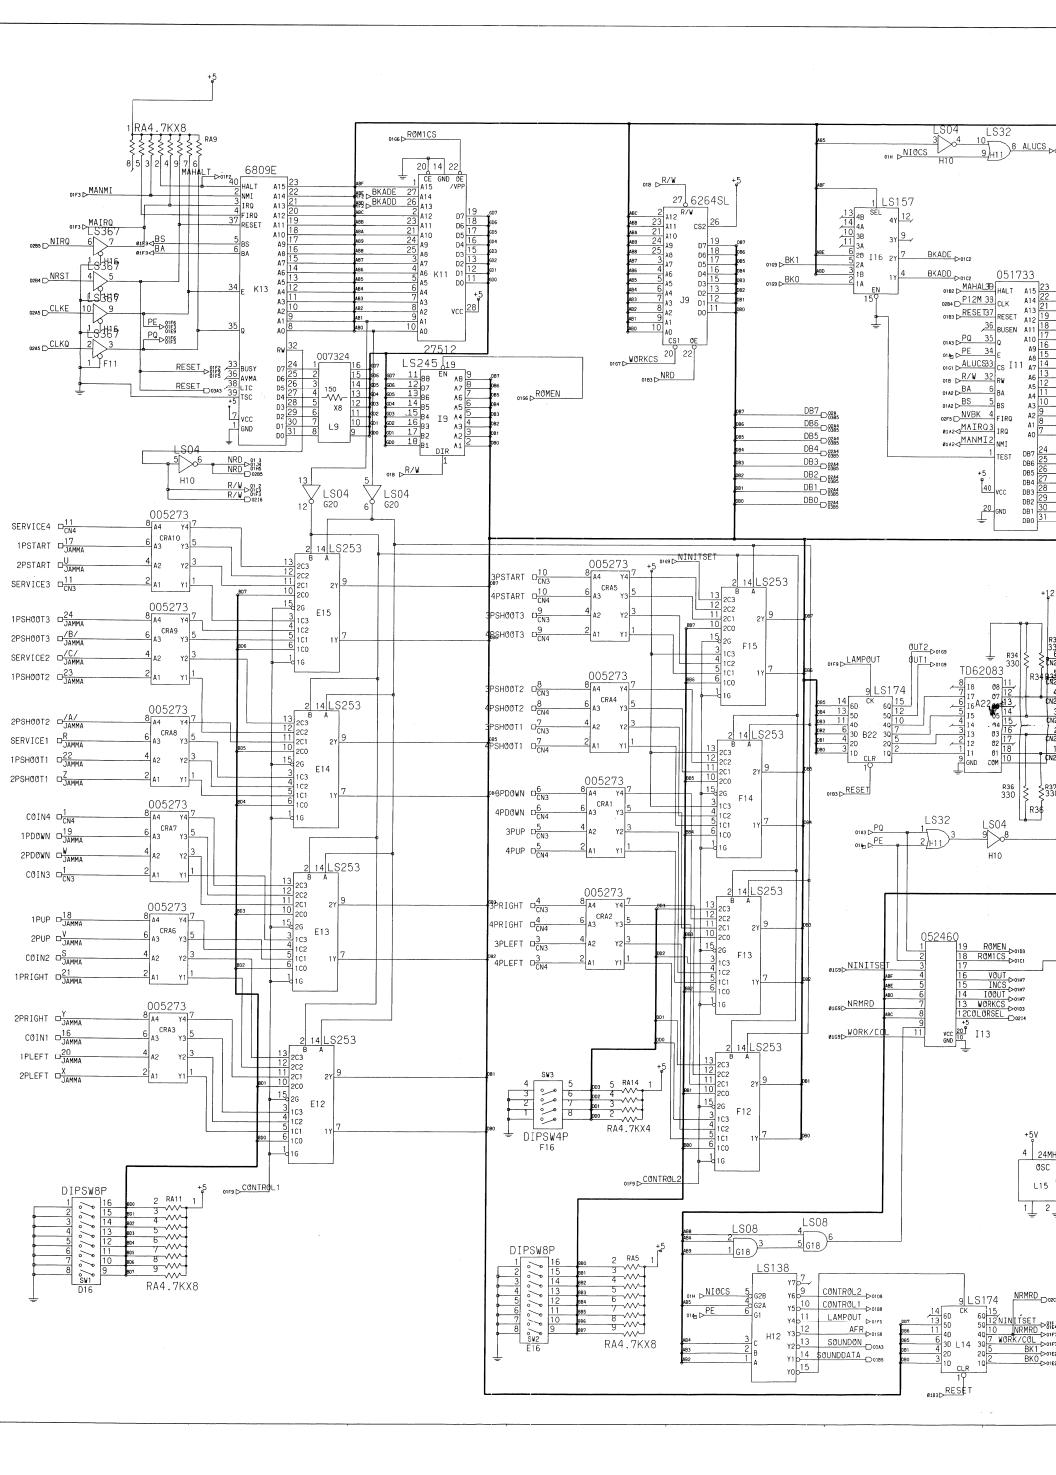

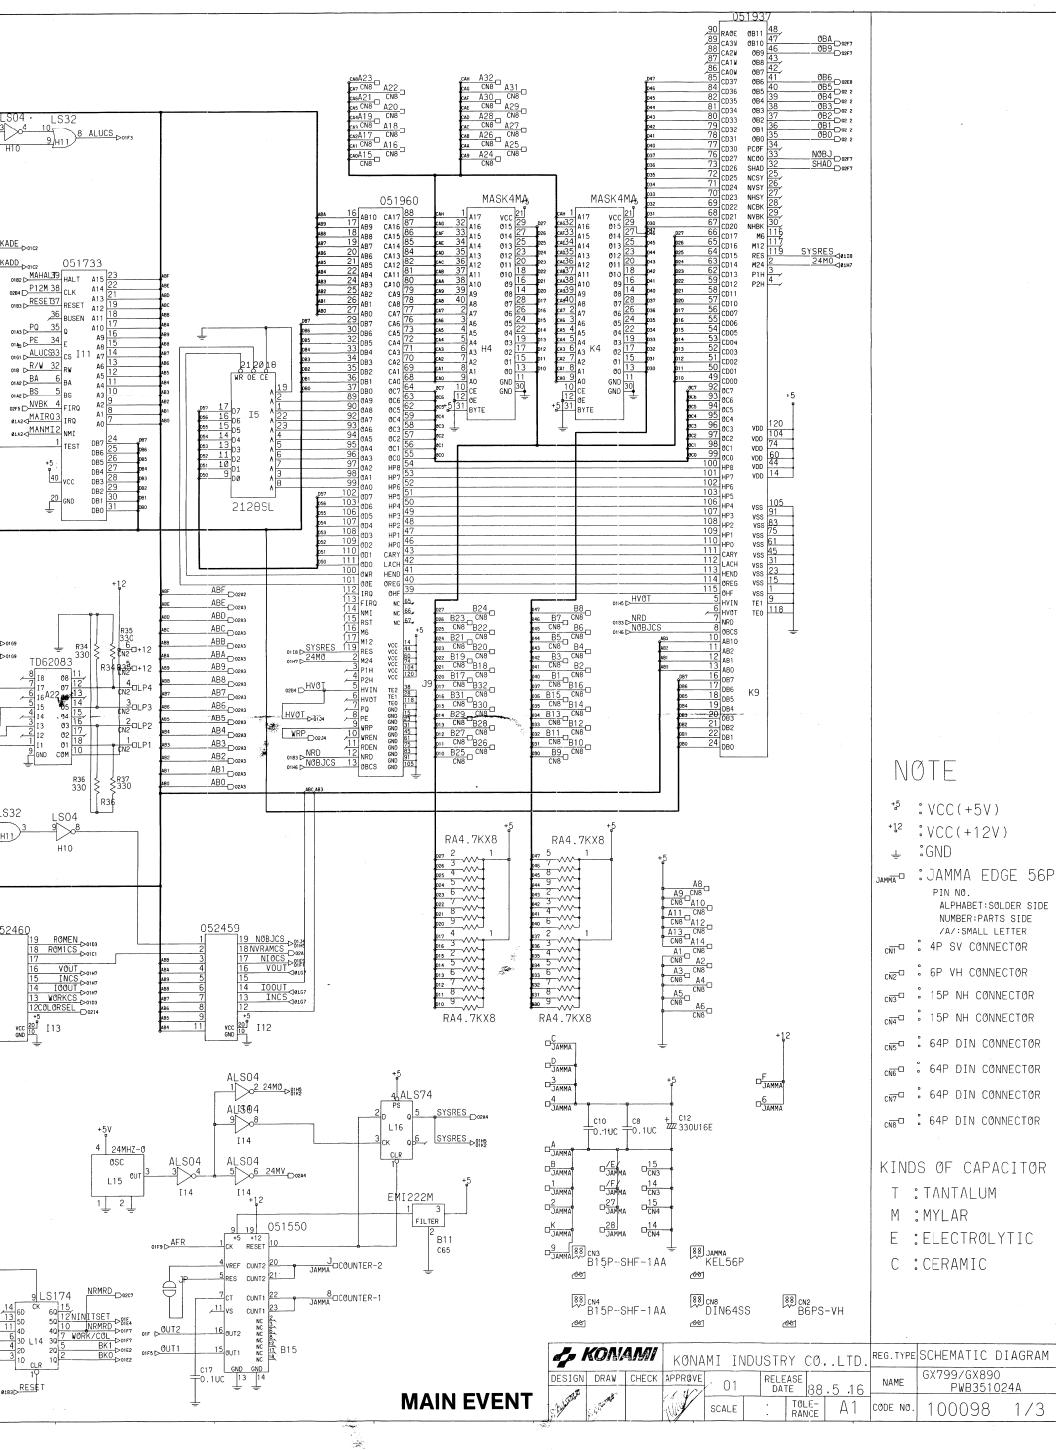

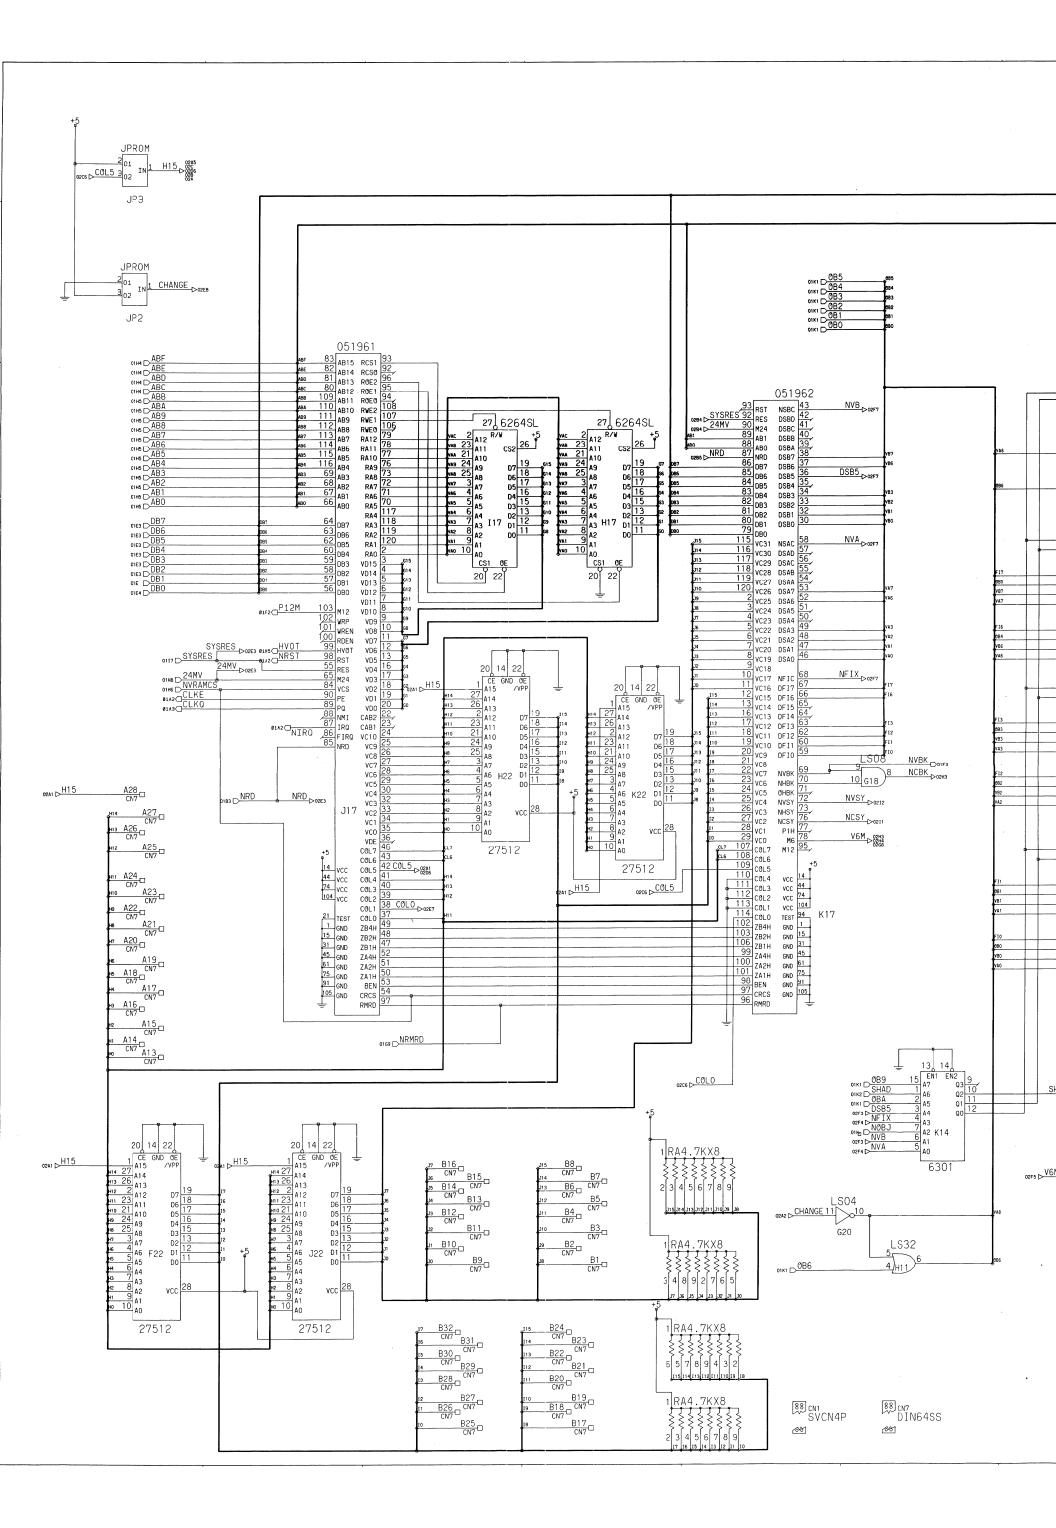

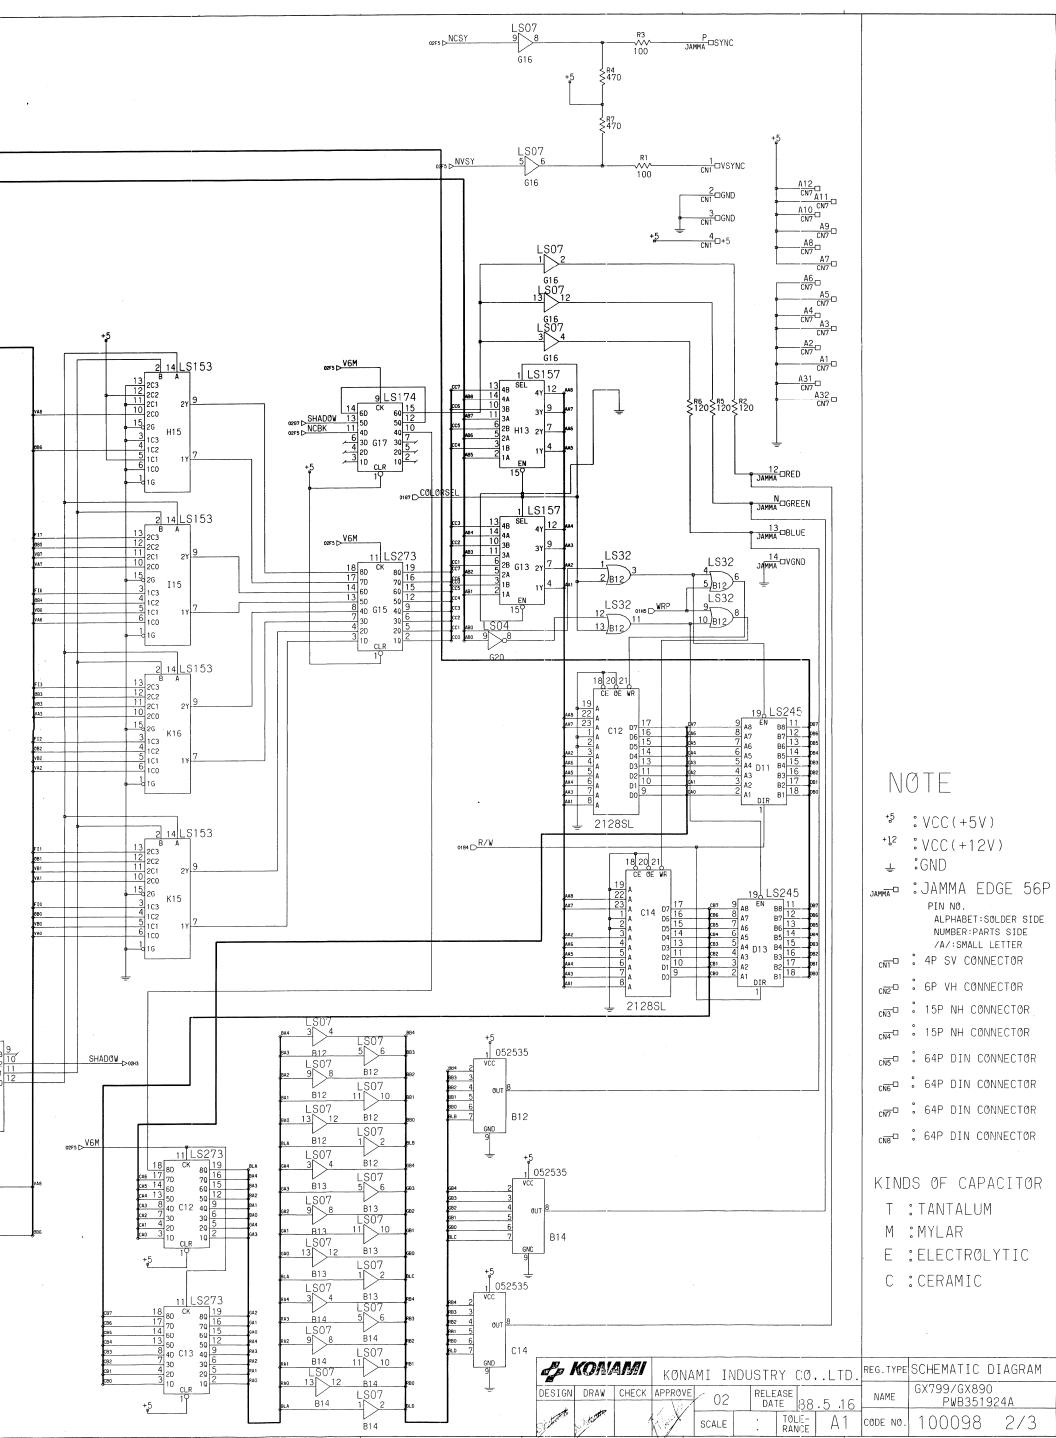

+5	0 0	VCC)(+5	5V)	
+12	0 0	VCC	:(+1	2V)	
Ŧ	。 (GND			
JAMMA	•	JAM	MΑ	EDGE	56F
		NU	PHABE MBER:	T:SØLDER PARTS SI LL LETTE	DE
CN1	0 0	4P 3	SV CO	ØNNECTØ	R
CN2□	0	6P \	/H CO	ØNNECTØ	R
CN3 [□]	0	15P	NH (CONNECT	ØR .
CN4□	0 0	15P	NH (CONNECT	ØR
CN5	0	64P	DIN	CONNEC	TØR
CN6□	0	64P	DIN	CØNNEC	TØR
	0 0	64P	DIN	CONNEC	TØR

